Self Diagnosis
Supported model

SERVICE MANUAL

BG-3R CHASSIS

MODEL	COMMANDER	DEST.	CHASSIS NO.
KV-XA21M80	RM-952	E	SCC-U53B-A
KV-XA21M83	RM-952	ME	SCC-U48D-A
KV-XA21M50	RM-952	EM	SCC-U45F-A
KV-XA21M50	RM-952	GE	SCC-U52B-A
KV-XA21M61	RM-952	EM	SCC-U45E-A
KV-XA21M61	RM-952	GE	SCC-U52C-A

MODEL	COMMANDER	DEST.	CHASSIS NO.
KV-XA21M60	RM-952	S	SCC-U49D-A
KV-XA21M80	RM-952	ME	SCC-U48C-A



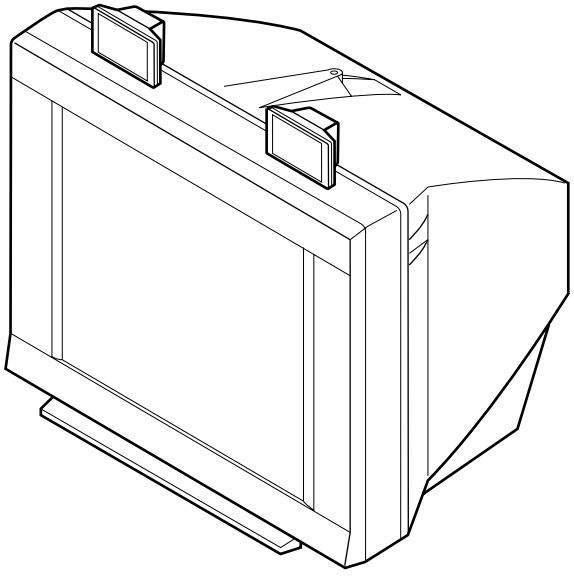

TRINITRON® COLOR TV

SONY®

SPECIFICATIONS

		Note
Power requirements	110-240 V AC, 50/60 Hz	KV-XA21M80(E)/M80(ME)/ M50(GE)/M83(ME)/M61(GE)
	220-240 V AC, 50/60 Hz	KV-XA21M61/M50(EM)/M60(S)
Power consumption (W)	Indicated on the rear of the TV	
Television system	B/G, I, D/K, M	
Color system	PAL, PAL 60, SECAM, NTSC4.43, NTSC3.58	
Stereo/Bilingual system	NICAM Stereo / Bilingual B/G, I; A2 Stereo Bilingual (German) B/G	KV-XA21M61/M60 only
Channel coverage		
B/G	VHF: E2 to E12 / UHF: E21 to E69 / CATV: S01 to S03, S1 to S41	
I	UHF: B21 to B68 / CATV: S01 to S03, S1 to S41	
D/K	VHF: C1 to C12, R1 to R12 / UHF: C13 to C57, R21 to R60 CATV: S01 to S03, S1 to S41, Z1 to Z39	
M	VHF: A2 to A13 / UHF: A14 to A79 / CATV: A-8 to A-2, A to W+4, W+6 to W+84	
┐┌ (Antenna)	75-ohm external terminal	
Audio output (Speaker)	5W + 5W	
Number of terminal		
(Video)	Input: 2* Output: 1	Phono jacks; 1 V_{P-P}, 75 ohms
♪ (Audio)	Input: 2* Output: 1	Phono jacks; 500 mVrms
(Headphones)	Output: 1	Stereo minijack
Picture tube	21 inch	
Tube size (cm)	54	Measured diagonally
Screen size (cm)	51	Measured diagonally
	60	
Dimension (w/h/d, mm)	640 x 456 x 498	
Mass (kg)	26	

Design and specifications are subject to change without notice.

CAUTION

SHORT CIRCUIT THE ANODE OF THE PICTURE TUBE AND THE ANODE CAP TO THE METAL CHASSIS, CRT SHIELD, OR CARBON PAINTED ON THE CRT, AFTER REMOVING THE ANODE.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY SHADING AND MARK ⚠ ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

TABLE OF CONTENTS

Section	Title	Page
	SELF DIAGNOSIS FUNCTION	4
1.	**GENERAL**	7
2.	**DISASSEMBLY**	
2-1.	Rear Cover Removal	25
2-2.	Speaker Removal	25
2-3.	Chassis Assy Removal	25
2-4.	F Bracket Removal	25
2-5.	J2 Board and Terminal Bracket Removal	25
2-6.	Service Position	25
2-7.	Replacement of Parts	26
2-7-1	Replacement of Light Guide	26
2-7-2	Replacement of Power Button	26
2-8.	Picture Tube Removal	26
2-9.	Removal of Anode Cap	27
3.	**SET-UP ADJUSTMENTS**	
3-1.	Beam Landing	28
3-2.	Convergence Adjustment	29
3-3.	Focus Adjustment	31
3-4.	G2 (Screen) and White Balance Adjustments	31
4.	**CIRCUIT ADJUSTMENTS**	
4-1.	Adjustments with Commander	32
4-2.	Adjustment Method	32
4-3.	Picture Quality Adjustments	37
4-4.	Deflection Adjustment	37
4-5.	A Board Adjustment After IC003 (memory) Replacement	37
4-6.	Picture Distortion Adjustment	38
5.	**DIAGRAMS**	
5-1.	Block Diagram	39
5-2.	Circuit Board Location	41
5-3.	Schematic Diagrams	42
	(1) Schematic Diagrams of F, J2 and C1 Boards	43
	(2) Schematic Diagram of A Board	45
	(3) Schematic Diagram of V1Board	61
5-4.	Voltage Measurements	65
5-5.	Waveforms	68
5-6.	Printed Wiring Boards and Parts Location	69
5-7.	Semiconductors	73
6.	**EXPLODED VIEWS**	
6-1.	Picture Tube	75
6-2.	Chassis	76
7.	**ELECTRICAL PARTS LIST**	77

SELF DIAGNOSTIC FUNCTION

The units in this manual contain a self-diagnostic function. If an error occurs, the STANDBY/TIMER lamp will automatically begin to flash.
The number of times the lamp flashes translates to a probable source of the problem. A definition of the STANDBY/TIMER lamp flash indicators is listed in the instruction manual for the user's knowledge and reference. If an error symptom cannot be reproduced, the remote commander can be used to review the failure occurrence data stored in memory to reveal past problems and how often these problems occur.

1. DIAGNOSTIC TEST INDICATORS

When an errors occurs, the STANDBY/TIMER lamp will flash a set number of times to indicate the possible cause of the problem. If there is more than one error, the lamp will identify the first of the problem areas.

Result for all of the following diagnostic items are displayed on screen. No error has occured if the screen displays a "0".

Diagnostic Item Description	No. of times STANDBY/TIMER lamp flashes	Self-diagnostic display/Diagnostic result	Probable Cause Location	Detected Symptoms
• Power does not turn on	Does not light	—	• Power cord is not plugged in. • Fuse is burned out F4601 (F)	• Power does not come on. • No power is supplied to the TV. • AC power supply is faulty.
• +B overcurrent (OCP) or overvoltage (OVP) • Vertical deflection stopped • Horizontal deflection overdrive	2 times	002:000 or 002:001~255 003:001~255 004:001~255 at the same time	• H.OUT Q511 is shorted. (A board) • IC700 is shorted (C1 board) • -13V is not supplied. (A board) • IC 503 faulty (A board)	• Power does not come on. • Load on power line is shorted. • Has entered standby state after horizontal raster. • Vertical deflection pulse is stopped. • Power line is shorted or power supply is stopped.
• White balance failure (no PICTURE)	5 times	005:000 or 005:001~225	• G2 is improperly adjusted. (Note 2) • CRT problem. • IC700 out is faulty (C1 board) • IC301 is faulty. (A board) • No connection A board to C1 board.	• No raster is generated. • CRT cathode current detection reference pulse output is small.
• Micro reset	—	101:00 or 101:001~225	• Discharge CRT (C1 Board) • Static discharge • External noise	• Power is shut down shortly, after this return back to normal. • Detect Micro latch up.

Note 1: If a + B overcurrent is detected, stoppage of the vertical deflection is detected simultaneously.
The symptom that is diagnosed first by the microcontroller is displayed on the screen.
Note 2: Refer to screen (G2) Adjustment in section 3-4 of this manual.
* IC700 out is faulty (C1 board).

2. DISPLAY OF STANDBY/TIMER LIGHT FLASH COUNT

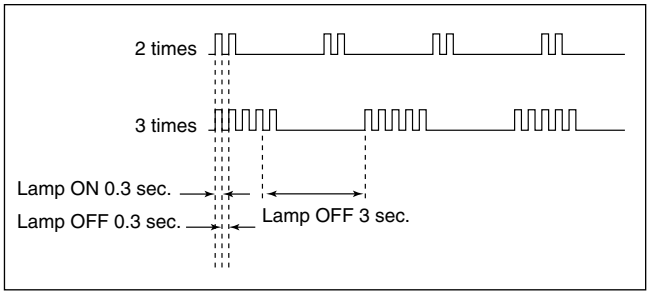

Diagnostic Item	Flash Count*
+B overcurrent/overvoltage Vertical deflection stopped	2 times
White balance failure	5 times

* One flash count is not used for self-diagnostic.

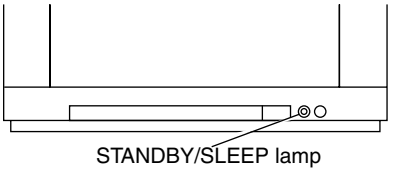

3. STOPPING THE STANDBY/TIMER FLASH

Turn off the power switch on the TV main unit or unplug the power cord from the outlet to stop the STANDBY/TIMER lamp from flashing.

4. SELF-DIAGNOSTIC SCREEN DISPLAY

For errors with symptoms such as “power sometimes shuts off” or “screen sometimes goes out” that cannot be confirmed, it is possible to bring up past occurances of failure for confirmation on the screen:

[To Bring Up Screen Test]
In standby mode, press buttons on the remote commander sequentially in rapid succession as shown below:

Screen display ➡ channel 5 ➡ Sound volume - ➡ Power ON
⇧
Note that this differs from entering the service mode (mode volume +).

Self-Diagnosis screen display

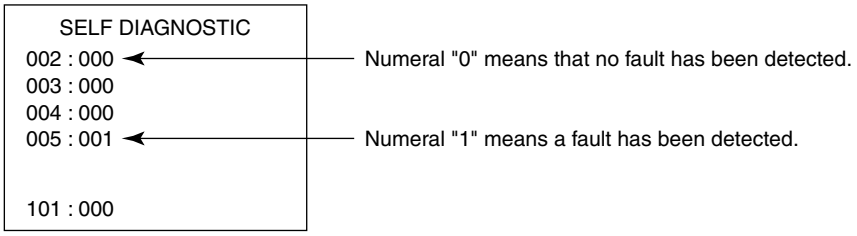
SELF DIAGNOSTIC
002 : 000
003 : 000
004 : 000
005 : 001
101 : 000
Numeral "0" means that no fault has been detected.
Numeral "1" means a fault has been detected.

5. HANDLING OF SELF-DIAGNOSTIC SCREEN DISPLAY

Since the diagnostic results displayed on the screen are not automatically cleared, always check the self-diagnostic screen during repairs. When you have completed the repairs, clear the result display to “0”.

Unless the result display is cleared to “0”, the self-diagnostic function will not be able to detect subsequent faults after completion of the repairs.

[Clearing the result display]
To clear the result display to “0”, press buttons on the remote commander sequentially as shown below when the diagnostic screen is being displayed.

Channel [8] ➡ 0

[Quitting Self-diagnostic screen]
To quit the entire self-diagnostic screen, turn off the power switch on the remote commander or the main unit.

6. SELF-DIAGNOSTIC CIRCUIT

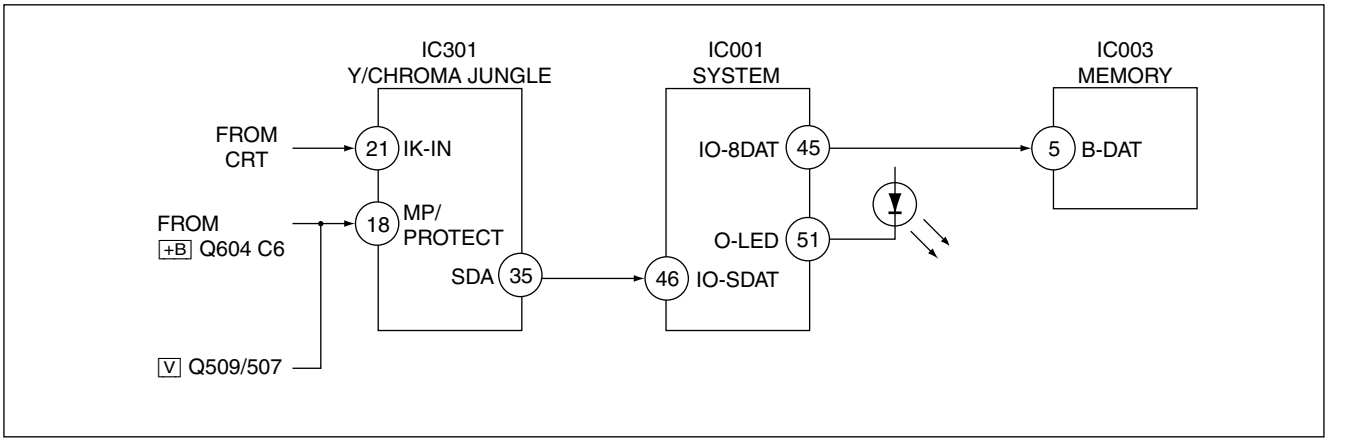

+B overcurrent (OCP)	Occurs when an overcurrent on the +B(135) line is detected by Q604. If Q604 go to ON and the voltage to pin 18 of IC301 should go down when V.SYNC is more than seven verticals in a period, the unit will automatically turn off.
Vertical deflection stopped	Occurs when an absence of the vertical deflection pulse is detected by Q509 and IC001 shut down the power supply.
Vertical deflection overcurrent	Occurs when an overcurrent on V drive line is detected by Q507. Power supply will be shut down when detect this by IC001.
White balance failure	If the RGB levels* do not balance or become low level within 5 seconds, this error will be detected by IC301. TV will stay on, but there will be no picture. * (Refers to the RGB levels of the AKB detection Ref pulse that detects IK.)

The operating instruction mentioned here are partial abstracts from the Operating Instruction Manual. The page numbers of the Operating Instruction Manual remain as in the manual.

SECTION 1
GENERAL

WARNING

- Dangerously high voltages are present inside the TV.
- Operate the TV only between 110 – 240 V AC. (KV-XA21M61(EM)/XA21M50(EM)/XA21M60(S))

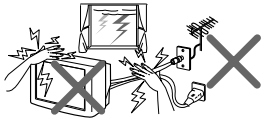

For your own safety, do not touch any part of the TV, the power cord and the antenna cable during lightning storms.

For children's safety, do not leave children alone with the TV. Do not allow children to climb onto it.

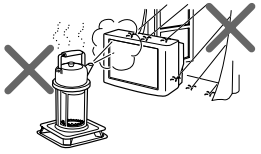

To prevent fire or shock hazard, do not expose the TV to rain or moisture.

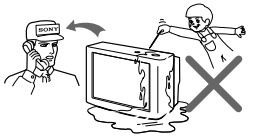

Do not operate the TV if any liquid or solid object falls into it. Have it checked immediately by qualified personnel only.

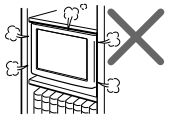

Do not block the ventilation openings of the TV. Do not install the TV in a confined space, such as a bookcase or built-in cabinet.

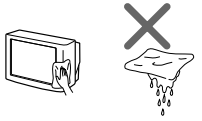

Clean the TV with a dry and soft cloth. Do not use benzine, thinner, or any other chemicals to clean the TV. Do not scratch the picture tube.



Pull the power cord out by the plug. Do not pull the power cord itself. Disconnect the TV before moving it or if you are not going to use it for several days.



Do not plug in too many appliances to the same power socket. Do not damage the power cord.

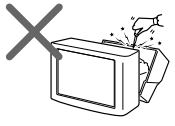

Do not open the cabinet and the rear cover of the TV as high voltages and other hazards are present inside the TV. Refer servicing and disposal of the TV to qualified personnel.

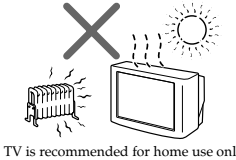

Your TV is recommended for home use only. Do not use the TV in any vehicle or where it may be subject to excessive dust, heat, moisture or vibrations.

WARNING

- Dangerously high voltages are present inside the TV.
- Operate the TV only between 220 – 240 V AC. (KV-XA21M61(EM)/XA21M50(EM)/XA21M60(S))

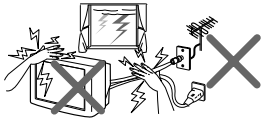

For your own safety, do not touch any part of the TV, the power cord and the antenna cable during lightning storms.

For children's safety, do not leave children alone with the TV. Do not allow children to climb onto it.

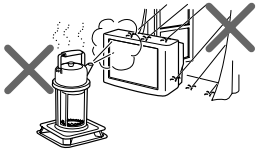

To prevent fire or shock hazard, do not expose the TV to rain or moisture.

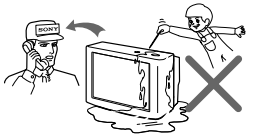

Do not operate the TV if any liquid or solid object falls into it. Have it checked immediately by qualified personnel only.

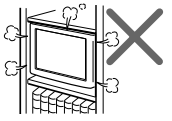

Do not block the ventilation openings of the TV. Do not install the TV in a confined space, such as a bookcase or built-in cabinet.

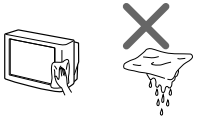

Clean the TV with a dry and soft cloth. Do not use benzine, thinner, or any other chemicals to clean the TV. Do not scratch the picture tube.

Pull the power cord out by the plug. Do not pull the power cord itself. Disconnect the TV before moving it or if you are not going to use it for several days.



Do not plug in too many appliances to the same power socket. Do not damage the power cord.

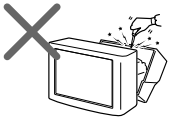

Do not open the cabinet and the rear cover of the TV as high voltages and other hazards are present inside the TV. Refer servicing and disposal of the TV to qualified personnel.

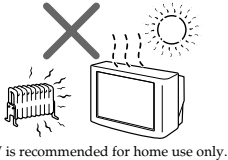

Your TV is recommended for home use only. Do not use the TV in any vehicle or where it may be subject to excessive dust, heat, moisture or vibrations.

WARNING (continued)

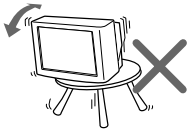

Do not install the TV in an unstable position.
Use a proper TV stand.

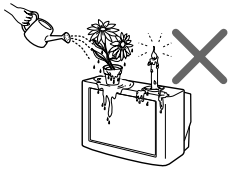

Do not place any objects on the TV.

Getting Started

Step 1

Connect the antenna

If you wish to connect a VCR, see the **Connecting a VCR** diagram below.

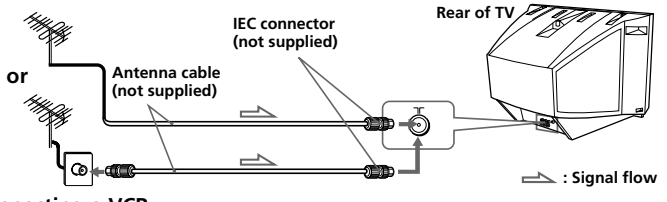

Connecting a VCR

To watch the video input, press ⊖ (see page 14).

(Not used for these models)

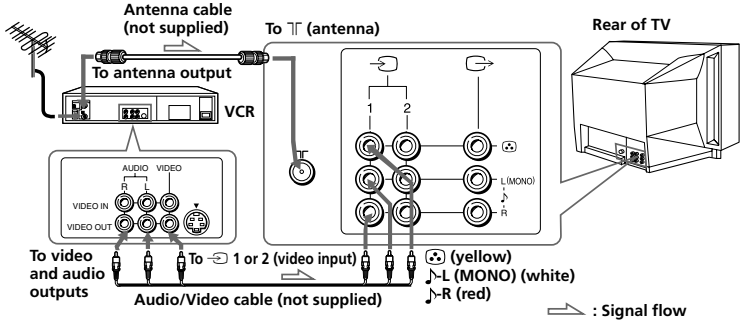

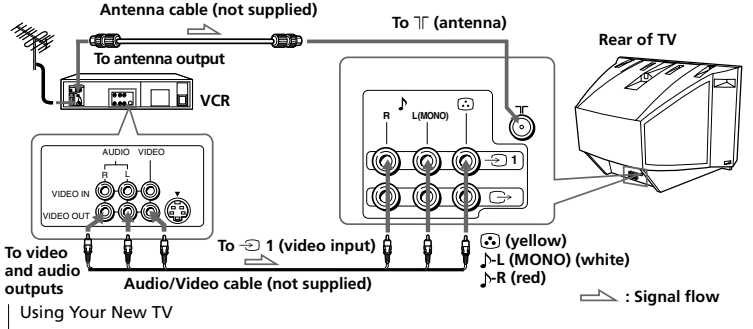

Notes

- If you connect a monaural VCR, connect the yellow plug to (the yellow jack) and the black plug to ♪-L (MONO) (the white jack).
- If you connect a VCR to the (antenna) terminal, preset the signal output from the VCR to the program number 0 on the TV.
- When no signal is input from the connected video equipment, the TV screen becomes blue.

(Not used for these models)

- Do not connect video equipment to the 2 (video input) jacks at the front and the rear of your TV at the same time; otherwise the picture will not be displayed properly on the screen.

CAUTION

- Do not connect the power cord until you have completed making all other connections; otherwise a minimum leakage current might flow through the antenna and other terminals to ground.
- To avoid battery leakage and damage to the remote, remove the batteries from the remote if you are not going to use it for several days. If any liquid that leaks from the batteries touches you, immediately wash it away with water.

Step 2

Insert the batteries into the remote



Note

- Do not use old batteries nor use different types of batteries together.

Step 3

Preset the channels automatically

Front of TV

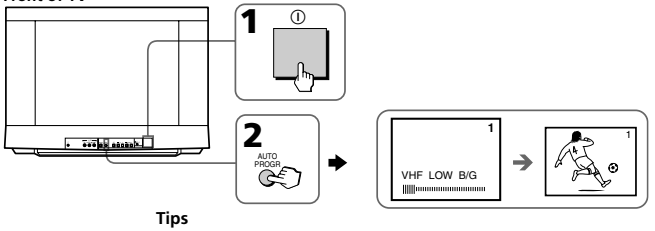

Tips

- If you want to stop automatic channel presetting, press SELECT twice.
- If your TV has preset an unwanted channel or cannot preset a particular channel, then preset your TV manually (see page 11).

Note (Except KV-XA21M61 (EM/GE))

- During automatic channel presetting, your TV screen will indicate "B/G" , "I", "D/K" or "M" for the TV system (TV SYS).

Connecting the TWEETER

(KV-XA21M83 only)

You can enjoy high quality sound by connecting the TWEETER.

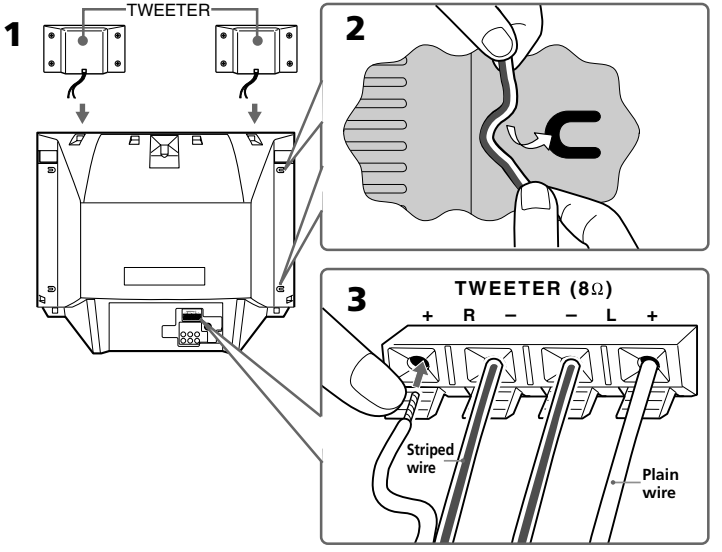

1 Place the TWEETER on top of your TV.

2 Bend the wire to hook it at the side of your TV.

3 Connect the wires to the TWEETER terminals at the rear of your TV. The plain wire should be connected to the ⊕ red terminal and the striped wire to the ⊖ black terminal.

Notes

- Connect only the supplied TWEETER; otherwise your TV may malfunction.
- Unplug your TV from the wall outlet when connecting the TWEETER.
- To prevent a malfunction caused by a short circuit of the terminals, make sure that none of the TWEETER wire strands stick out, making contact with the neighbouring TWEETER terminal.

Connecting optional components

You can connect optional audio/video components, such as a VCR, multi disc player, camcorder, video game or stereo system.

To watch the video input of the connected equipment, press ⊖ (see page 14).

Connecting a camcorder/video game equipment using the ⊖ (video input) jacks

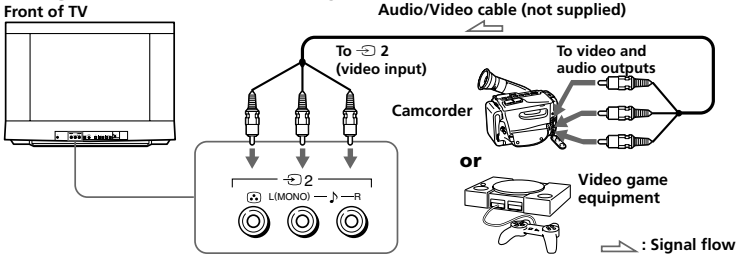

Notes

- You can also connect video equipment to the ⊖ 1 (video input) jack at the rear of your TV.

(Not used for these models)

- You can also connect video equipment to the ⊖ 1 or 2 (video input) jacks at the rear of your TV.
- Do not connect video equipment to the ⊖ 2 (video input) jacks at the front and the rear of your TV at the same time; otherwise the picture will not be displayed properly on the screen.

Connecting audio/video equipment using the ⊕ (monitor output) jacks

(Not used for these models)

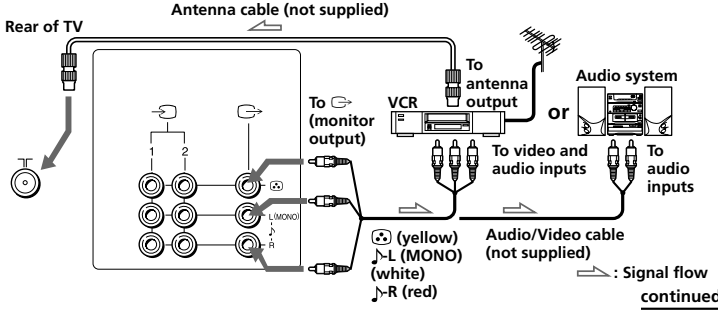

continued

Connecting optional components (continued)

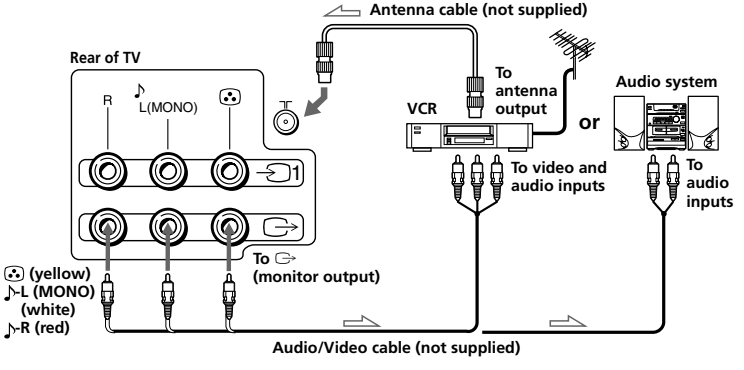

Note

- If you connect a monaural VCR, connect the yellow plug to (the yellow jack) and the black plug to L (MONO) (the white jack).

Securing the TV

To prevent the TV from falling, secure the TV using one of the following methods:

A With the supplied screws, attach the band to the TV stand and to the rear of the TV using the provided hole.

or

B Put the cord or chain through the clamps to secure the TV against a wall or pillar.

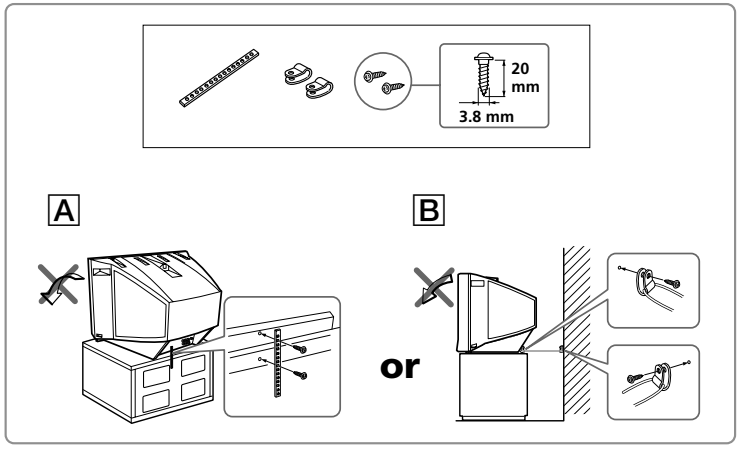

Note

- Use only the supplied screws. Use of other screws may damage the TV.

Presetting channels

You can preset up to 100 TV channels in numerical sequence from program number 1 using the remote and the buttons on your TV as well.

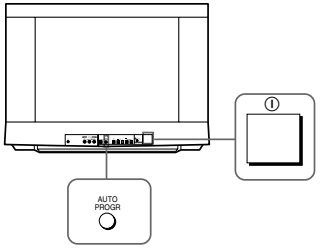

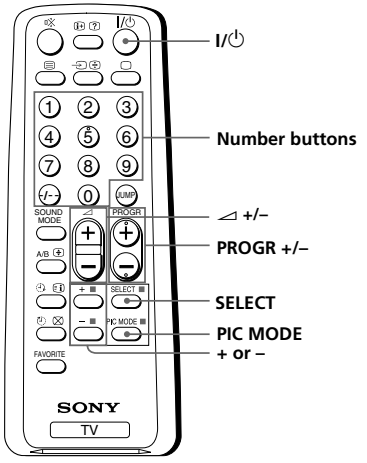

Presetting channels automatically

1 Press ⏻ to turn on the TV.

2 Press AUTO PROGR.

Note (Except KV-XA21M61 (GE), (EM))

- During automatic channel presetting, your TV screen will indicate "B/G", "I", "D/K" or "M" for the TV system (TV SYS).

To preset channels automatically from a specified program number

(1) Press SELECT until "AUTO PROGRAM" appears.

(2) Press + or –.
The on-screen display will start flashing.

(3) Press PROGR +/– or the number buttons until the desired program number appears.

(4) Press + or –.

KV-XA21M80/XA21M83/XA21M50/
KV-XA21M61/XA21M60
RM-952

Presetting channels manually

1 Press SELECT until "MANUAL PROGRAM" appears.

2 Press + or –.

3 Press PROGR +/– or the number buttons until the desired program number appears.

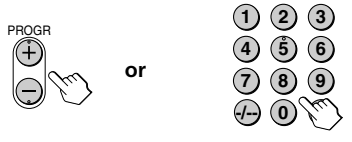

4 Press + or – until the desired channel picture appears.

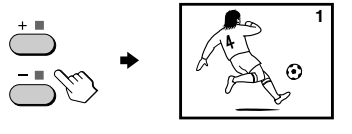

5 Press SELECT.

Note

- If you preset a locked program number, that particular program number will be unlocked automatically (page 20).

To change the TV system setting

If the picture or sound is abnormal when receiving programs through the ⅂ (antenna) terminal

(1) Press SELECT until "TV SYS" appears.



(2) Press + or – to select the appropriate TV system until the picture or sound quality is optimal.



continued

Presetting channels (continued)

To change the color system setting

If the color is abnormal when receiving programs through the ⅂ (antenna) terminal or the ⇦ (video input) jack.

(1) Press SELECT until "COLOR SYS" appears.

(2) Press + or – to select the appropriate color system until the color is optimal.

Tip

- Normally set "COLOR SYS" to "AUTO".

Skipping program numbers

1 Press PROGR +/– or the number buttons until the unused or unwanted program number appears.

2 Press SELECT until "MANUAL PROGRAM" appears.

3 Press + or –.

4 Press PIC MODE.

5 Press SELECT.

To restore the skipped program number again

Preset the channel automatically or manually.

Tip

- You can also use SELECT and ◿ +/– on the TV to preset channels and skip program numbers.

To use the fine tuning (FINE) function

The fine tuning (FINE) function may help to reduce the following problems: incomplete Teletext display (KV-XA21M61 (GE), (EM) only), double images and lines moving across the TV screen.

You can use the fine tuning function as below:

(1) Select the program number you want to adjust.
(2) Press SELECT until "MANUAL PROGRAM" appears on the screen.
(3) Press + or – on the remote control once.
(4) Press ⓘ to display "FINE" on the screen.
(5) Press + or – continuously until the above problems are minimized. The + or – icon on the screen flashes while tuning.
(6) Press SELECT to return to normal screen.

Watching the TV

This section explains functions used while watching the TV. Most operations can be done using the remote.

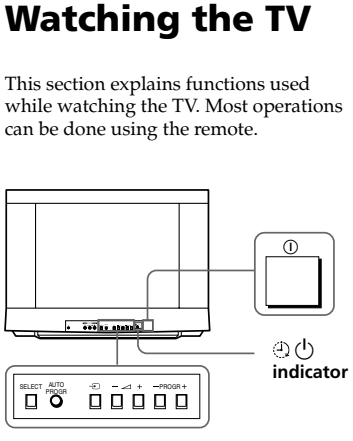

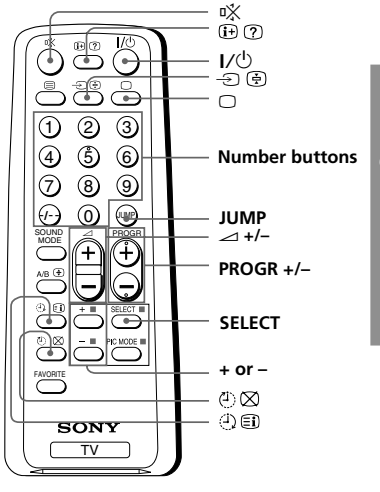

1 Press ⏻ to turn on the TV.

When the TV is in the standby mode (the ⏻ indicator on the TV is lit red), press I/⏻ on the remote or PROGR +/– on the TV.

2 Press PROGR +/– or the number buttons to select the program number.

For double digit numbers, press -/--, then the number (e.g., for 25, press -/--, then 2 and 5).

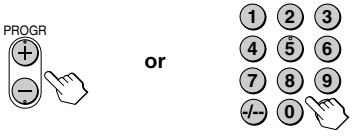

3 Press +/– to adjust the volume.

continued

Additional tasks

To	Press
Turn off temporarily	I/⏻. The ⏻ indicator on the TV lights up red.
Turn off completely	⏻ on the TV.
Mute the sound	🔇.
Watch the video input (VCR, camcorder, etc.)	⏎ to select "VIDEO 1" or "VIDEO 2". To return to the TV program, press 🖵.
Jump back to the previous program number	JUMP.
Display the on-screen information*	ⓘ.
Adjust the volume of all program numbers automatically	SELECT repeatedly until "INTELLIGENT VOL" appears, then press + or – to select "ON". To cancel, select "OFF".
Adjust the picture position when it is not aligned to the TV screen (Not used for these models)	SELECT repeatedly until "PIC ROTATION" appears, then press + or – to adjust the alignment of the picture position. PIC ROTATION ⊟↓🖵↓⊟ The ↓⊞ or ⊟↓ icon on the screen flashes while adjusting.

* The picture, sound, and either the program number or video input are displayed. The on-screen display for the picture and sound information disappears after about three seconds.

Changing the on-screen display language

(KV-XA21M83 (ME), XA21M80(ME))

1 Press SELECT until "LANGUAGE / اللغة : ENGLISH" appears on the screen.

2 Press + or – to select "عربي".

Tip

- You can also use SELECT and +/– on the TV to select the on-screen display language.

Watching the TV (continued)

Additional tasks

To	Press
Turn off temporarily	I/⏻. The ⏻ indicator on the TV lights up red.
Turn off completely	⏻ on the TV.
Mute the sound	🔇.
Watch the video input (VCR, camcorder, etc.)	⏎ to select "VIDEO 1" or "VIDEO 2". To return to the TV program, press ▭.
Jump back to the previous program number	JUMP.
Display the on-screen information*	ⓘ.
Adjust the volume of all program numbers automatically	SELECT repeatedly until "INTELLIGENT VOL" appears, then press + or – to select "ON". To cancel, select "OFF".
Adjust the picture position when it is not aligned to the TV screen *(KV-XG29M50/XA21M93 /XA21M61 only)*	SELECT repeatedly until "PIC ROTATION" appears, then press + or – to adjust the alignment of the picture position.  The ⤵⊞ or ⊟⤴ icon on the screen flashes while adjusting.

* The picture, sound, and either the program number or video input are displayed. The on-screen display for the picture and sound information disappears after about three seconds.

Changing the on-screen display language
(Except KV-XA21M83/XA21M80/XA21M60 (s))

1 Press SELECT until "LANGUAGE / 语言 : ENGLISH"appears on the screen.

2 Press + or – to select "中文".

Tip

- You can also use SELECT and ◿ +/– on the TV to select the on-screen display language.

Setting the Wake Up timer

1 Press ◴ until the desired period of time appears.

The Wake Up timer starts immediately after you have set it.

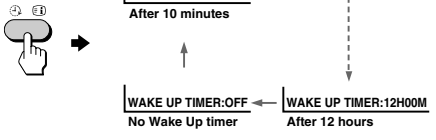

2 Select the program number or video input you want to display when you wake up.

3 Press I/⏻ or set the Sleep timer if you want the TV to turn off automatically.

The ◴ indicator on the TV lights up orange.

To cancel the Wake Up timer

Press ◴ until "WAKE UP TIMER: OFF" appears or turn off the TV's main power.

Note

- If no buttons or controls are pressed for more than two hours after the TV is turned on using the Wake Up timer, the TV automatically goes into the standby mode. To continue watching the TV, press any button or control on the TV or the remote.

Setting the Sleep timer

Press ◴ until the desired period of time appears.

The Sleep timer starts immediately after you have set it.

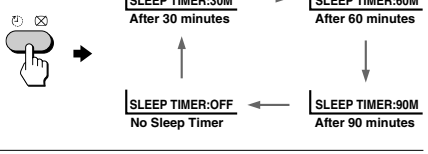

To cancel the Sleep timer

Press ◴ until "SLEEP TIMER: OFF" appears or turn the TV off.

Customizing the picture and sound

You can customize the picture and sound by selecting the picture and sound modes or by adjusting its settings.

You can change the sound effect by selecting the surround mode.

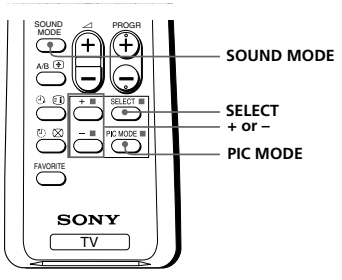

Selecting the picture and sound modes

To select the picture mode

Press PIC MODE repeatedly until you get the desired picture mode.



Select	To
"DYNAMIC"	receive high contrast pictures.
KV-XA21M93	
"SOFT"	receive mild pictures.

To select the sound mode

Press SOUND MODE repeatedly until you get the desired sound mode.

Select	To
"DYNAMIC"	listen to dynamic and clear sound that emphasizes the low and high sound.
"DRAMA"	listen to sound that emphasizes vocals and background music.
"SOFT"	receive soft sound.

Adjusting the picture and sound settings

1 Press SELECT until the desired setting appears.

Each time you press SELECT, the setting item will change as follows:



2 Press + or – to adjust the item.



3 To adjust other items, repeat steps 1 to 2.

* "HUE" can be adjusted for the NTSC system only.

Notes

- When you select a picture or sound mode, the adjusted settings will be reset according to the selected mode.
- You can also use SELECT and ◿ +/– on the TV to adjust the picture and sound settings.

continued

KV-XA21M80/XA21M83/XA21M50/
KV-XA21M61/XA21M60
RM-952

Selecting the surround mode

(Not used for these models)

1 Press SELECT repeatedly until "SURROUND" appears.



2 Press + or – to select the desired surround sound.



Select	To
"MOVIE"	listen to sound that spreads out over a large area, giving the feeling of being at a movie theatre.
"MUSIC"	listen to the sound that gives the feeling of being at a live concert.
"OFF"	turn off the surround sound.

1 Press SELECT repeatedly until "SURROUND" appears.



2 Press + or – to select "ON".

To turn off the surround mode, select "OFF" .



Viewing your favorite channels

You can display six of your favorite channels for quick and easy selection. You can program the favorite channel as well.

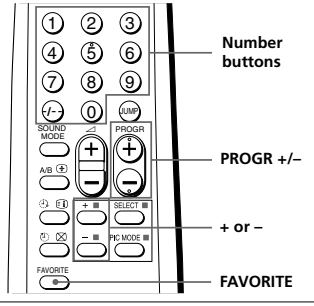

Selecting a favorite channel

1 Press FAVORITE.

2 Press the number button from 1 to 6 to select the desired favorite channel.

When you use the "FAVORITE CH" feature for the first time, six preset channels will appear.



Programming the favorite channel

1 Press PROGR +/– or number buttons to select the program number you want to program (e.g., program number 8).



2 Press SELECT until "FAVORITE CH SETUP" appears.



3 Press + or – to select the favorite channel you want to program (e.g., ③).



4 Press SELECT.

The selected favorite channel (e.g.,③) turns red for about one second.

5 To program other favorite channels, repeat steps 1 to 4.

Blocking the channels (CHILD LOCK)

You can lock some program numbers to prevent children from watching certain channels, by using the buttons on the remote control.

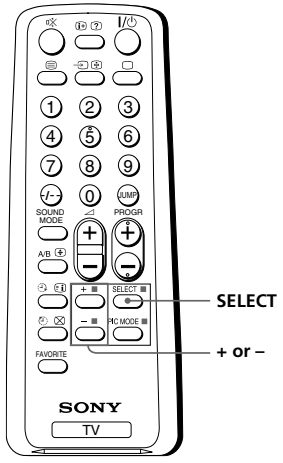

1 Select the program number you want to lock.

2 Press SELECT until "CHILD LOCK" appears on the screen.

3 Press + or – to select "ON".

The 🔒 symbol appears on the screen.

To cancel, press + or – to select "OFF". The 🔒 symbol disappears from the screen.



Note

- If you preset a locked program number, that particular program number will be unlocked automatically (page 10).

Enjoying stereo or bilingual programs

(KV-XA21M61 (EM) only)

You can enjoy stereo sound or bilingual programs of NICAM and A2 stereo systems.

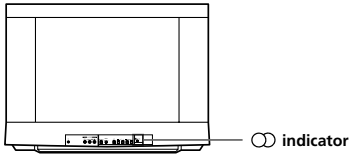

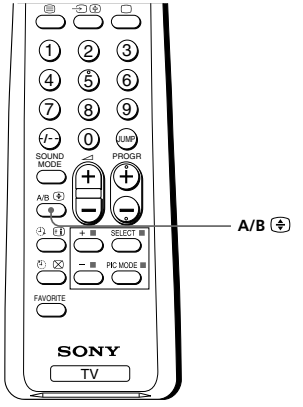

Press A/B repeatedly until you receive the sound you want.

The on-screen display changes to show the selected sound.

The ◯◯ indicator on the TV lights up red when receiving any stereo or bilingual program.

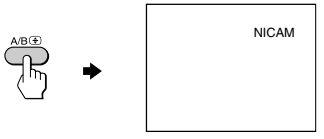

When receiving a NICAM program

Broadcasting	On-screen display (Selected sound)
NICAM stereo	NICAM (Stereo sound) → MONO (Regular sound)
NICAM bilingual	NICAM MAIN (Main sound) → NICAM SUB (Sub sound) → MONO (Regular sound)
NICAM monaural	NICAM MAIN (Main sound) → MONO (Regular sound)

continued

Enjoying stereo or bilingual programs (continued)

When receiving an A2 program

Broadcasting	On-screen display (Selected sound)
A2 stereo	MONO (Regular sound) → STEREO (Stereo sound)
A2 bilingual	MAIN (Main sound) → SUB (Sub sound)

Receiving area for NICAM and A2 programs

System	Receiving area
NICAM	Hong Kong, Singapore, New Zealand, Malaysia, Thailand, etc.
A2	Australia, Malaysia, Thailand, etc.

Notes

- If the signal is very weak, the sound becomes monaural automatically.
- If the stereo sound is noisy when receiving a NICAM program, select "MONO". The sound becomes monaural, but the noise is reduced.
- Before receiving a NICAM stereo program in China, please check the NICAM broadcast condition at your area. When receiving a NICAM stereo program, the receiving conditions might vary depending on area. In addition, different strength of the NICAM broadcast signal might affect the receiving quality.

If the sound is distorted when receiving a monaural program through the ⅂ (antenna) terminal

Press A/B repeatedly until "MONO" appears on the screen.

To cancel the monaural sound setting, press A/B again until "AUTO" appears on the screen.

MONO → AUTO

Notes

- The "MONO" or "AUTO" setting is memorized for each program number.
- You cannot receive stereo broadcast signal when the TV is in the "MONO" setting. Normally set the TV to "AUTO".

Viewing Teletext

(KV-XA21M61 (EM/GE))

TV stations broadcast an information service called Teletext via some TV channels. Teletext allows you to receive various information, such as shares market or news.

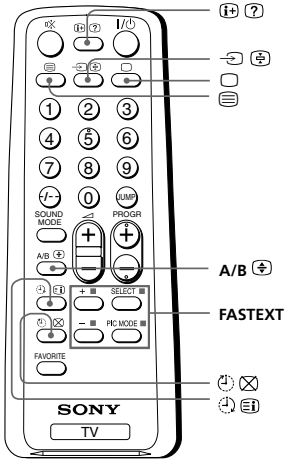

Displaying Teletext

1 Select a TV channel that carries the Teletext broadcast you want to watch.

2 Press ☰ to display the text.

A Teletext page (normally the index page) is displayed. If there is no Teletext broadcast, "100" is displayed at the top left corner of the screen.

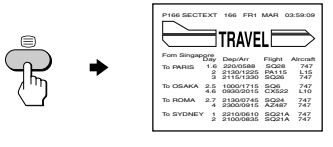

To turn off Teletext

Press ▭.

continued

Viewing Teletext (continued)

Additional Teletext tasks

To	Do this
display a Teletext page on the TV picture	Press ☰. Each time you press ☰, the screen changes as follows: Teletext → Teletext and TV → TV.
check the contents of a Teletext service	Press ⓘ. An overview of the Teletext contents and page numbers appear on the screen.
select a Teletext page	Press the number buttons to enter the three-digit page number of the desired Teletext page. * If you make a mistake, reenter the correct page number. To access the next or previous page, press PROGR +/–.
Hold (pause) a Teletext display	Press ⏸ to display the symbol " ⏸ " at the top left corner of the screen. To resume normal Teletext operation, press ⏸ or ☰.
reveal concealed information (e.g., an answer to a quiz)	Press ?. To conceal the information, press the button again.
enlarge the Teletext display	Press ⇕. Each time you press ⇕, the Teletext display changes as follows: Enlarge upper half → Enlarge lower half → Normal size.
wait for a Teletext page while watching a TV program	1 Enter the Teletext page number that you want to refer to, then press ⊠. 2 When the page number is displayed, press ☰ to show the text.

* You can also select a Teletext page that appears in the colored column at the bottom of the screen using the corresponding color-coded button on the remote.

Using FASTEXT

This feature allows you to quickly access a Teletext page that uses FASTEXT. When a FASTEXT program is broadcasted, the colored menus appear at the bottom of the screen. The colors of the menus correspond to the red ■ , green ■ , yellow ■ , and blue ■ color-coded buttons on the remote.

To access a FASTEXT menu

Press the color-coded button on the remote corresponding to the menu you want. The menu page appears on the screen after several seconds.

Self-diagnosis function

(Except KV-XA21M50/XA21M61/XA21M60 (S))

Your TV is equipped with a self-diagnosis function. If there is a problem with your TV, the ⏻ indicator flashes red. The number of times the ⏻ indicator flashes indicates the possible causes.

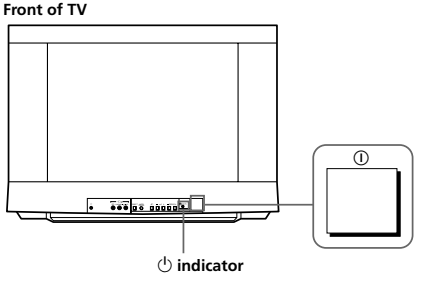

1 Check that the ⏻ indicator flashes red a number of times between 3-second intervals.

2 Count the number of times the ⏻ indicator flashes.

3 Press ⏻ (main power) to turn off your TV.

4 Inform your nearest Sony service center about the number of times the ⏻ indicator flashes.
Be sure to note the model name and serial number located on the rear of your TV.

KV-XA21M80/XA21M83/XA21M50/
KV-XA21M61/XA21M60
RM-952

Troubleshooting Shortcuts

(KV-XA21M50 (EM)/XA21M61 (EM))

For better viewing, please check the following connections.

Antenna connection

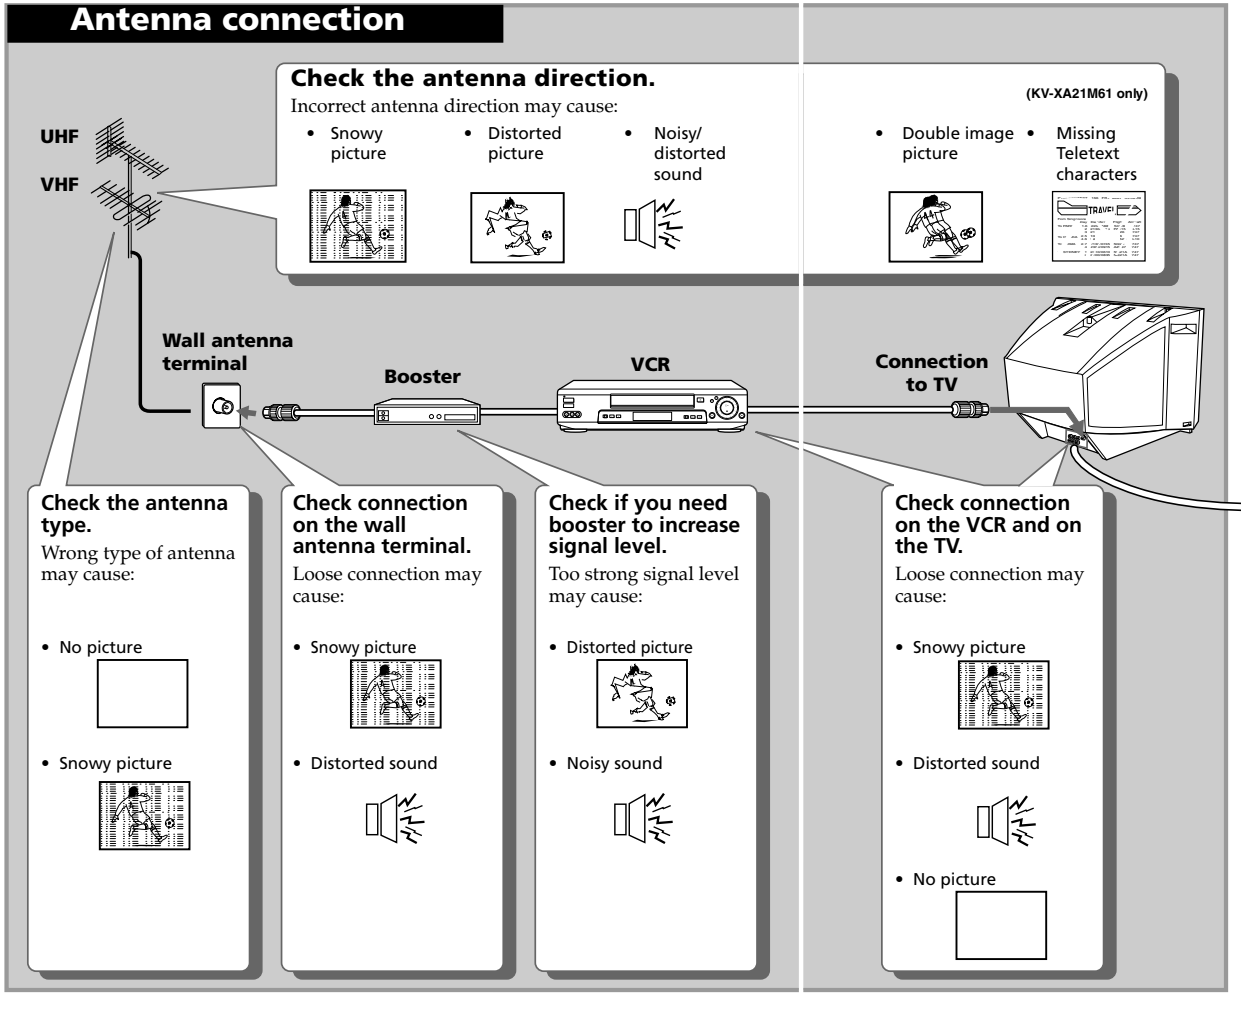

Check the antenna direction.

Incorrect antenna direction may cause:

- Snowy picture
- Distorted picture
- Noisy/ distorted sound

(KV-XA21M61 only)

- Double image picture
- Missing Teletext characters

Check the antenna type.

Wrong type of antenna may cause:

- No picture
- Snowy picture

Check connection on the wall antenna terminal.

Loose connection may cause:

- Snowy picture
- Distorted sound

Check if you need booster to increase signal level.

Too strong signal level may cause:

- Distorted picture
- Noisy sound

Check connection on the VCR and on the TV.

Loose connection may cause:

- Snowy picture
- Distorted sound
- No picture

AC Connection

Check connection on the AC socket.

Loose connection may cause:

- no power
- no picture with no sound

For more information, please see **Troubleshooting** on page 26 or consult your dealer for guidance.

Troubleshooting

(KV-XA21M83 (ME)/XA21M80 (ME)/XA21M60)

If you find any problem while viewing your TV, please check the following guide. If any problem persists, contact your Sony dealer .

Symptom	Possible cause	Solutions	Page
Snowy picture  **Noisy sound**	• Connection is loose or the cable is damaged.	• Check the antenna cable and connection on the TV, VCR and on the wall.	4
	• Channel presetting is inappropriate or incomplete.	• Press SELECT until "MANUAL PROGRAM" appears on the screen, then preset the channel again.	11
	• The antenna type is inappropriate.	• Check the antenna type (VHF/UHF). Contact a Sony dealer for advice.	–
	• The antenna direction is inappropriate.	• Adjust the antenna direction. Contact a Sony dealer for advice.	–
	• Signal transmission is low.	• Try using a booster.	–
Distorted picture **Noisy sound**	• Broadcast signals are too strong.	• Turn off or disconnect the booster if it is in use.	–
Good picture **Noisy sound**	• The TV system setting or channel presetting is inappropriate or incomplete.	• If the sound of some channels are noisy, select the channel, then select the appropriate TV system (TV SYS).	11
No picture  **No sound** 	• The power cord, antenna or VCR is not connected.	• Check the power cord, antenna and the VCR connections.	4
	• The TV is not turned on.	• Press I/⏻ (power). • Press ⏻ (main power) on the TV to turn off the TV for about five seconds, then turn it on again.	14 13

Symptom	Possible cause	Solutions	Page
Good picture **No sound**	• The volume level is too low.	• Press + to increase the volume level.	13
	• The sound is muted.	• Press 🔇 to cancel the muting.	14
Dotted lines or stripes 	• There is local interference from cars, neon signs, hair dryers, power generators, etc.	• Do not use a hair dryer or other equipment near the TV. • Adjust the antenna direction for minimum interference. Contact a Sony dealer for advice.	– –
Double images or "ghosts"	• Broadcast signals are reflected by nearby mountains or buildings.	• Use a highly directional antenna. • Use the fine tuning (FINE) function.	– 12
	• The antenna direction is inappropriate.	• Adjust the antenna direction. Contact a Sony dealer for advice.	–
	• Use of a booster is inappropriate.	• Turn off or disconnect the booster if it is in use.	–
No color	• The color level setting is too low.	• Press SELECT until "COLOR" appears on the screen, then press + or – to adjust the color level.	17
	• The color system setting is inappropriate.	• Press SELECT until "COLOR SYS " appears on the screen, then check the color system setting (usually set this to "AUTO").	12
	• The antenna direction is inappropriate.	• Adjust the antenna direction. Contact a Sony dealer for advice.	–
Abnormal color patches	• The magnetic disturbance from external speakers or other equipment, or the direction of the earth's magnetic field may affect the TV.	• Keep external speakers or other electrical equipment away from the TV. Do not move the TV while the TV is turned on. Press ⏻ (main power) on the TV to turn off the TV for about five minutes, then turn it on again.	–

continued

Troubleshooting (continued)

Symptom	Possible cause	Solutions	Page
"100" appears on the top of the screen and there is no Teletext display. (Not used for these models)	• The channel carries no Teletext broadcast.	—	21
Teletext display is incomplete (snowy picture or double images). (Not used for these models)	• Connection is loose or the cable is damaged.	• Check the antenna cable and connection on the TV, VCR, and at the wall.	4
	• The antenna direction is inappropriate.	• Adjust the antenna direction. Contact a Sony dealer for advice.	–
	• Signal transmission is too low.	• Try using a booster. • Use the fine tuning (FINE) function.	– 12
Picture slant (Not used for these models)	• The magnetic disturbance from external speakers or other equipment, or the direction of the earth's magnetic field may affect the TV.	• Keep external speakers or other electrical equipment away from the TV. • Press SELECT until "PIC ROTATION" appears on the screen, then press + or – to align the picture to the TV screen.	– 14
Lines moving across the TV screen.	• There is interference from external sources, e.g., heavy machineries, nearby broadcast station.	• Use the fine tuning (FINE) function.	12
The ⏻ indicator on your TV flashes red a number of times between 3-second intervals.	• Your TV may need service.	• Contact your nearest Sony service center.	23
TV cabinet creaks.	• Changes in room temperature sometimes make the TV cabinet expand or contract, making a noise. This does not indicate a malfunction.	—	–
A "boom" sound is heard when the TV is turned on.	• The TV's demagnetizing function is working. This does not indicate a malfunction.	—	–

Troubleshooting

(KV-XA21M83 (E)/XA21M50 (GE)/XA21M61 (GE))

If you find any problem while viewing your TV, please check the following guide. If any problem persists, contact your Sony dealer.

Symptom	Possible cause	Solutions	Page
Snowy picture	• Connection is loose or the cable is damaged.	• Check the antenna cable and connection on the TV, VCR and on the wall.	4
	• Channel presetting is inappropriate or incomplete.	• Press SELECT until "MANUAL PROGRAM" appears on the screen, then preset the channel again.	11
Noisy sound	• The antenna type is inappropriate.	• Check the antenna type (VHF/UHF). Contact a Sony dealer for advice.	–
	• The antenna direction is inappropriate.	• Adjust the antenna direction. Contact a Sony dealer for advice.	–
	• Signal transmission is low.	• Try using a booster.	–
Distorted picture	• Broadcast signals are too strong.	• Turn off or disconnect the booster if it is in use.	–
Noisy sound			
Good picture	• The TV system setting or channel presetting is inappropriate or incomplete.	• If the sound of all the channels are noisy, check the TV system (TV SYS) setting, then press AUTO PROGR to preset the channels again. • If the sound of some channels are noisy, select the channel, then select the appropriate TV system (TV SYS).	10 11
Noisy sound	• The selected sound is inappropriate.	• If the sound of some channels are noisy, select the channel, then press A/B to select the main sound (KV-XA21M61 only).	21
No picture 	• The power cord, antenna or VCR is not connected.	• Check the power cord, antenna and the VCR connections.	4
	• The TV is not turned on.	• Press I/⏻ (power). • Press ⏻ (main power) on the TV to turn off the TV for about five seconds, then turn it on again.	14 13
No sound			

Symptom	Possible cause	Solutions	Page
Good picture **No sound** 	• The volume level is too low.	• Press + to increase the volume level.	13
	• The sound is muted.	• Press to cancel the muting.	14
	• Broadcast signal has a transmission problem.	• Press A/B until a better sound is heard (KV-XA21M61 only).	21
Dotted lines or stripes 	• There is local interference from cars, neon signs, hair dryers, power generators, etc.	• Do not use a hair dryer or other equipment near the TV. • Adjust the antenna direction for minimum interference. Contact a Sony dealer for advice.	– –
Double images or "ghosts" 	• Broadcast signals are reflected by nearby mountains or buildings.	• Use a highly directional antenna. • Use the fine tuning (FINE) function.	– 12
	• The antenna direction is inappropriate.	• Adjust the antenna direction. Contact a Sony dealer for advice.	–
	• Use of a booster is inappropriate.	• Turn off or disconnect the booster if it is in use.	–
No color 	• The color level setting is too low.	• Press SELECT until "COLOR" appears on the screen, then press + or – to adjust the color level.	17
	• The color system setting is inappropriate.	• Press SELECT until "COLOR SYS " appears on the screen, then check the color system setting (usually set this to "AUTO").	12
	• The antenna direction is inappropriate.	• Adjust the antenna direction. Contact a Sony dealer for advice.	–
Abnormal color patches 	• The magnetic disturbance from external speakers or other equipment, or the direction of the earth's magnetic field may affect the TV.	• Keep external speakers or other electrical equipment away from the TV. Do not move the TV while the TV is turned on. Press ⏻ (main power) on the TV to turn off the TV for about five minutes, then turn it on again.	–
TV cannot receive stereo broadcast signal (KV-XA21M61 only)	• The stereo reception setting is inappropriate.	• Press A/B until "AUTO" appears on the screen.	21

continued

Troubleshooting (continued)

Symptom	Possible cause	Solutions	Page
Stereo broadcast sound switches on and off or is distorted. **or** **The sound switches between monaural and stereo frequently. (KV-XA21M61 only)**	• Connection is loose or the cable is damaged.	• Check the antenna cable and connection on the TV, VCR and on the wall.	4
	• The antenna direction is inappropriate.	• Adjust the antenna direction. Contact a Sony dealer for advice.	–
	• Broadcast signal has a transmission problem.	• Press A/B until a better sound is heard.	21
"100" appears on the top of the screen and there is no Teletext display. (KV-XA21M61 only)	• The channel carries no Teletext broadcast.	—	23
Teletext display is incomplete (snowy picture or double images). (KV-XA21M61 only)	• Connection is loose or the cable is damaged.	• Check the antenna cable and connection on the TV, VCR, and at the wall.	4
	• The antenna direction is inappropriate.	• Adjust the antenna direction. Contact a Sony dealer for advice.	–
	• Signal transmission is too low.	• Try using a booster. • Use the fine tuning (FINE) function.	– 12
Picture slant (KV-XA21M61 only) 	• The magnetic disturbance from external speakers or other equipment, or the direction of the earth's magnetic field may affect the TV.	• Keep external speakers or other electrical equipment away from the TV. • Press SELECT until "PIC ROTATION" appears on the screen, then press + or – to align the picture to the TV screen.	– 14
Lines moving across the TV screen.	• There is interference from external sources, e.g., heavy machineries, nearby broadcast station.	• Use the fine tuning (FINE) function.	12
The ⏻ indicator on your TV flashes red a number of times between 3-second intervals.	• Your TV may need service.	• Contact your nearest Sony service center.	25
TV cabinet creaks.	• Changes in room temperature sometimes make the TV cabinet expand or contract, making a noise. This does not indicate a malfunction.	—	–
A "boom" sound is heard when the TV is turned on.	• The TV's demagnetizing function is working. This does not indicate a malfunction.	—	–

Overview of controls

TV front panel

(Not used for these models)

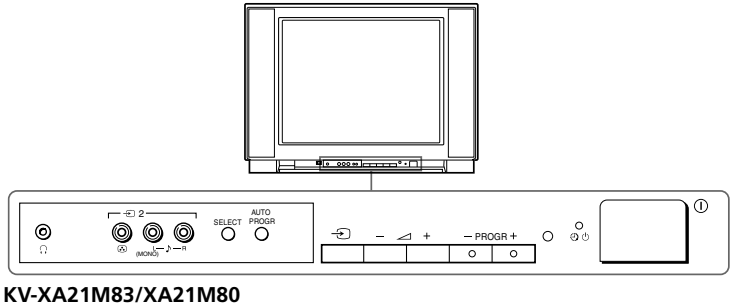

KV-XA21M83/XA21M80

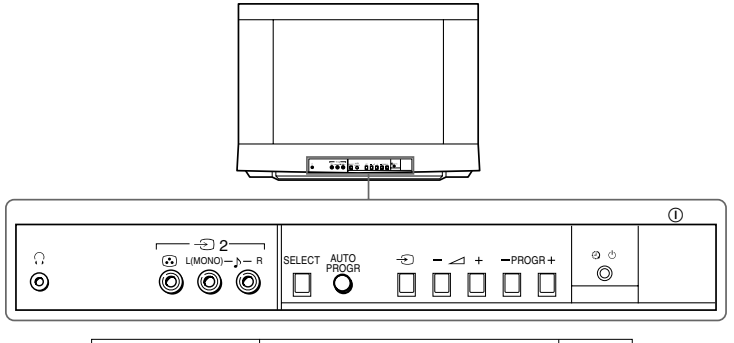

Button	Function	Page
AUTO PROGR	Preset channels automatically.	5
SELECT	Select the desired item.	12
PROGR +/–	Select program number.	13
⏻	Turn off completely or turn on the TV.	13
◿ +/–	Adjust volume.	13
⏻	Standby indicator.	13
⏎	Select TV or video input.	14
🕘	Wake Up indicator.	15
🎧	Headphone jack.	–

continued

Remote Control

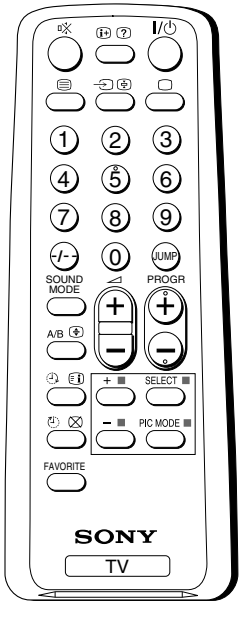

The names/symbols of buttons on the remote are indicated in different colors to represent the available functions.

Label color	Button function
White	For general TV operations
Green	For Teletext operations

Button	Function	Page
SELECT	Select the desired item.	11
+/–	Adjust value.	11
PROGR +/–	Select program number.	13
0 – 9, -/--	Input numbers.	13
◿ +/–	Adjust volume.	13
I/⏻	Turn off temporarily or turn on the TV.	13
⏎	Select TV or video input.	14
▢	Display the TV program.	14
🔇	Mute the sound.	14
i+	Display on-screen information.	14
JUMP	Jump to previous program number.	14
Timer operations		
🕘	Set TV to turn on automatically.	15
🕘	Set TV to turn off automatically.	15
PIC MODE	Select picture mode.	16
SOUND MODE	Select sound mode.	16
FAVORITE	Display favorite channels.	19
Stereo/bilingual operations		
A/B	Select stereo/bilingual mode.	21
Teletext operations		
☰	Display Teletext broadcast.	23
i	Display Teletext service contents.	24
⊕	Stop Teletext display from scrolling.	24
?	Reveal concealed information.	24
⊕	Enlarge the Teletext display.	24
⊠	Show TV screen while waiting for Teletext page.	24
■ (red, green, yellow, blue)	Access a FASTEXT menu.	24

SECTION 2
DISASSEMBLY

2-1. REAR COVER REMOVAL

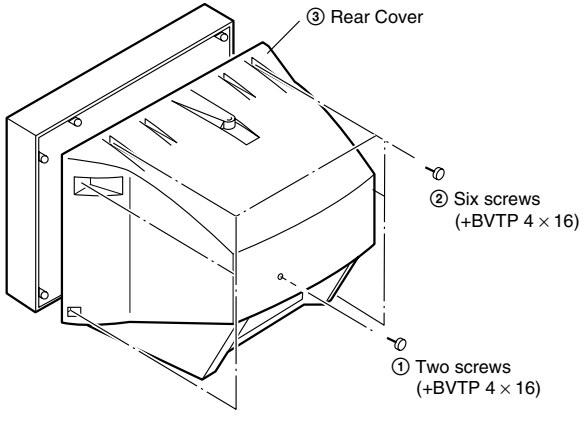

2-2. SPEAKER REMOVAL

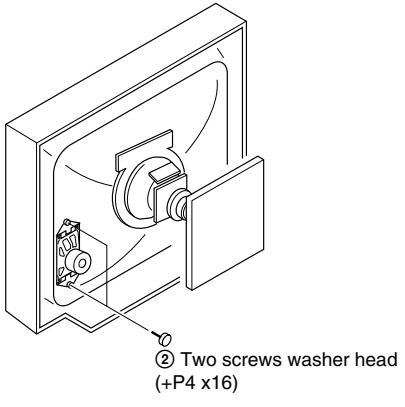

2-3. CHASSIS ASSY REMOVAL

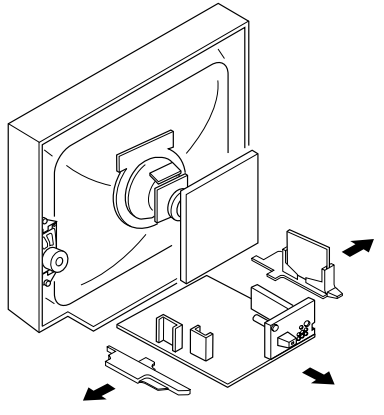

2-4. F BRACKET REMOVAL

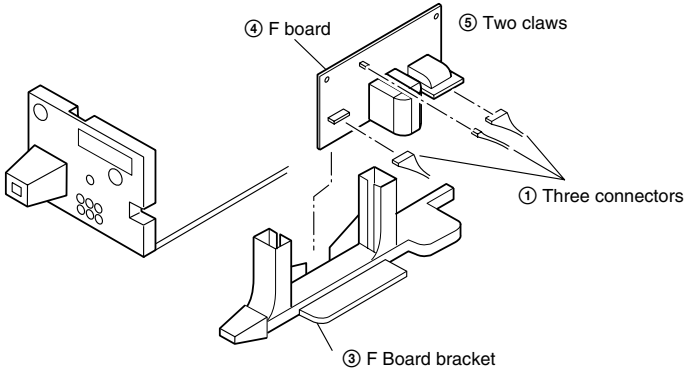

2-5. J2 BOARD AND TERMINAL BRACKET REMOVAL

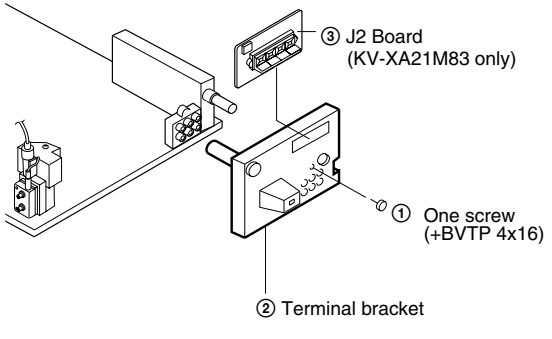

2-6. SERVICE POSITION

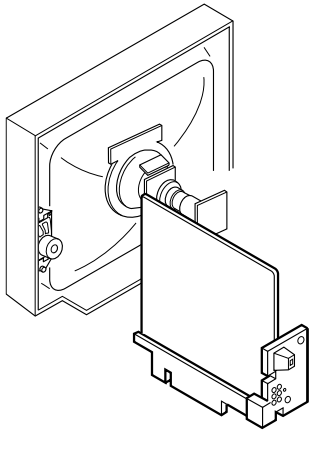

Note:

1. Disconnect the speaker connection on the right side.
2. Undress necessary wires that creates tension while placing the chassis into Service Position.

2-7. REPLACEMENT OF PARTS

For replacement of light guide,unscrew them, exchange with new parts and fix them with screws respectively.

2-7-1. Replacement of Light Guide

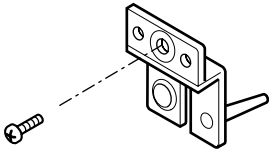

One screw
(+BVTP 3 × 12)

2-7-2. Replacement of Power Button

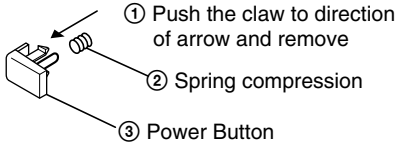

2-8. PICTURE TUBE REMOVAL

Note:

- The oicture tube for Austarlia model is upside down, and the position for the anode-cap and the tension spring are changed accordingly.
- Please remove necessary CRT support located on top left, top right, prior to removing the CRT.

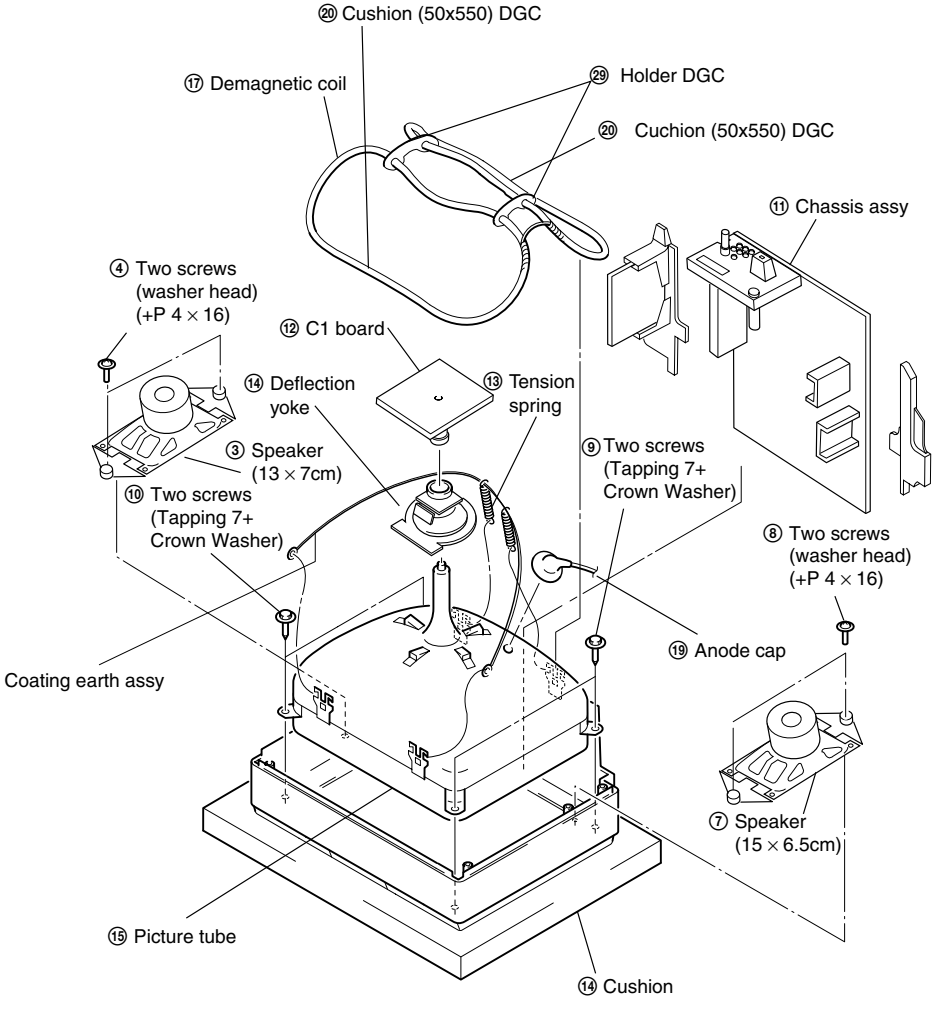
⑳ Cushion (50x550) DGC
⑰ Demagnetic coil
㉙ Holder DGC
⑳ Cuchion (50x550) DGC
⑪ Chassis assy
④ Two screws (washer head) (+P 4 × 16)
⑫ C1 board
⑭ Deflection yoke
⑬ Tension spring
③ Speaker (13 × 7cm)
⑨ Two screws (Tapping 7+ Crown Washer)
⑩ Two screws (Tapping 7+ Crown Washer)
⑧ Two screws (washer head) (+P 4 × 16)
⑲ Anode cap
Coating earth assy
⑦ Speaker (15 × 6.5cm)
⑮ Picture tube
⑭ Cushion

• REMOVAL OF ANODE-CAP

NOTE : After removing the anode, short circuit the anode of the picture tube and the anode cap to the metal chassis, CRT shield or carbon paint on the CRT.

• REMOVING PROCEDURES

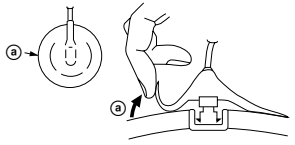

① Turn up one side of the rubber cap in the direction indicated by the arrow ⓐ.

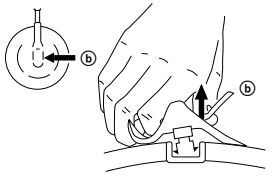

② Using a thumb pull up the rubber cap firmly in the direction indicated by the arrow ⓑ.

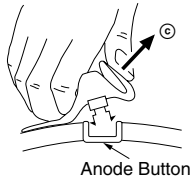

③ When one side of the rubber cap is separated from the anode button, the anode-cap can be removed by turning up the rubber cap and pulling it up in the direction of the arrow ⓒ.

• HOW TO HANDLE AN ANODE-CAP

① Do not damage the surface of anode-caps with sharp shaped objects.
② Do not press the rubber too hard so as not to damage the inside of anode-cap. A metal fitting called the shatter-hook terminal is built into the rubber.
③ Do not turn the foot of rubber over too hard. The shatter-hook terminal will stick out or damage the rubber.

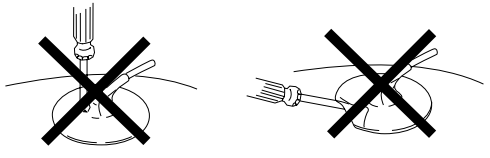

SECTION 3
SET-UP ADJUSTMENTS

- The following adjustments should be made when a complete realignment is required or a new picture tube is installed.
- These adjustments should be performed with rated power supply voltage unless otherwise noted.

Controls and switches should be set as follows unless otherwise noted:

PICTURE control ..... normal

BRIGHTNESS control ..... normal

Perform the adjustments in the following order :

1. Beam Landing
2. Convergence
3. Focus
4. White Balance

Note : Test Equipment Required.

1. Pattern Generator
2. Degausser
3. Oscilloscope

Preparation :

- In order to reduce the influence of geomagnetism on the set's picture tube, face it east or west.
- Switch on the set's power and degauss with the degausser.

3-1. BEAM LANDING

1. Input a white signal with the pattern generator.
   Contrast } normal
   Brightness }
2. Set the pattern generator raster signal to a green raster.
3. Move the deflection yoke to the rear and adjust with the purity control so that the green is at the center and the blue and the red take up equally sized areas on each side. (See Figures 4-1 through 4-4.)
4. Move the deflection yoke forward and adjust so that the entire screen is green. (See Figure 4-1.)
5. Switch the raster signal to blue, then to red and verify the condition.
6. When the position of the deflection yoke has been decided, fasten the deflection yoke with the screws and DY spacers.
7. If the beam does not land correctly in all the corners, use a magnet to adjust it. (See Figure 4-4.)

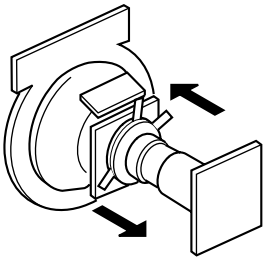

Fig. 4-1

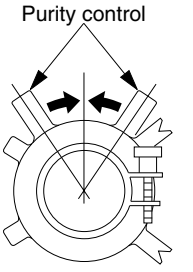

Fig. 4-2

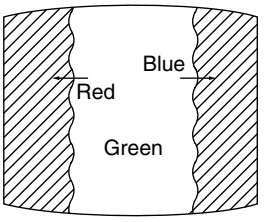

Fig. 4-3

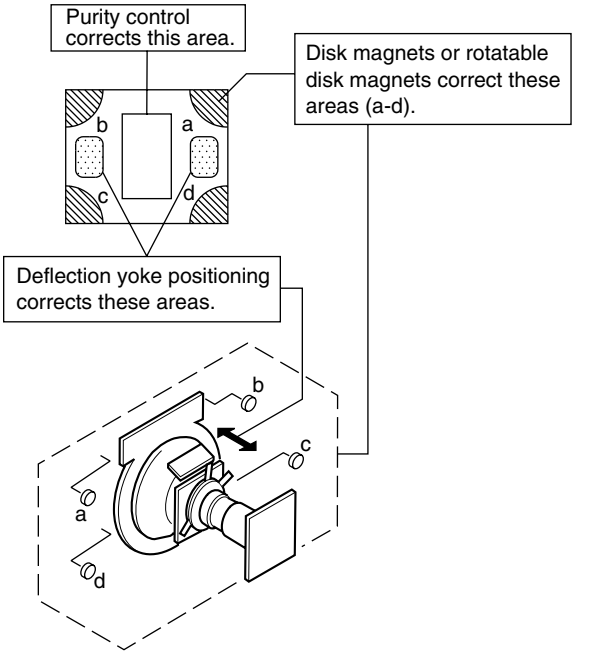

Fig. 4-4

3-2. CONVERGENCE

Preparation :

- Before starting this adjustment, adjust the focus, horizontal size and vertical size.
- Receive dot/hatch signal.
- Pic mode: Personal (Pic 90%, Brightness 50%, Col 50 %, Hue 50%, Shp 50%).

(1) Horizontal and Vertical Static Convergence

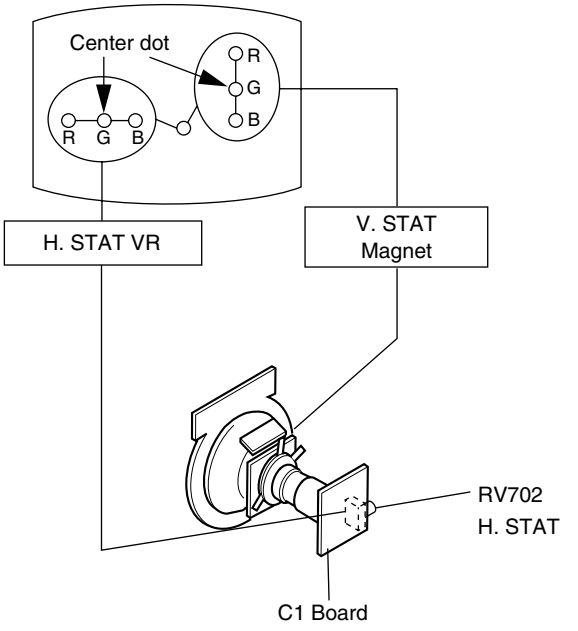

1. (Moving horizontally), adjust the H.STAT control so that the red, green and blue dots are on top of each other at the center of the screen.
2. (Moving vertically), adjust the V.STAT magnet so that the red, green and blue dots are on top of each other at the center of the screen.
3. If the H.STAT variable resistor cannot bring the red, green and blue dots together at the center of the screen, adjust the horizontal convergence with the H.STAT variable resistor and the V.STAT magnet in the manner given below.
   (In this case, the H.STAT variable resistor and the V.STAT magnet influence each other, so be sure to perform adjustments while tracking.)

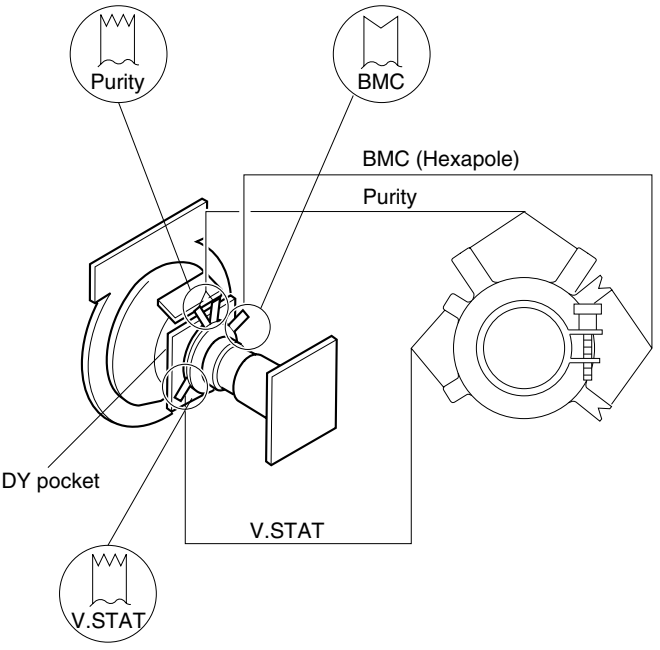

① V. STAT

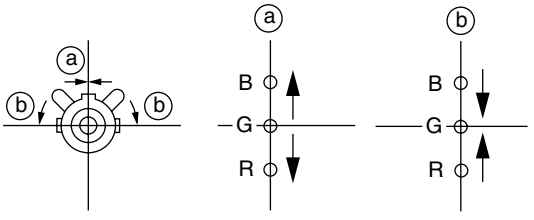

② H. STAT VR

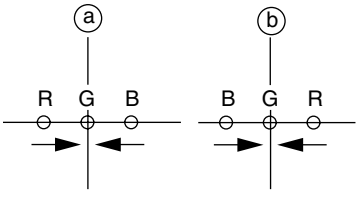

③

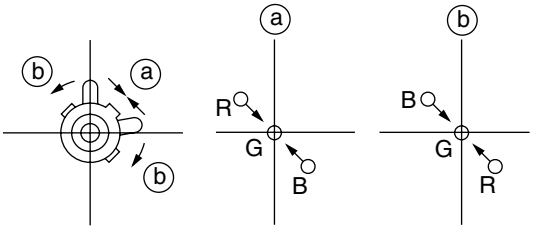

④ BMC (Hexapole) Magnet.
If the red, green and blue dots are not balanced or aligned, then use the BMC magnet to adjust in the manner described below.

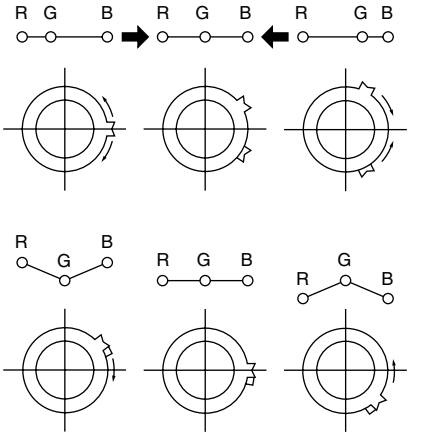

YCH	Rotate	YCH	VOL on DY
TLV	Insert	TLH	Correction Plate to DY Pocket (Left or Right)

ON DY:

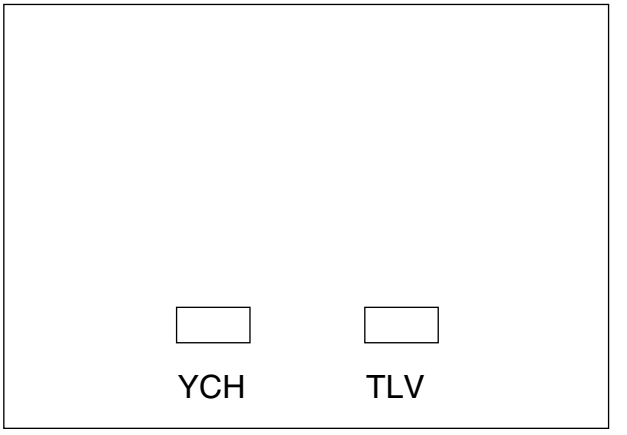

(3) Screen-corner Convergence

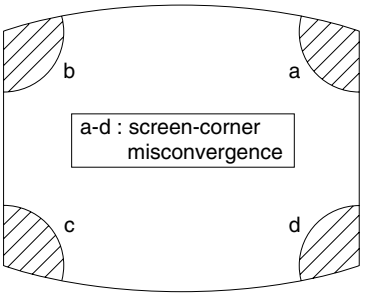

(2) Dynamic Convergence Adjustment

Preparation:

- Before starting this adjustment, adjust the horizontal static convergence and the vertical static convergence

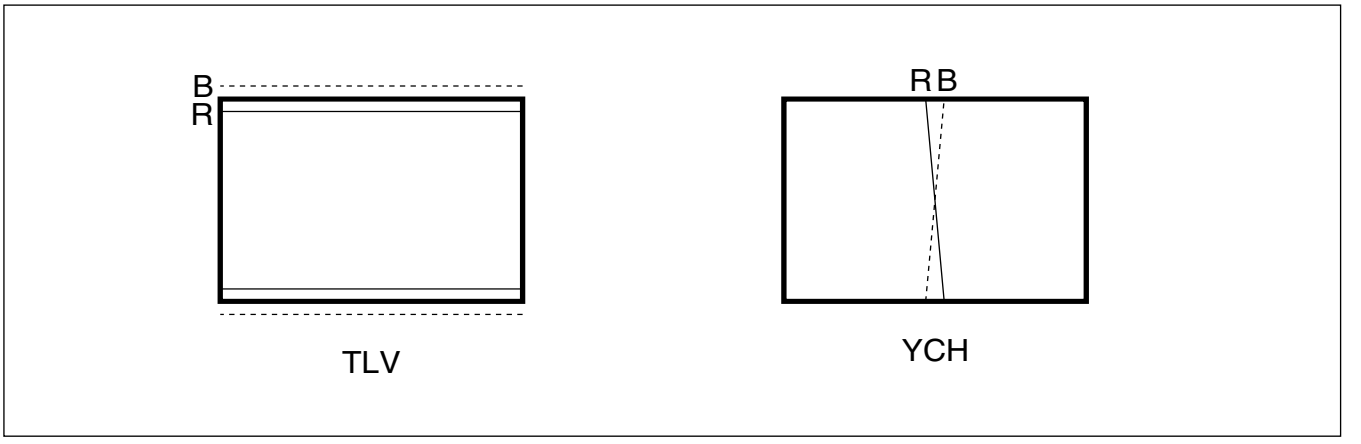

Fix a Permalloy assy corresponding to the misconverged areas.

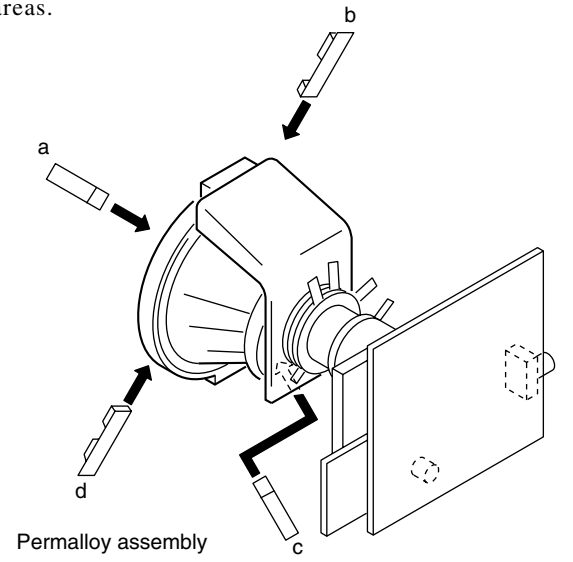

3-3. FOCUS ADJUSTMENT

FOCUS adjustment should be completed before W/B adjustment.

1. Receive digital monoscope pattern.
2. Set "Picture Mode" to "DYNAMIC".
3. Adjust focus VR so that the center of screen becomes just focus.
4. Change the receiving signal to white pattern and blue back.
5. Confirm magenta ring is not noticeable. Incase magenta is very obvious, adjust focus VR to take balance of magenta ring and focus.

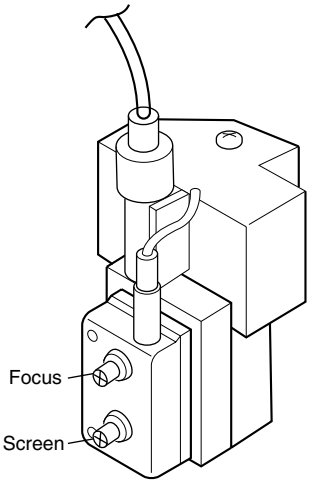

FLYBACK TRANSFORMER (T503)

3-4. G2 (SCREEN) AND WHITE BALANCE ADJUSTMENTS

1. G2 (SCREEN) ADJUSTMENT

1) Set the PICTURE to normal.
2) Put to VIDEO input mode without signals.
3) Connect R, G and B of the C1 board cathode to the oscilloscope.
4) Adjust BRIGHTNESS to obtain the cathode voltage to the value below.
5) Adjust G2 (screen) on the FBT until picture shows the point before cut off.

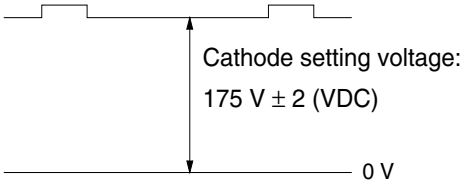

2. WHITE BALANCE ADJUSTMENT

1) Set to Service Mode (Refer Section 5-1: ADJUSTMENTS WITH COMMANDER).
2) Input white raster signal.
3) Set the PICTURE to minimum.
4) Select GCT (WHB 4) and BCT (WHB 5) with [1] and [4], and adjust the level with [3] and [6] for the best white balance.
5) Set the PICTURE to maximum.
6) Select GDR (WHB 1) and BDR (WHB 2) with [1] and [4], and adjust the level with [3] and [6] for the best white balance.
7) Write into the memory by pressing [MUTING] then [0].

3. SUB BRIGHT ADJUSTMENT

1) Set to service mode.
2) Input a staircase signal of black to white from the pattern generator.
3) BRIGHTNESS ....50%.
   PICTURE .....MINIMUM
4) Select SBR (WHB7) with [1] and [4], and adjust SBR (WHB7) level with [3] and [6] so that the second stripe from the right is dimly lit.

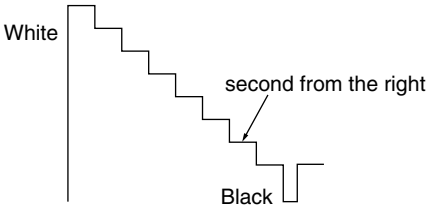

SECTION 4
CIRCUIT ADJUSTMENTS

4-1. ADJUSTMENTS WITH COMMANDER

Service adjustments to this model can be performed using the supplied Remote Commander RM-952

a. ENTERING SERVICE MODE

With the unit on standby

→ [DISPLAY] → [5] → [VOL (+)] → [POWER]

This operation sequence puts the unit into service mode.

The screen display is :

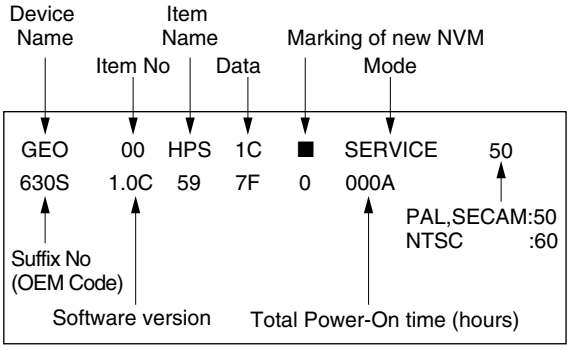

b. METHOD OF CANCELLATION FROM SERVICE MODE

Set the standby condition (Press [POWER] button on the commander), then press [POWER] button again, hereupon it becomes TV mode.

c. METHOD OF WRITE INTO MEMORY

1) Set to Service Mode.
2) Press [1] (UP) and [4] (DOWN), to select the adjustment.
4) Press [MUTING] button to indicate WRITE on the screen.
5) Press [0] button to write into memory.

d. MEMORY WRITE CONFIRMATION METHOD

1) After adjustment, pull out the plug from AC outlet, and then plug into AC outlet again.
2) Turn the power switch ON and set to Service Mode.
3) Call the adjusted items again to confirm adjustments were made.

[1], [4] ↓	Select the adjustment item.
[3], [6] ↓	Raise/lower the data value.
[MUTING] ↓	Writes.
[0]	Executes the writing.

[7], [0]	All the data becomes the values in memory.
[8], [0]	All user control goes to the standard state.
[5], [0]	Service data initialization (Be sure not to use usually.)
[2], [0]	Write 50Hz adjustment data to 60Hz, or vice versa.

4-2. ADJUSTMENT METHOD

Item Number 00 of device GEO

This explanation uses H-Position as an example.

1. Select "GEO 00 HPS" with the [1] and [4] buttons.
2. Raise/lower the data with the [3] and [6] buttons.
3. Select the optimum state. (The standard is 1F for PAL reception.)
4. Write with the [MUTING] button. (The display changes to WRITE.)
5. Execute the writing with the [0] button. (The WRITE display will be changed to red color while excuting, and back to SERVICE.)

Example on screen display :-

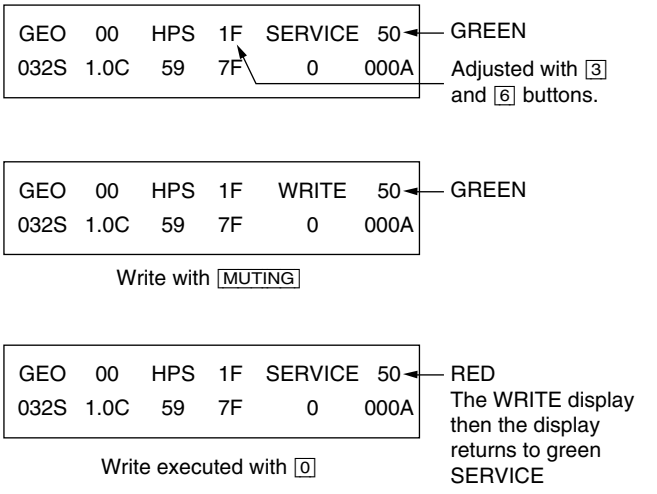
GEO 00 HPS 1F SERVICE 50
032S 1.0C 59 7F 0 000A
GREEN
Adjusted with [3] and [6] buttons.
GEO 00 HPS 1F WRITE 50
032S 1.0C 59 7F 0 000A
GREEN
Write with [MUTING]
GEO 00 HPS 1F SERVICE 50
032S 1.0C 59 7F 0 000A
RED
The WRITE display then the display returns to green SERVICE
Write executed with [0]

Use the same method for all Items. Use [1] and [4] to select the adjustment item, use [3] and [6] to adjust, write with [MUTING], then execute the write with [0].

Note : 1. In [WRITE], the data for all items are written into memory together.
2. For adjustment items that have different standard data between 50Hz or 60Hz, be sure to use the respective input signal after adjustment.

Adjustment Item Table

TVG	Functionality		Init.	Range	Function	Table & Note	Register No.bit	Device Name (Slave Address)	NVM Address			Remarks:
Category	No.	Name							Slave	Sub	Bit Range	Initial data for tables
GEO	00	HPS	7	3F	H POSITION	50/60Hz	–	CXA2159S(88H)	A0	A1/AE	7-2	
	01	HSZ	1F	3F	H SIZE	50/60Hz	–		A0	A0/AD	7-2	
	02	PAP	1F	3F	PIN AMP	50/60Hz	–		A0	A2/AF	7-2	
	03	TLT	7	0F	TRAPEZIUM	50/60Hz	–		A0	A4/B1	7-4	
	04	VPS	1F	3F	V POSITION	50/60Hz	–		A0	9E/AB	7-2	
	05	VSZ	1F	3F	V SIZE	50/60Hz	–		A0	9D/AA	7-2	
	06	SCO	7	0F	S CORRECTION	50/60Hz	–		A0	9F/AC	7-4	
	07	VLN	7	0F	V LINEARITY	50/60Hz	–		A0	9F/AC	3-0	
	08	BOW	7	0F	AFC BOW	50/60Hz	–		A0	A5/B2	7-4	
	09	AGL	7	0F	AFC ANGLE	50/60Hz	–		A0	A5/B2	3-0	
	0A	UPN	1F	3F	UPPER PIN	50/60Hz	–		A0	A3/B0	7-2	
	0B	LPN	1F	3F	LOWER PIN	50/60Hz	–		A0	A7/B4	7-2	
	0C	HBL	0	1	H BLANKING ON/OFF		–		A0	9A	1	
	0D	LBL	2	0F	LEFT H BLANKING	50/60Hz	–		A0	A6/B3	7-4	
	0E	RBL	0B	0F	RIGHT H BLANKING	50/60Hz	–		A0	A6/B3	3-0	
WHB	00	RDR	25	3F	R DRIVE	DYNAMIC/others	–	CXA2159S(88H)	A0	C0/BA	7-2	
	01	GDR	25	3F	G DRIVE	DYNAMIC/others	–		A0	C1/BB	7-2	
	02	BDR	25	3F	B DRIVE	DYNAMIC/others	–		A0	C2/BC	7-2	
	03	RCT	7	0F	R CUTOFF	SECAM/others	–		A0	C3/BD	3-0	
	04	GCT	7	0F	G CUTOFF	SECAM/others	–		A0	C4/BE	7-4	
	05	BCT	7	0F	B CUTOFF	SECAM/others	–		A0	C4/BE	3-0	
	06	BMN	15	1F	BRIGHTNESS MINIMUM DATA		–		A0	22	6-2	
	07	SBR	1F	3F	SUB BIGHTNESS CONTROL		–		A0	23	7-2	
	08	APB	0	3	SUB BRIGHT CONTROL SWITCH FOT INTELLIGENCE PICTURE #3		–		A0	23	1-0	
SAJ	00	PMX	33	3F	PICTURE MAXIMUM DATA	non-Wide/Wide	–	CXA2159S(88H)	A0	21	7-2	
	01	SHU	8	0F	SUB HUE CONTROL	TV/Video	–		A0	24/38	5-2	
	02	SSH	3	0F	SUB SHARPNESS CONTROL	TV/Video	–		A0	25/36	7-4	
	03	SCL	1F	3F	SUB COLOR CONTROL	(NTSC/others)/WIDE(NTSC/others)	–		A0	37/26	7-2	

TVG	Functionality		Init.	Range	Function	Table & Note	Register No.bit	Slave Address	NVM			Remarks:
Category	No.	Name							Slave	Sub	Bit Range	Initial data for tables
OPB	00	OP1	FF	FF	OPTIONAL BITS 1 (SEE BELOW)	Option - Bits		CXP750097 (60H)	A0	2D	7-0	
	01	OP2	62	FF	OPTIONAL BITS 2 (SEE BELOW)				A0	2E	7-0	
	02	OP3	B1	FF	OPTIONAL BITS 3 (SEE BELOW)				A0	2F	7-0	
	03	OP4	02	FF	OPTIONAL BITS 4 (SEE BELOW)				A0	30	7-0	

Adjustment Item Table

TVG	Functionality		Init.	Range	Function	Table & Note	Register No.bit	Slave Address	NVM			Remarks:
Category	No.	Name							Slave	Sub	Bit Range	Initial data for tables
VP	00	EHT	4	0F	EHT COMP	50/60Hz	–	CXA2159S(88H)	A0	A4/B1	3-0	
	01	GMA	2	03	GAMMA CORRECTION	Refer NVM Map A4	–		A4	66/67/68/69	1-0	
	02	APG	0	1	GAMMA CONTROL SWITCH FOR PNC #3		–		A4	66/67/68/69	2	
	03	YDL	6	0F	Y DELAY	PAL/SECAM/NTSC	–		A0	B7/B9/B8	3-0	
	04	SST	1	03	SECAM ID START POSITION	SECAM/PAL	–		A4	6A/6C	5-4	
	05	SSP	1	03	SECAM ID STOP POSITION	SECAM/PAL	–		A4	6A/6C	7-6	
	06	RLM	0	3	RGB LIMIT		–		A0	83	1-0	
	07	SLV	2	03	SECAM ID LEVEL	SECAM/PAL	–		A4	6B/6D	1-0	
	08	SBF	22	3F	SECAM BELL FO	SECAM/PAL	–		A4	6B/6D	7-2	
	09	DYC	1	1	DYNAMIC COLOR ON/OFF		–		A0	8C	1	
	0A	ABL	1	1	ABL MODE SWITCHING	STANDARD Always 0	–		A0	8B	1	
	0B	VTH	1	1	ABL DETECTION VTH SWITCHING		–		A0	8B	0	
	0C	SFO	1	1	FO SWITCHING FOR SHARPNESS	NTSC/others	–		A4	5C/59	1	
	0D	DCX	1	1	DC TRANS. RATIO SWITCHING		–		A0	88	1	
	0E	SHT	1	1	PRE-/OVERSHOOT RATIO SWITCH	NTSC/others	–		A0	5D/5A	0	
	0F	HDW	0	1	H DRIVE PULSE WIDTH SWITCH		–		A0	80	6	
	10	AFC	1	03	AFC GAIN CONTROL	TV/Video/Text	–		A0	28/29/2A	1-0	
	11	HOS	7	0F	H OSCILLATION		–		A0	8E	7-4	
	12	HSS	0	1	SLICE LEVEL OF H SYNC SEP.		–		A0	8F	1	
	13	VSS	0	1	SLICE LEVEL OF V SYNC SEP.		–		A0	8F	0	
	14	HMS	1	1	MACRO VISION C/M OFF/ON	50/60Hz	–		A0	9D/AA	0	
	15	YUV	0	1	YUV SWITCH CONTROL		–		A0	80	2	
	16	CDV	1	3	CD MODE FOR VIDEO AND RF UNDER NO SIGNAL	video only	–		A0	2B	5-4	
	17	RON	1	1	R ON	not memorized	–		A0	81	2	
	18	GON	1	1	G ON	not memorized	–		A0	81	1	
	19	BON	1	1	B ON	not memorized	–		A0	81	0	
	1A	PON	1	1	P ON	not memorized	–		A0	80	7	
	1B	AXN	1	1	AXIS SW	NTSC/others (only for DYNAMIC)	–		A0	37/26	0	
	1C	RSL	0	1	RGB SEL		–		A0	8C	0	
	1D	VBW	1	3	VBLKW		–		A0	96	1-0	
	1E	RFP	0	1	REFP		–		A0	94	0	
	1F	JMP	0	1	JUMP		–		A0	9A	0	
	20	VMC	3	3	VM OFF		–		A0	83	3-2	
AP	00	INF	5	3F	INPUT ATTENUATION WHEN SURROUND OFF		–	BH3868AFS (80H)	A0	73	5-0	
	01	INS	0A	3F	INPUT ATTENUATION WHEN SURROUND ON (XG-ONLY)		–		A0	74	5-0	
	02	SEF	0	0F	SURROUND EFFECT CONTROL (XA-ONLY)		–		A0	76	6-3	
	03	PH1	3	3	PHASE 1 REGISTER SELECTION		–		A0	77	1-0	
	04	PH2	0	3	PHASE 2 REGISTER SELECTION (XG-ONLY)		–		A0	77	3-2	
	05	PH3	0	3	PHASE 3 REGISTER SELECTION (XG-ONLY)		–		A0	77	5-4	
	06	PH4	0	3	PHASE 4 REGISTER SELECTION (XG-ONLY)		–		A0	77	7-6	
	07	BCS	2	3	BASS CENTER SHIFT		–		A0	57	1-0	
	08	TCS	2	3	TREBLE CENTER SHIFT		–		A0	58	1-0	
	09	TRF	2	3	RF TREBLE OFFSET		–		A0	58	5-4	

Adjustment Item Table

TVG	Functionality		Init.	Range	Function	Table & Note	Register No.bit	Slave Address	NVM			Remarks:
Category	No.	Name							Slave	Sub	Bit Range	Initial data for tables
MSP	00	WST	15	FF	W/G STEREO THRESHOLD		–	MSP3415D (84H)	A0	60	7-0	
	01	WBT	EA	FF	W/G BILINGUAL THRESHOLD		–		A0	61	7-0	
	02	WLL	5	FF	W/G MONAURAL THRESHOLD		–		A0	62	7-0	
	03	WAC	0	0F	W/G AGREEMENT COUNT		–		A0	63	3-0	
	04	WDL	30	FF	W/G SEARCH DELAY		–		A0	64	7-0	
	05	NDL	20	FF	NICAM SEARCH DELAY		–		A0	65	7-0	
	06	SDL	10	FF	STEREO STATUS READ DELAY		–		A0	66	7-0	
	07	AGC	1	1	AGC SWITCH AUTO/CONSTANT		–		A0	68	7	
	08	REL	28	3F	AGC GAIN AT CONSTANT MODE		–		A0	68	6-1	
	09	CRM	0	1	CARRIER MUTING ON/OFF		–		A0	67	1	
	0A	ACO	1	1	AUDIO CLOCK OUT ON/OFF		–		A0	69	5	
	0B	FP	1B	7F	FM PRESCALE FOR NON-M SYSTEM		–		A0	6A	6-0	
	0C	FPM	32	7F	FM PRESCALE FOR M SYSTEM		–		A0	6B	6-0	
	0D	FH	36	7F	FM PRESCALE FOR HDEV		–		A0	6C	6-0	
	0E	FHM	65	7F	FM PRESCALE FOR HDEV AND M		–		A0	6D	6-0	
	0F	WGP	2A	7F	W/G PRESCALE		–		A0	6E	6-0	
	10	NIP	6D	7F	NICAM PRESCALE		–		A0	6F	6-0	
	11	ERR	50	FF	AUTO FM SWITCH THRESHOLD		–		A0	70	7-0	
	12	VOL	6D	FF	LOUD SPEAKER GAIN 7000H TO 7FF0H		–		A4	62	7-0	
TXT	00	TXH	0	3	TELETEXT HORIZONTAL POSITION		–	SAA5261(58H)	A4	55	1-0	
	01	TXV	0	3	TELETEXT VERTICAL POSITION		–		A4	55	5-4	
OPM	00	OSH	0A	3F	OSD H POSITION	Option-Misc	–	CXP750097(60H)	A0	27	7-2	
	01	COM	1	03	COMB SELECTION		–		A0	50	7-6	
	02	APC	1	1	APC SWITCH		–		A0	4F	5	
	03	TSY	0	03	TV SYS AT AUTO TV SYS		–		A0	4F	4-3	
	04	MUT	0	1	NO SIGNAL MUTE		–		A0	4F	0	
	05	AFM	0	1	AUTO FM SWITCH		–		A0	4F	1	
	06	RFB	0	3	C-BPF CONTROL		–		A0	50	5-4	
	07	TV0	0	7	TILT TO V-ANGLE OFFSET		–		A0	50	2-0	
	08	DBL	0	1	DISABLE BLUEBACK FUNCTION		–		A0	4F	2	

NOTE

- shaded items are fixed data.
- Standard data listed on the Adjustment Item Table are reference values, therefore it may be different for each model and for each mode.
- Note for Different Data Those are the standard data values written on the microprocessor. Therefore, the data values of the modes and stored respectively in the memory. In case of a device replacement, adjustment by rewriting the data value is necessary for some items.

ITEM INFORMATION

No. OPB0 OP1

Item	XTAL 4.43	XTAL 3.58	SECAM	2nd. Lang	B/G	I	D/K	M
KV-XA21M80 (E)	1	1	1	1	1	1	1	1
KV-XA21M83	1	1	1	1	1	1	1	1
KV-XA21M50 (EM)	1	1	1	1	1	1	1	1
KV-XA21M50 (GE)	1	1	1	1	1	1	1	1
KV-XA21M61 (EM)	1	1	1	1	1	1	1	1
KV-XA21M61 (GE)	1	1	1	1	1	1	1	1
KV-XA21M60 (S)	1	1	1	1	1	1	1	1
KV-XA21M80 (ME)	1	1	1	1	1	1	1	1

No. OPB1 OP2

Item	TOP	NICAM	HDEV	Thai Bil	Dis Fav.	DVD Input	AV Input	
KV-XA21M80 (E)	0	0	0	0	0	0	1	0
KV-XA21M83	0	0	0	0	0	0	1	0
KV-XA21M50 (EM)	0	0	0	0	0	0	1	0
KV-XA21M50 (GE)	0	0	0	0	0	0	1	0
KV-XA21M61 (EM)	0	1	1	0	0	0	1	0
KV-XA21M61 (GE)	0	1	1	0	0	0	1	0
KV-XA21M60 (S)	0	1	1	0	0	0	1	0
KV-XA21M80 (ME)	0	0	0	0	0	0	1	0

AV Input 00 = no AV Input 01 = 1 AV Input
10 = 2 AV Input 11 = 3 AV Input
DVD Input Effective only when "AV Input" is set to 3 AV Input
Dis Fav. Disable Favorite Channel (Effective For XF-L (21" & 14") Models Only)

No. OPB2 OP3

Item	PIC Rotate*1	2199 Curve*1	Auto PIC	Auto TV sys	US ST	AV Mono*1	11 KEY	Colour SW*2
KV-XA21M80 (E)	1	0	1	0	0	0	0	0
KV-XA21M83	0	0	1	0	0	0	0	0
KV-XA21M50 (EM)	1	0	1	0	0	0	0	0
KV-XA21M50 (GE)	1	0	1	0	0	0	0	0
KV-XA21M61 (EM)	1	0	1	1	0	0	0	0
KV-XA21M61 (GE)	1	0	1	1	0	0	0	0
KV-XA21M60 (S)	0	0	1	1	0	0	0	0
KV-XA21M80 (ME)	0	0	1	0	0	0	0	0

PIC Rotate*1 PIC Rotation Switch 0 = disabled, 1 = enabled
2199 Curve*1 2199 volume Curve Selection 0 = Others, 1 = 2199 Volume Curve.
Auto PIC*3 Auto Picture Improvement 0 = off PNC1/PNC2
1 = activate PNC1/PNC2
A-TVsys Auto TV System in Auto Program 0 = disabled, 1 = enabled
US ST* USA Stereo 0 = disabled, 1 = enabled
AV MONO*1 AV Mono model 0 = Stereo, 1 = Mono
(No Balance & Surround selection)
11 Key Front Key Selection 0 = 7 key model, 1 = 11 key model
Color SW*2 Color Data Selection in Dynamic Mode 0 = 65 (No PIP), 1 = 57 (PIP)

4-3. PICTURE QUALITY ADJUSTMENTS

SUB COLOR ADJUSTMENT

1. Select Video.
2. Input a PAL color-bar.
3. Set to the following condition:
   PICTURE 100%, BRIGHTNESS 50%, COLOR 50%
4. Connect an oscilloscope to pin ① (B OUT) of CN305, A board.
5. Set to Service Mode and select SAJ 'SCL' with [1] and [4] of the commander then adjust to VB2=VB3=VB4 with [3] and [6].
6. Press [MUTING] → [0] of the commander to write the data.
7. Adjust SAJ 'SCL' as step 3 to 5 when receiving NTSC color-bar.
8. Select the 'Wide' mode, write the 'same data-3 steps' for both PAL and NTSC input.

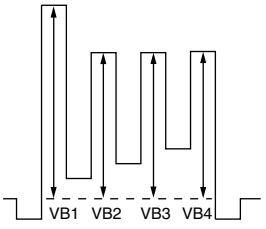

VB2 = VB3 = VB4

SUB HUE ADJUSTMENT

1. Select Video 1.
2. Input a NTSC 3.58 color-bar, video into Video 1.
3. Set the following condition:
   PICTURE 100%, BRIGHTNESS 50%, COLOR 50%
4. Connect an oscilloscope to pin ① (B OUT) of CN305, A board.
5. Select SAJ O1 "SHU" with [1] and [4] of the commander by setting to Service Mode and adjust to VB1=VB2=VB3=VB4 with [3] and [6].

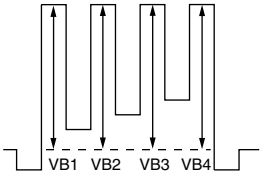

VB1 = VB2 = VB3 = VB4

6. Press [MUTING] → [0] of the commander to write the data.
7. Adjust SAJ O1 "SHU" as step 3 to 6 when receiving TV mode.

4-4. DEFLECTION ADJUSTMENT

NORMAL MODE (50Hz)

1. Set to Service Mode.
2. Using the [1] and [4] button, select category GEO (Service Mode).
3. Raise/lower the data using the [3] and [6] buttons.
   Select and adjust the following items to obtain optimum image.

Service Item

GEO :	00	HPS	H POSITION
	01	HSZ	H SIZE
	02	PAP	PIN AMP
	03	TLT	TILT
	04	VPS	V POSITION
	05	VSZ	V SIZE
	06	SCO	S CORRECTION
	07	VLN	V LINEARITY
	08	BOW	AFC BOW
	09	AGL	AFC ANGLE
	0A	UPN	UPPER CORNER PIN
	0B	LPN	LOWER CORNER PIN

NORMAL MODE (60Hz)

11. Input 525/60Hz signal.
12. Using the [1] and [4] buttons select category GEO (Service Mode).
13. Select and adjust the following items to obtain obtimum image.
    Raise/lower the data with the [3] and [6] buttons.

Service Item

GEO :	00	HPS	H POSITION
	01	HSZ	H SIZE
	02	PAP	PIN AMP
	03	TLT	TILT
	04	VPS	V POSITION
	05	VSZ	V SIZE
	06	SCO	S CORRECTION
	07	VLN	V LINEARITY
	08	BOW	AFC BOW
	09	AGL	AFC ANGLE
	0A	UPN	UPPER CORNER PIN
	0B	LPN	LOWER CORNER PIN

Note:

For Deflection Adjustment, set PICTURE MODE to "SOFT".

4-5. A BOARD ADJUSTMENT AFTER IC003 (MEMORY) REPLACEMENT

1. Enter to Service Mode.
2. Press commander buttons [5] and [0] (Data Initialize), and [2] and [0] (Data Copy) to initialize the data.
3. Call each item number and check if the respective screen shows the normal picture.
   In cases where items are not well adjusted, rectify the fine adjustment.
   Write the data per each item number ([MUTING] +[0]).
4. Select item numbers "OPB00" (OP1), "OPB01" (OP2), "OPB 02" (OP3) and "OPB 03" (OP4) respectively set the bit per model with command buttons [3] and [6].
5. Press commander buttons [8] and [0] (Test Normal) to return to the data that was set on the shipment from the factory.
   (This will also cancel Service Mode.)

4-6. PICTURE DISTORTION ADJUSTMENT (1)

Item Number 00 – 0B

GEO 0 HPS (H POSITION)



GEO 1 HSZ (H SIZE)



GEO 2 PAP (PIN AMP)



GEO 3 TLT (TRAPEZIUM)



GEO 4 VPS (V POSITION)



GEO 5 VSZ (V SIZE)



GEO 6 SCO (VERTICAL S-Correction)



GEO 7 VLN (V LINEARITY)



GEO 8 BOW (AFC.BOW)



GEO 9 AGL (AFC.ANGLE)



GEO 0A UPN (UPPER CORNER PIN)

GEO 0B LPN (LOWER CORNER PIN)



SECTION 5
DIAGRAMS

KV-XA21M80/XA2183/XA21M50/
KV-XA21M61/XA21M60
RM-952

5-1. BLOCK DIAGRAM

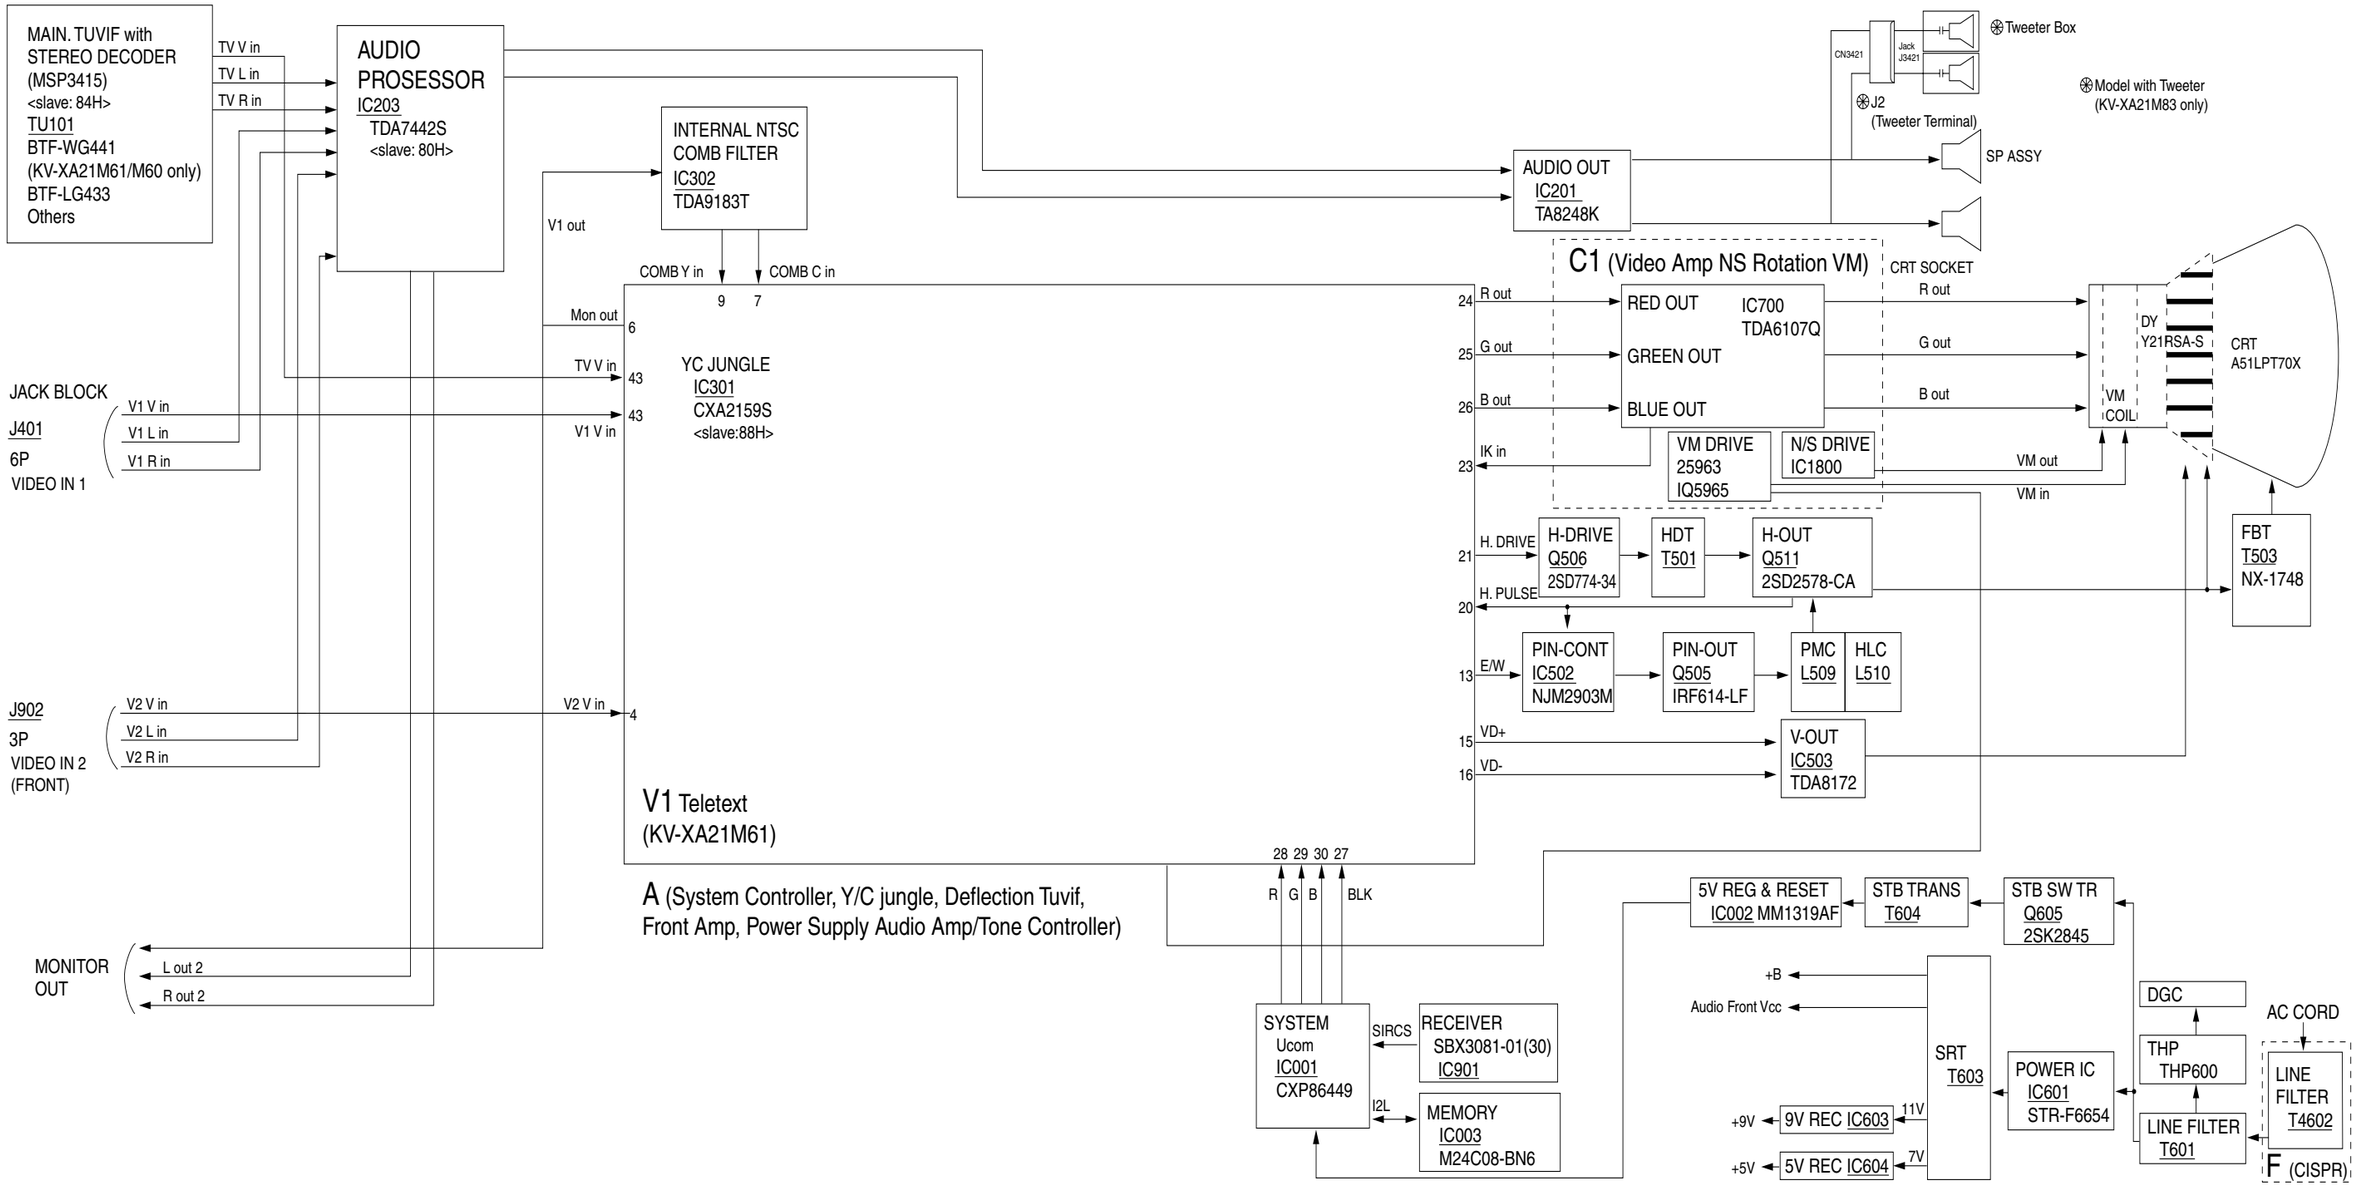

5-2. CIRCUIT BOARDS LOCATION

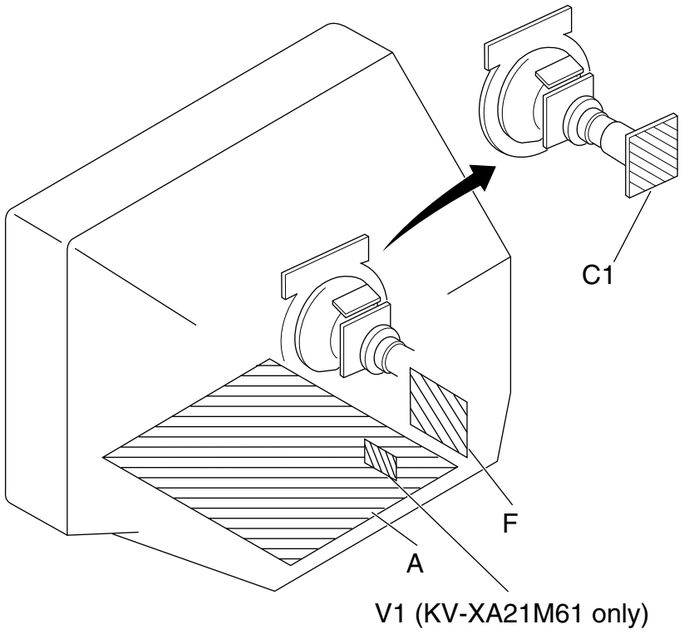

V1 (KV-XA21M61 only)

5-3. SCHEMATIC DIAGRAM

Note:

- All capacitors are in µF unless otherwise noted.
- All electrolytic capacitors are rated at 50V unless otherwise noted.
- All resistors are in ohms.
  kΩ = 1000Ω, MΩ = 1000kΩ
- Indication of resistance which does not have rating electrical power is as follows.

  Pitch: 5 mm
  Rating electrical power 1/4W (CHIP: 1/10W)

- : nonflammable resistor.
- △ : internal component.
- ▭ : panel designation or adjustment for rrepair.
- All variable and adjustable resistors have characteristic curve B unless otherwise noted.
- **Redings are taken with a color-bar signal input.**
  no mark : PAL
  ( ) : SECAM
  [ ] : NTSC 3.58
  << >> : NTSC 4.43
- **Readings are taken with a 10W MW digital multimeter.**
- **Voltage are dc with respect to ground unless otherwise noted.**
- **Voltage variations may be noted due to normal production tolerances.**
- **All voltage are in V.**
- ✻ **: Cannot be measured.**
- **Circled numbers are waveform references.**
- **: B +bus.**
- **: B –bus.**
- ⇨ **: signal path.**

Reference information

RESISTOR	: RN	METAL FILM
	: RC	SOLID
	: FPRD	NONFLAMMABLE CARBON
	: FUSE	NONFLAMMABLE FUSIBLE
	: RS	NONFLAMMABLE METAL OXIDE
	: RB	NONFLAMMABLE CEMENT
	: RW	NONFLAMMABLE WIREWOUND
	: ✻	ADJUSTMENT RESISTOR
COIL	: LF-8L	MICRO INDUCTOR
CAPACITOR	: TA	TANTALUM
	: PS	STYROL
	: PP	POLYPROPYLENE
	: PT	MYLAR
	: MPS	METALIZED POLYESTER
	: MPP	METALIZED POLYPROPYLENE
	: ALB	BIPOLAR
	: ALT	HIGH TEMPERATURE
	: ALR	HIGH RIPPLE

Note: The component identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

KV-XA21M80/XA2183/XA21M50/
KV-XA21M61/XA21M60
RM-952

(1) Schematic Diagrams of F, J2 and C1 Boards

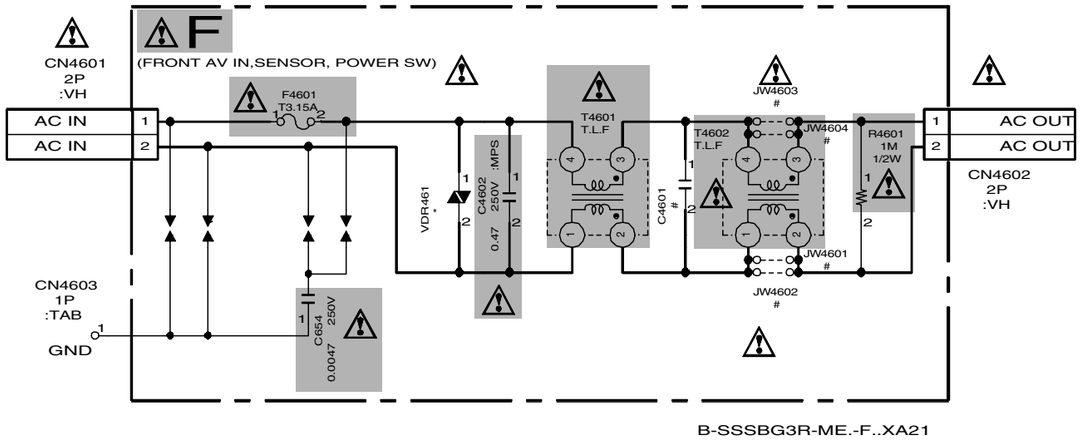

(KV-XA21M83)

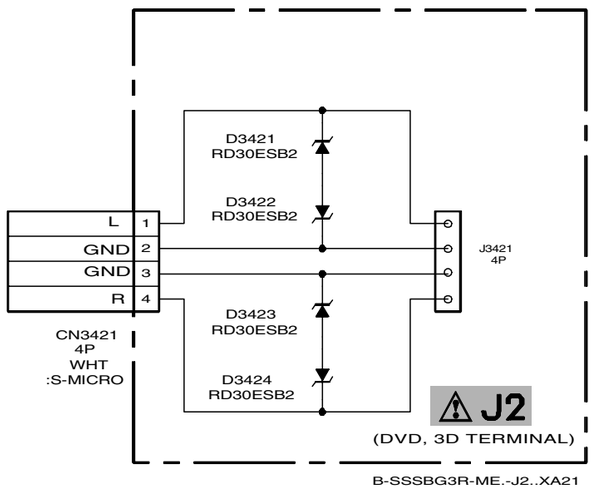

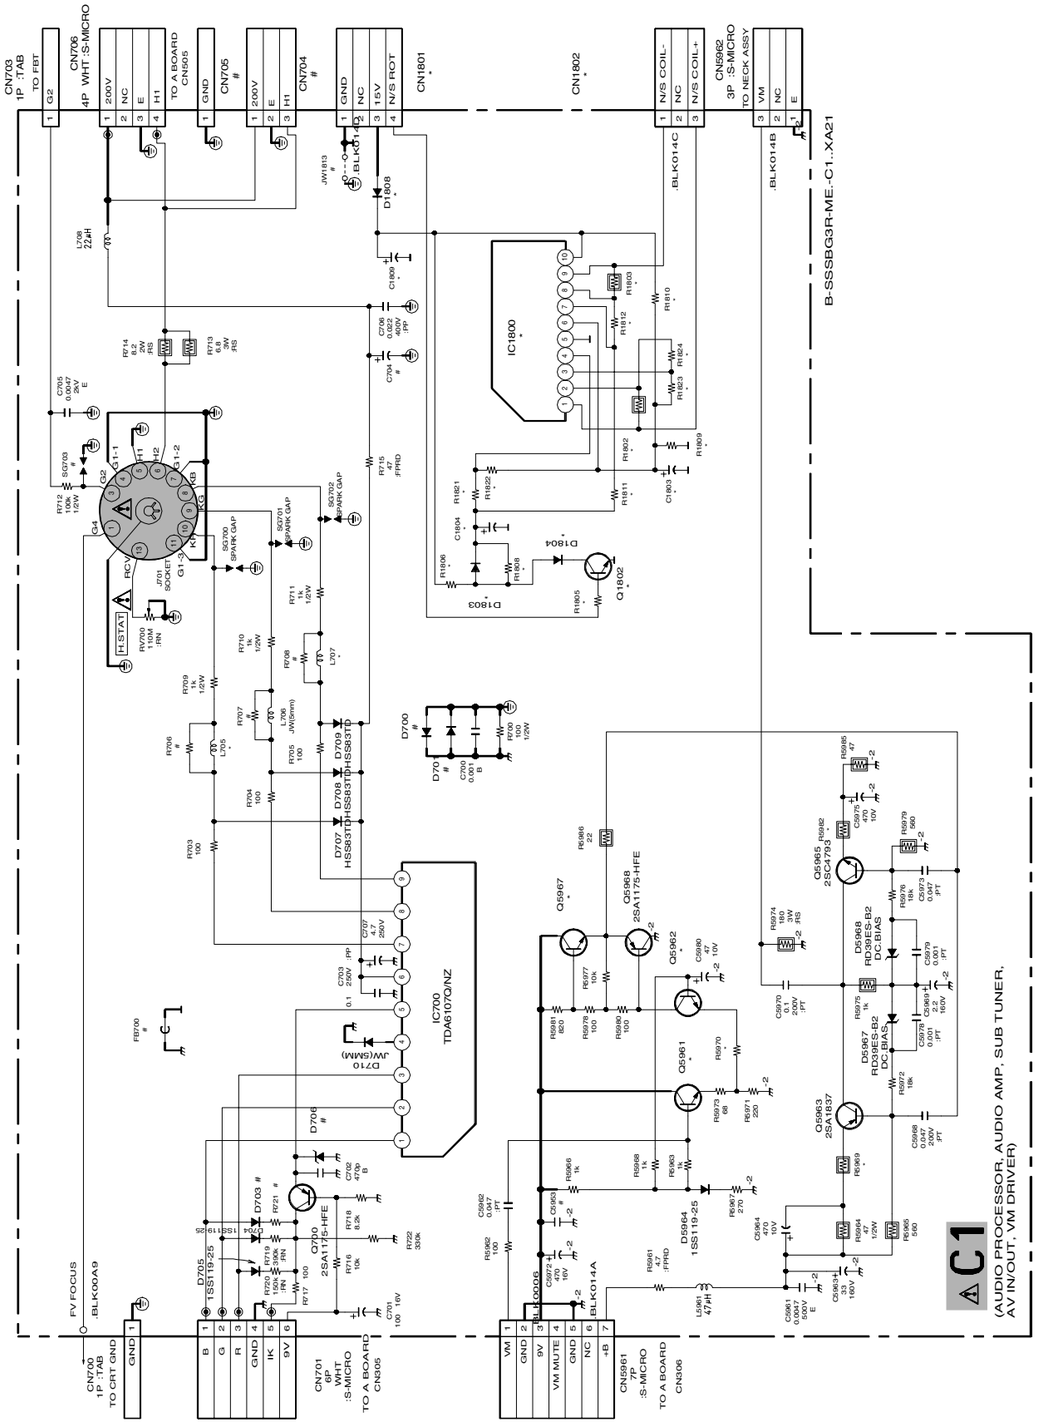

(2) Schematic Diagram of A Board

A PAGE 1 (1/4)

(SYSTEM CONTROLLER, Y/C JUNGLE, DEFLECTION, TUVIF, FRONT AMP, POWER SUPPLY)

TO PAGE 1 2/4
TO PAGE 1 4/4
TO PAGE 1 3/4
TO PAGE 1 4/4
TO PAGE 1 3/4

KV-XA21M80/XA2183/XA21M50/
KV-XA21M61/XA21M60
RM-952

A PAGE 1 (2/4)

(SYSTEM CONTROLLER, Y/C
JUNGLE, DEFLECTION, TUVIF,
FRONT AMP, POWER SUPPLY)

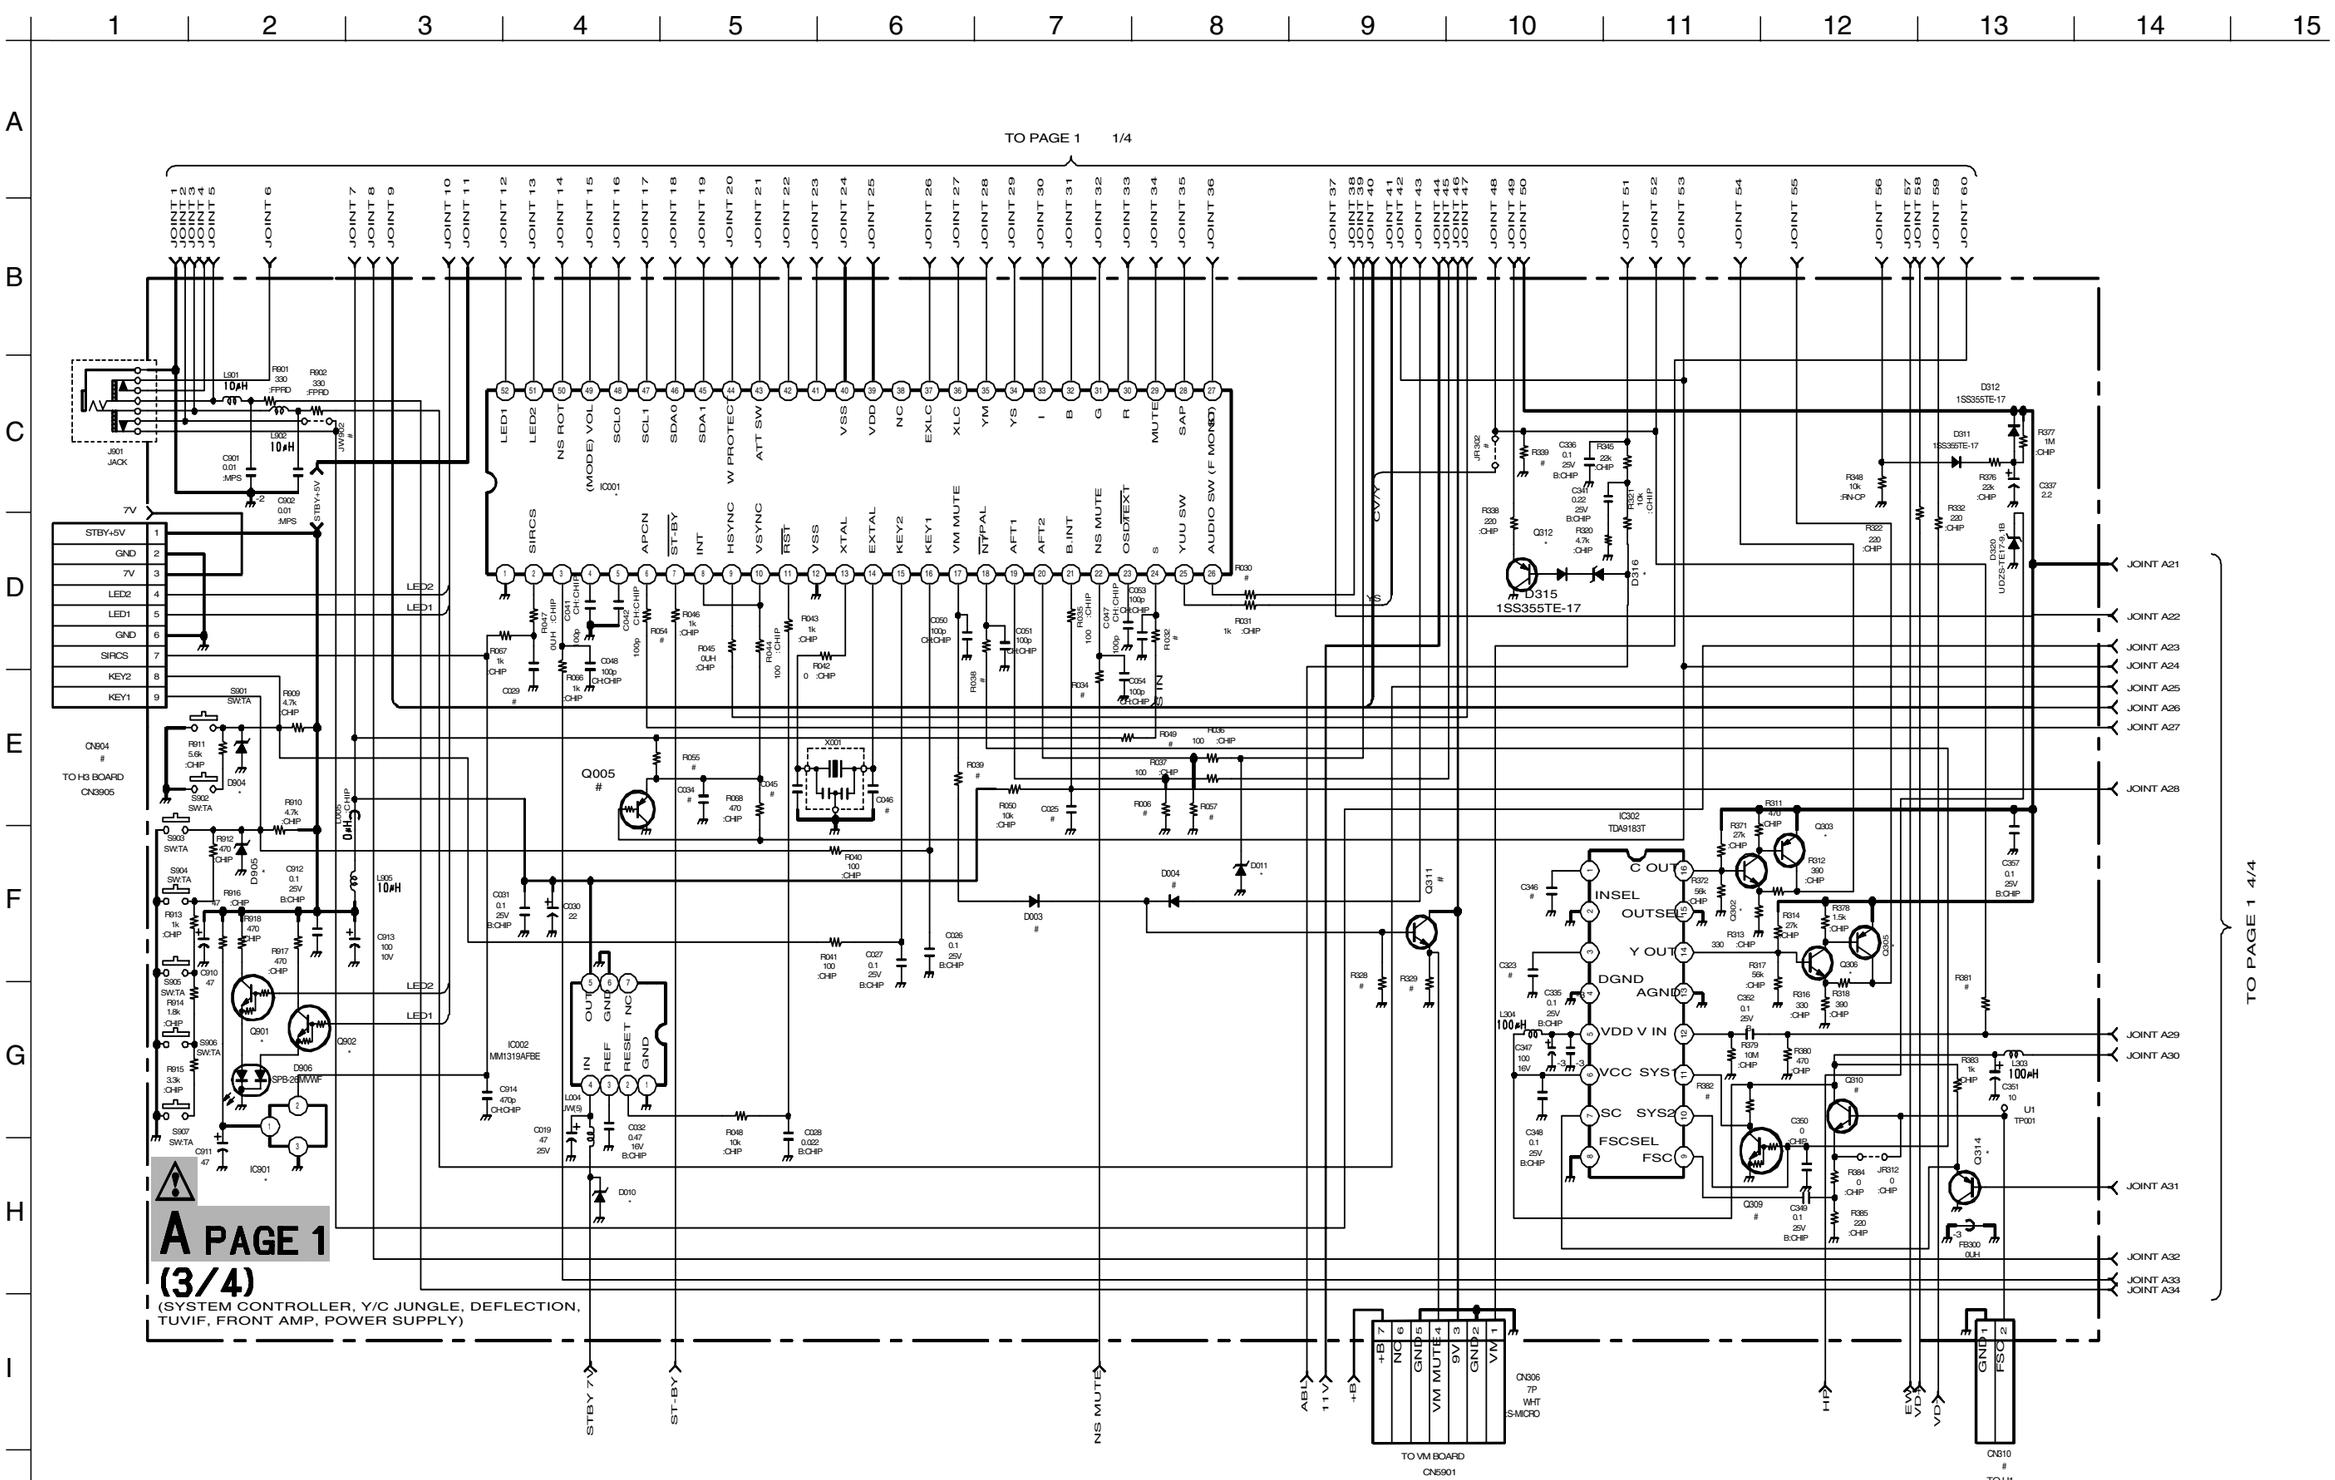
TO PAGE 1 1/4
A PAGE 1
(3/4)
(SYSTEM CONTROLLER, Y/C JUNGLE, DEFLECTION, TUVIF, FRONT AMP, POWER SUPPLY)
TO PAGE 1 4/4
IC001
IC002 MM1319AFBE
IC302 TDA9183T
Q005 #
X001
D315 1SS355TE-17
D312 1SS355TE-17
D311 1SS355TE-17
D320 UDZS-TE17-9.1B
D316
D904
D905
D901
D902
D906 SPB-2610MWF
IC301
D003 #
D004 #
D010
D011
Q311 #
Q312
Q901
Q902
Q903
Q904
Q905
Q906
Q907
Q908
Q909 #
Q310 #
Q314
CN904 # TO H3 BOARD CN3905
CN5901 TO VM BOARD CN5901
CN810 # TO U1
U1 TP001
STBY+5V
GND
7V
LED2
LED1
SIRCS
KEY2
KEY1
S901 SW:TA
S902 SW:TA
S903 SW:TA
S904 SW:TA
S905 SW:TA
S906 SW:TA
S907 SW:TA
JOINT A21
JOINT A22
JOINT A23
JOINT A24
JOINT A25
JOINT A26
JOINT A27
JOINT A28
JOINT A29
JOINT A30
JOINT A31
JOINT A32
JOINT A33
JOINT A34
STBY 7V
ST-BY
NS MUTE
ABL
11 V
+B
HP
EW VD
VD
+B 7
NC 6
GND 5
VM MUTE 4
9V 3
GND 2
VM 1
GND 1
FSC 2

KV-XA21M80/XA2183/XA21M50/
KV-XA21M61/XA21M60
RM-952

TO PAGE 1 1/4

TO PAGE 1 2/4

TO PAGE 1 3/4

JOINT 61 JOINT 62 JOINT 63 JOINT 64 JOINT 65 JOINT 66 JOINT 67 JOINT 68 JOINT 69 JOINT 70 JOINT 71 JOINT 72 JOINT 73 JOINT 74 JOINT 75 JOINT 76 JOINT 77 JOINT 78 JOINT 79 JOINT 80 JOINT 81 JOINT 82 JOINT 83 JOINT 84 JOINT 85 JOINT 86 JOINT 87

JOINT A21 JOINT A22 JOINT A23 JOINT A24 JOINT A25 JOINT A26 JOINT A27 JOINT A28 JOINT A29 JOINT A31 JOINT A32 JOINT A33 JOINT A34

C338 4700p B:CHIP
R333 10k :CHIP
R306 15k :CHIP
R370 220 :CHIP
R350 3.3k :CHIP
D320 *
D309 *
D308 1SS355TE
D307 1SS355TE
D306 1SS355TE
Q315 *
R365 220 :CHIP
R375 *
R368 1k :CHIP
R325 470 :CHIP
JR309 0 :CHIP

Q202 UN2216
C264 2.2 16V F
C203 0.01 :CHIP
C223 1 10V B
R205 6.8k :CHIP
R206 3.3k
R207 1.5k :CHIP
JW201 #
R209 6.8k :CHIP
C207 0.082 :PP
Q201 UN2216
C265 2.2 16V F:CHIP
C232 0.01 :CHIP
R203 3.3k
R204 6.8k :CHIP
R208 6.8k :CHIP
R202 1.5k :CHIP
C202 4700p :CHIP
C204 0.082 :PP
C206 4700p :CHIP
C223 1 10V B
JW203
JW202
JW204
JW205
C209 10
R211 #
R210 150 :CHIP
C208 10
R212 150 :CHIP
JR201 0 :CHIP
C212 100 16V
C210 100 16V
C211 470 25V
JR202 0 :CHIP
JR203 #
R214 #
Q204 #
R213 #
C220 1000 25V
C221 10

IC201 TA8223K
GND GND NF2 R IN L IN NF 1 VCC 2 GND B.S.1 L OUT VCC 1 R OUT B.S.2
15 14 13 12 11 10 9 8 7 6 5 4 3 2 1

C214 1000 25V
C217 10
SDA
SCL

R228 4.7 :CHIP
C219 0.15 :MPS
PS200 1-576-335-21
C216 0.01 B:CHIP
C215 1000 25V
D203 *
R234 4.7
C218 0.15 :MPS
R231 0 :CHIP
Q203
Q206 *
Q207 *
Q205 *

CN202 4P WHT :MINI
4 GND
3 B-INT
2 SDA
1 SCL
R225 220 :CHIP
R226 220 :CHIP
R227 220 :CHIP

A PAGE 1
(4/4)
(SYSTEM CONTROLLER, Y/C JUNGLE, DEFLECTION, TUVIF, FRONT AMP, POWER SUPPLY)

H1V H1H 9V
9V IK GND R G B
TO C BOARD CN703
CN805 6P WHT :S-MICRO

7V
7V CVBS GND GND SCP VP GND
CN301 *

9V A GND CVSS MOMUTE
CN808 #
TO B6 BOARD CN8401

YS B G R
SCL SDA GND BLK BLUE GREEN RED
CN307 *

GND CVBS
CN309 #

9V
R OUT GND L OUT GND PROT MUTE 9V
CN201 #
TO B3 BOARD CN6200

AUDI-GND
AUD GND AUD GND AUD +VCC AUD +VCC AUD+VCC
CN608 #

VIDEO 1 V GND VIDEO 1
CN107 #
TO B6 BOARD CN8403

B-SSSBG3R-HK.-A..XA21

A PAGE 2 (1/4)

(SYSTEM CONTROLLER, Y/C JUNGLE, DEFLECTION, TUVIF, FRONT AMP, POWER SUPPLY)

KV-XA21M80/XA2183/XA21M50/
KV-XA21M61/XA21M60
RM-952

A PAGE 2 (2/4)

(SYSTEM CONTROLLER, Y/C JUNGLE, DEFLECTION, TUVIF, FRONT AMP, POWER SUPPLY)

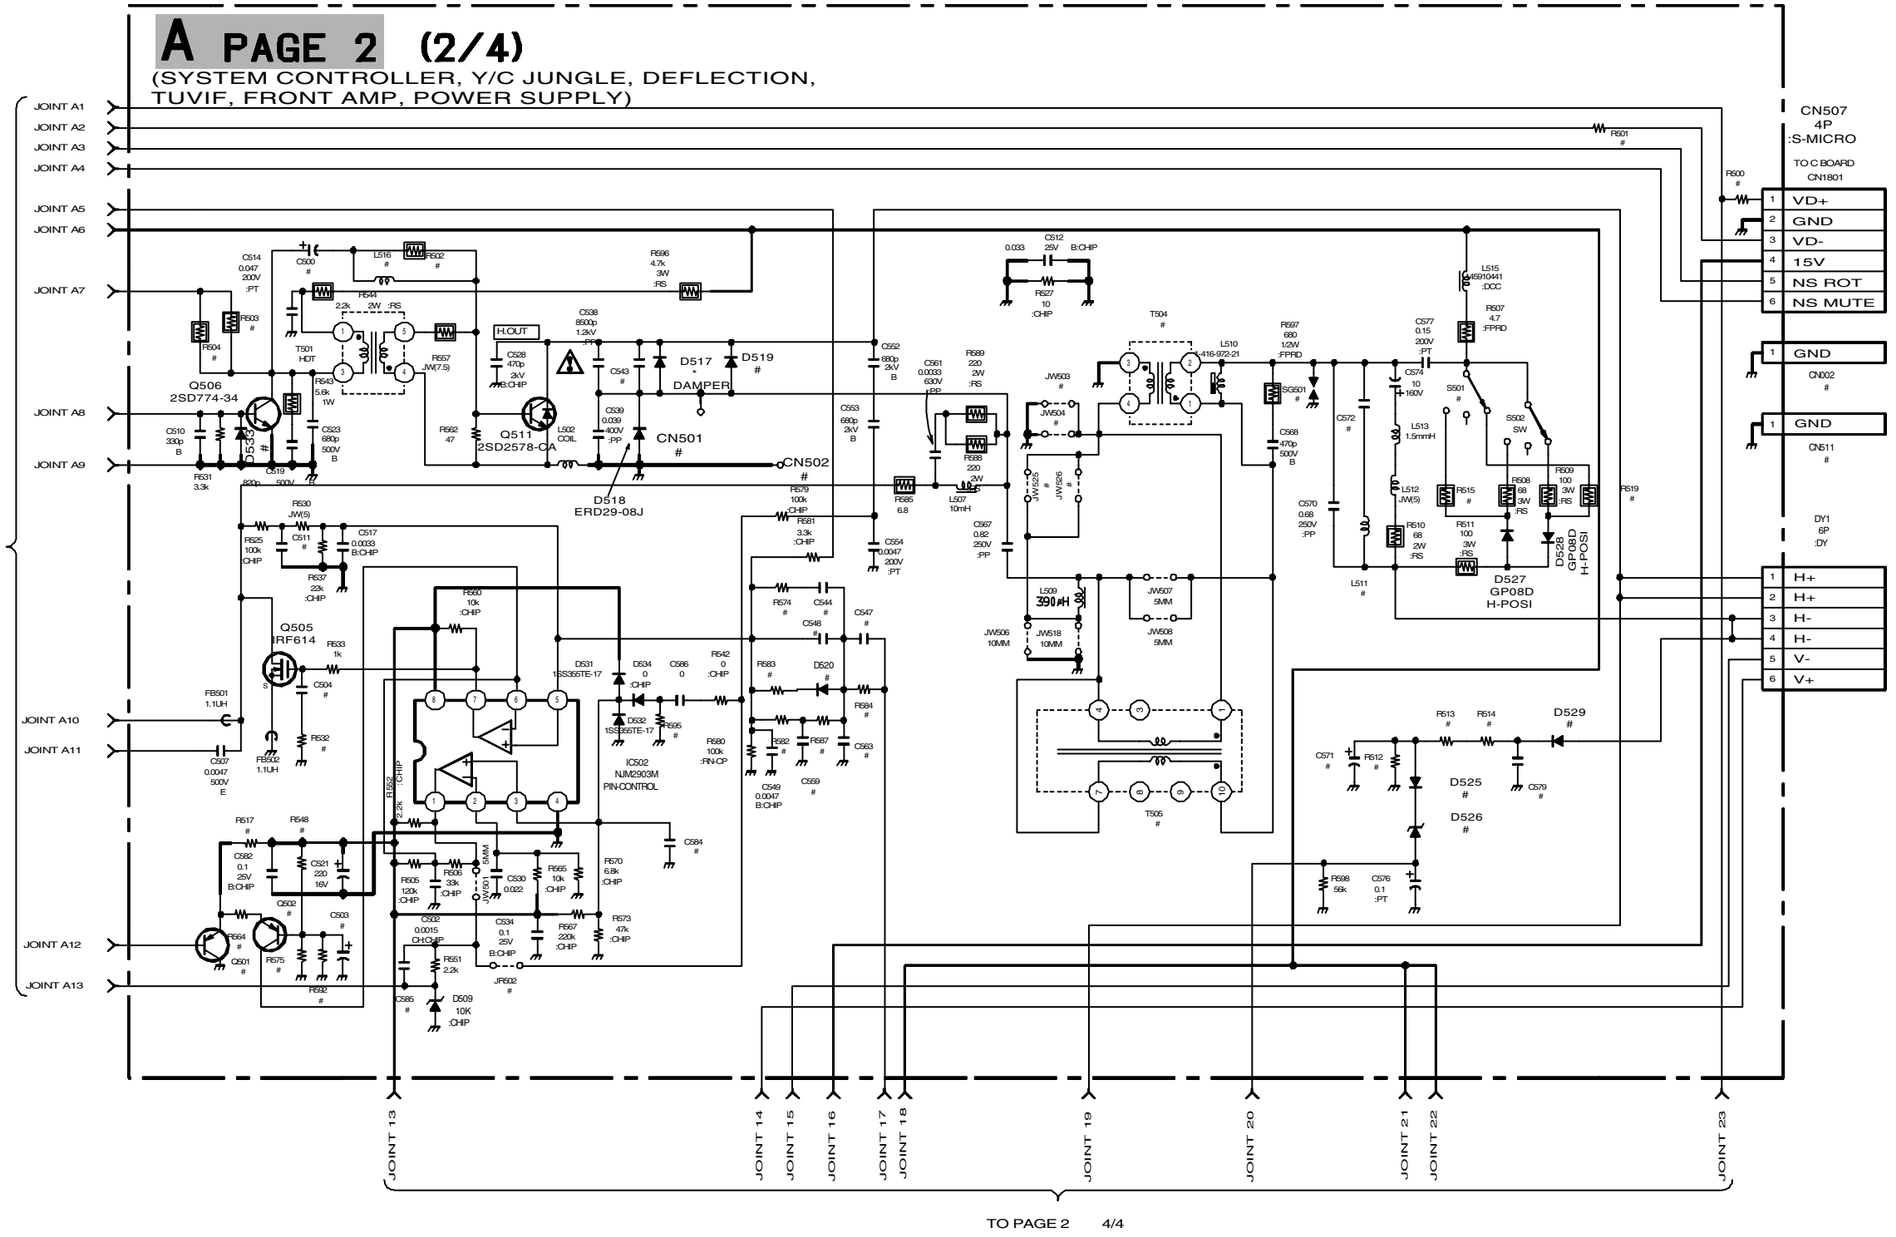

A PAGE 2 (3/4)

(SYSTEM CONTROLLER, Y/C JUNGLE, DEFLECTION, TUVIF, FRONT AMP, POWER SUPPLY)

TO PAGE 2 1/4

TO PAGE 2 4/4

CN600 #

CN601 2P

CN602 2P :MINI

CN604 *

CN605 #

TO B3 BOARD CN3602

TO DGC

TO B3 BOARD CN5205

TO DH BOARD CN3802

KV-XA21M80/XA2183/XA21M50/
KV-XA21M61/XA21M60
RM-952

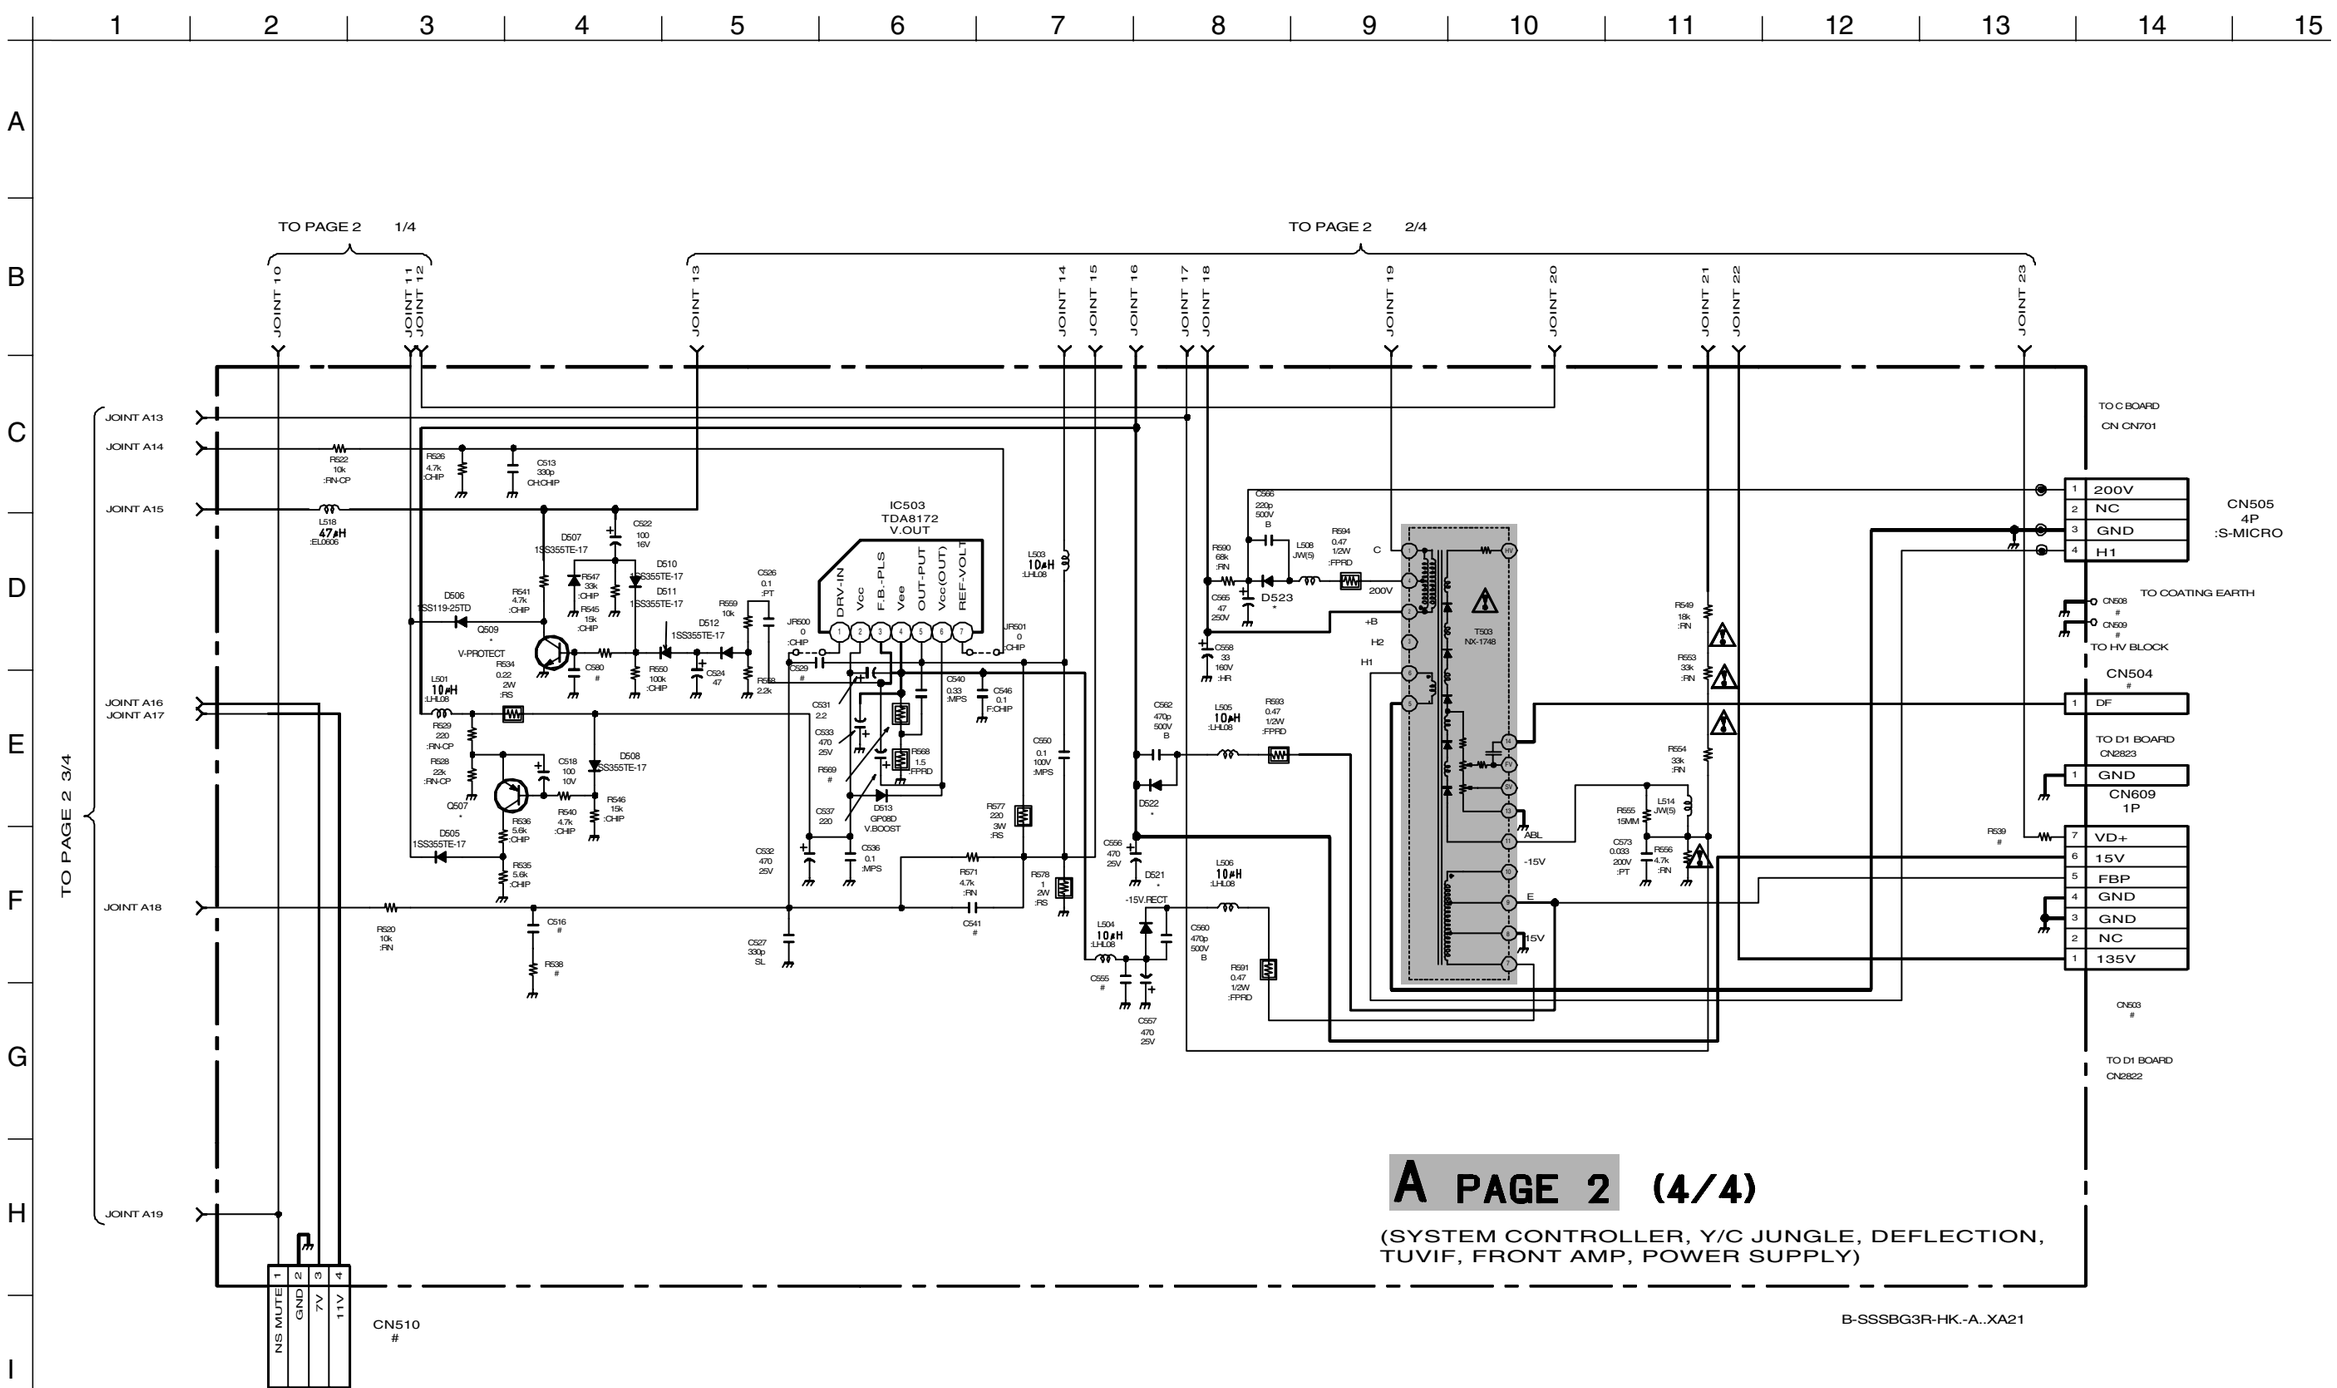

(3) Schematic Diagram of V1 Board

(KV-XA21M61(EM/GE))

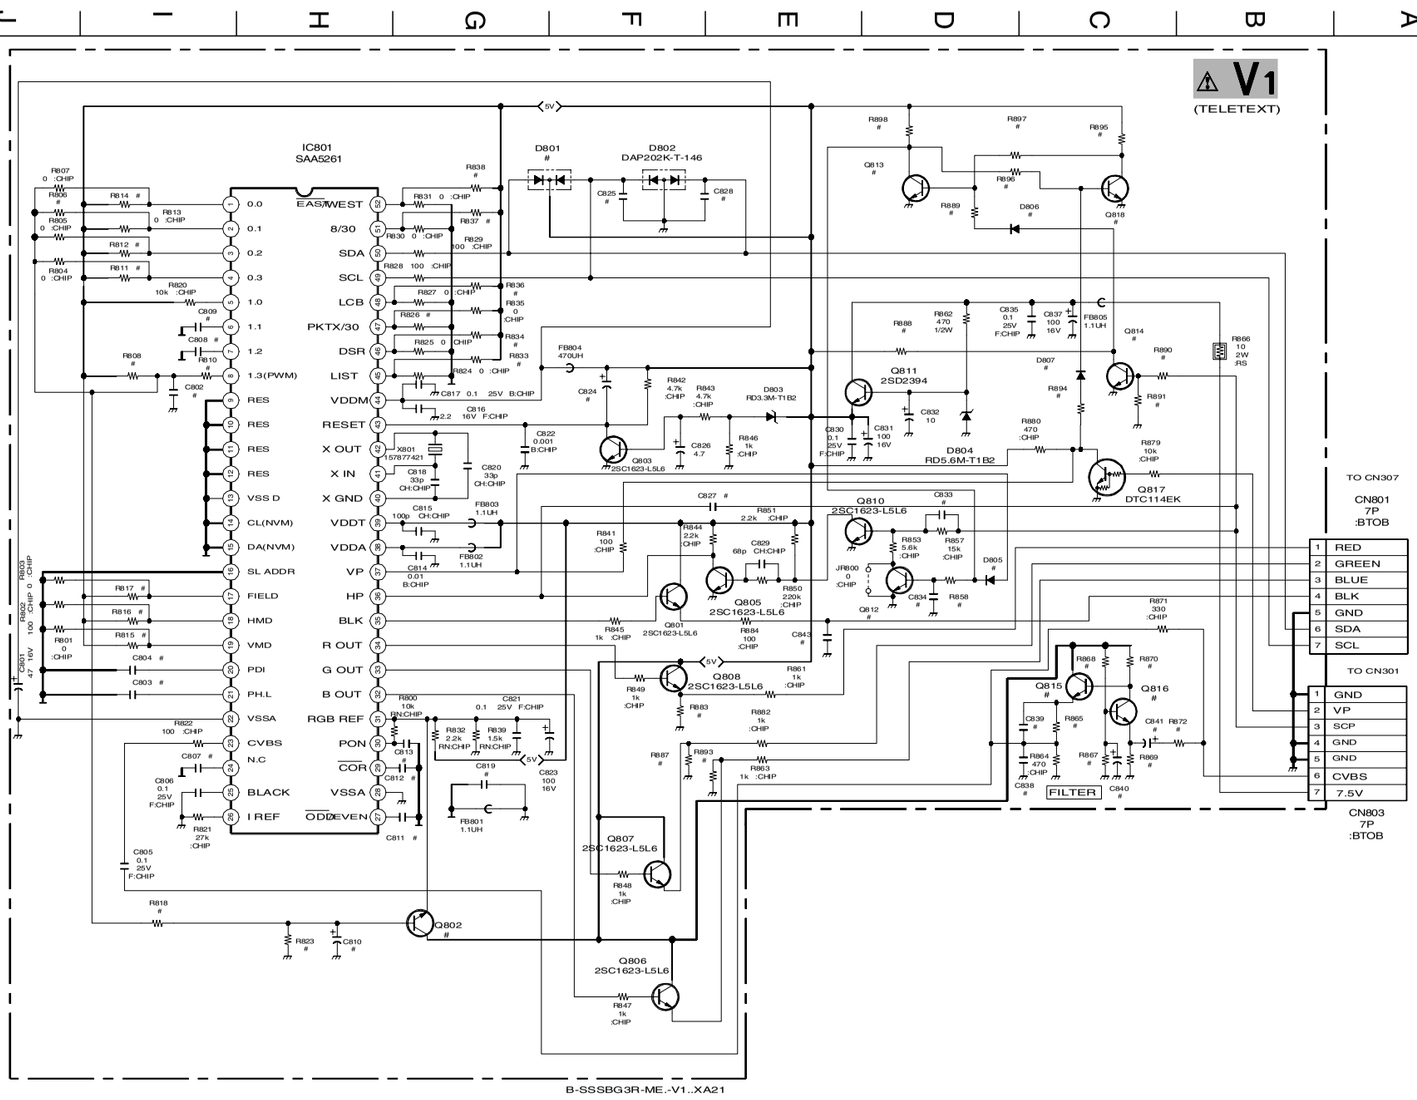

C1 Board ✲ Mark List

	KV-XA25M50(EM)	KV-XA21M50(GE)	KV-XA21M60(S)	KV-XA21M61(EM)	KV-XA21M61(GE)	KV-XA21M80(ME)	KV-XA21M80(E)	KV-XA21M83
C1803	10	10	#	10	10	#	10	#
C1804	10	10	#	10	10	#	10	#
C1809	1000 25V	1000 25V	#	1000 25V	1000 25V	#	1000 25V	#
C5955	47 16V	47 16V	#	47 16V	47 16V	47 16V	47 16V	47 16V
CN1801	4P	4P	#	4P	4P	#	4P	#
CN1802	3P	3P	#	3P	3P	#	3P	#
D1803	1SS119-25	1SS119-25	#	1SS119-25	1SS119-25	#	1SS119-25	#
D1804	1SS119-25	1SS119-25	#	1SS119-25	1SS119-25	#	1SS119-25	#
D1808	GP08D	GP08D	#	GP08D	GP08D	#	GP08D	#
IC1800	LA6510	LA6510	#	LA6510	LA6510	#	LA6510	#
Q1802	2SC2785-HFE	2SC2785-HFE	#	2SC2785-HFE	2SC2785-HFE	#	2SC2785-HFE	#
Q5961	2SC3311A-QRSTA	2SC3311A-QRSTA	2SC2785-HFE	2SC3311A-QRSTA	2SC3311A-QRSTA	2SC3311A-QRSTA	2SC3311A-QRSTA	2SC3311A-QRSTA
Q5962	2SC3311A-QRSTA	2SC3311A-QRSTA	2SC2785-HFE	2SC3311A-QRSTA	2SC3311A-QRSTA	2SC3311A-QRSTA	2SC3311A-QRSTA	2SC3311A-QRSTA
Q5963	2SA1837	2SA1837	2SA1606-E	2SA1837	2SA1837	2SA1837	2SA1837	2SA1837
Q5965	2SC4793	2SC4793	2SA1606-E	2SC4793	2SC4793	2SC4793	2SC4793	2SC4793
Q5967	2SC3311A-QRSTA	2SC3311A-QRSTA	2SC2785-HFE	2SC3311A-QRSTA	2SC3311A-QRSTA	2SC3311A-QRSTA	2SC3311A-QRSTA	2SC3311A-QRSTA
R1802	1.2	1.2	#	1.2	1.2	#	1.2	#
R1803	1.2	1.2	#	1.2	1.2	#	1.2	#
R1805	10K	10K	#	10K	10K	#	10K	#
R1806	4.7K	4.7K	#	4.7K	4.7K	#	4.7K	#
R1808	4.7K	4.7K	#	4.7K	4.7K	#	4.7K	#
R1809	33K	33K	#	33K	33K	#	33K	#
R1810	33K	33K	#	33K	33K	#	33K	#
R1811	82K	82K	#	82K	82K	#	82K	#
R1812	33K	33K	#	33K	33K	#	33K	#
R1821	82K	82K	#	82K	82K	#	82K	#
R1822	33K	33K	#	33K	33K	#	33K	#
R1823	5.6K	5.6K	#	5.6K	5.6K	#	5.6K	#
R1824	33K	33K	#	33K	33K	#	33K	#
R5955	#	47 16V	#	#	#	#	#	#

A(1/2) Board ✲ Mark List

	KV-XA25M50(EM)	KV-XA21M50(GE)	KV-XA21M60(S)	KV-XA21M61(EM)	KV-XA21M61(GE)	KV-XA21M80(ME)	KV-XA21M80(E)	KV-XA21M83
C003	#	#	100P :CHIP	#	#	100 :CHIP	#	100P :CHIP
C609	#	100	#	#	100	100	100	100
C613	180 450V	330 450V	180 450V	180 450V	330 450V	330 450V	330 450V	330 450V
C614	#	10	#	#	10	10	10	10
CN301	#	#	#	7P	7P	#	#	#
CN307	#	#	#	7P	7P	#	#	#
CN507	4P	4P	#	4P	4P	4P	4P	4P
CN602	2P	2P	#	2P	2P	2P	2P	2P
CN604	2P	3P	3P	2P	3P	3P	3P	3P
D010	NNCD9.1A-T1	NNCD9.1A-T1	#	NNCD9.1A-T1	NNCD9.1A-T1	NNCD9.1A-T1	NNCD9.1A-T1	NNCD9.1A-T1
D011	NNCD9.1A-T1	NNCD9.1A-T1	#	NNCD9.1A-T1	NNCD9.1A-T1	NNCD9.1A-T1	NNCD9.1A-T1	NNCD9.1A-T1
D100	#	#	MA111-(K8)-S0	1SS355TE-17	1SS355TE-17	#	#	#
D203	1SS302	1SS302	DA204K	DA204K	1SS302	1SS302	1SS302	1SS302
D309	RD5.1SB-T2	RD5.1SB-T2	UDZS-TE17-5.1B	RD5.1SB-T2	RD5.1SB-T2	RD5.1SB-T2	RD5.1SB-T2	RD5.1SB-T2
D316	RD6.8SB-T1	RD6.8SB-T1	DTZ-TT11-6.8B	RD6.8SB-T1	RD6.8SB-T1	RD6.8SB-T1	RD6.8SB-T1	RD6.8SB-T1
D320	RD9.1S-B	RD9.1S-B	UDZS-TE17-9.1B	RD9.1S-B	RD9.1S-B	RD9.1S-B	RD9.1S-B	RD9.1S-B
D321	RD9.1S-B	RD9.1S-B	UDZS-TE17-9.1B	RD9.1S-B	RD9.1S-B	RD9.1S-B	RD9.1S-B	RD9.1S-B
D401	RD9.1S-B	RD9.1S-B	UDZS-TE17-9.1B	RD9.1S-B	RD9.1S-B	RD9.1S-B	RD9.1S-B	RD9.1S-B
D402	RD9.1S-B	RD9.1S-B	UDZS-TE17-9.1B	RD9.1S-B	RD9.1S-B	RD9.1S-B	RD9.1S-B	RD9.1S-B
D403	RD9.1S-B	RD9.1S-B	UDZS-TE17-9.1B	RD9.1S-B	RD9.1S-B	RD9.1S-B	RD9.1S-B	RD9.1S-B
D404	RD9.1S-B	RD9.1S-B	UDZS-TE17-9.1B	RD9.1S-B	RD9.1S-B	RD9.1S-B	RD9.1S-B	RD9.1S-B
D405	RD9.1S-B	RD9.1S-B	UDZS-TE17-9.1B	RD9.1S-B	RD9.1S-B	RD9.1S-B	RD9.1S-B	RD9.1S-B
D406	RD9.1S-B	RD9.1S-B	UDZS-TE17-9.1B	RD9.1S-B	RD9.1S-B	RD9.1S-B	RD9.1S-B	RD9.1S-B
D504	EL1Z	EL1Z	EU2A	EL1Z	EL1Z	EL1Z	EL1Z	EL1Z
D517	RS3FS	RS3FS	ERC06-15S	RS3FS	RS3FS	RS3FS	RS3FS	RS3FS
D521	EL1Z	EL1Z	EU2A	EL1Z	EL1Z	EL1Z	EL1Z	EL1Z
D522	EL1Z	EL1Z	EU2A	EL1Z	EL1Z	EL1Z	EL1Z	EL1Z
D523	EL1Z	EL1Z	EU2A	EL1Z	EL1Z	EL1Z	EL1Z	EL1Z
D603	#	RD33EB3T	#	#	RD33EB3T	RD33EB3T	RD33EB3T	RD33EB3T
D604	#	RGP02-17EL-6433	#	#	RGP02-17EL-6433	RGP02-17EL-6433	RGP02-17EL-6433	RGP02-17EL-6433
D607	#	MA111-(K8).S0	#	#	MA111-(K8).S0	MA111-(K8).S0	MA111-(K8).S0	MA111-(K8).S0
D610	11EQS04	11EQS04	AK04V0	11EQS04	11EQS04	11EQS04	11EQS04	11EQS04
D611	AU-01Z-V1	AU-01Z-V1	10ELS2N-TB5	AU-01Z-V1	AU-01Z-V1	AU-01Z-V1	AU-01Z-V1	AU-01Z-V1
D613	AU-01Z-V1	AU-01Z-V1	10ELS2N-TB5	AU-01Z-V1	AU-01Z-V1	AU-01Z-V1	AU-01Z-V1	AU-01Z-V1
D614	AU-01Z-V1	AU-01Z-V1	10ELS2N-TB5	AU-01Z-V1	AU-01Z-V1	AU-01Z-V1	AU-01Z-V1	AU-01Z-V1
D638	11ES2	11ES2	11ES2-NTA2B	11ES2	11ES2	11ES2	11ES2	11ES2
D901	RD9.1S-B	RD9.1S-B	UDZS-TE17-9.1B	RD9.1S-B	RD9.1S-B	RD9.1S-B	RD9.1S-B	RD9.1S-B
D902	RD9.1S-B	RD9.1S-B	UDZS-TE17-9.1B	RD9.1S-B	RD9.1S-B	RD9.1S-B	RD9.1S-B	RD9.1S-B
D903	RD9.1S-B	RD9.1S-B	UDZS-TE17-9.1B	RD9.1S-B	RD9.1S-B	RD9.1S-B	RD9.1S-B	RD9.1S-B
D904	RD9.1S-B	RD9.1S-B	UDZS-TE17-9.1B	RD9.1S-B	RD9.1S-B	RD9.1S-B	RD9.1S-B	RD9.1S-B
D905	RD9.1S-B	RD9.1S-B	UDZS-TE17-9.1B	RD9.1S-B	RD9.1S-B	RD9.1S-B	RD9.1S-B	RD9.1S-B
IC001	CXP86449-630S	CXP86449-630S	CXP86449-632S	CXP86449-630S	CXP86449-630S	CXP86449-630S	CXP86449-630S	CXP86449-630S
IC100	#	#	S-80743AL-A7-S	S-80743AL-A7-S	S-80743AL-A7-S	#	#	#
IC901	SBX1981-51(21)	SBX1981-51(21)	UD6124G-212	SBX1981-51(21)	SBX1981-51(21)	SBX1981-51(21)	SBX1981-51(21)	SBX1981-51(21)
JR008	#	#	0 :CHIP	0 :CHIP	0 :CHIP	#	#	#
JR107	#	#	0 :CHIP	0 :CHIP	0 :CHIP	#	#	#
JR109	0 :CHIP	0 :CHIP	#	#	#	0 :CHIP	0 :CHIP	0 :CHIP

A(2/2) Board ✲ Mark List

	KV-XA25M50(EM)	KV-XA21M50(GE)	KV-XA21M60(S)	KV-XA21M61(EM)	KV-XA21M61(GE)	KV-XA21M80(ME)	KV-XA21M80(E)	KV-XA21M83
Q002	2SC2712-YG	2SC2712-YG	2SC2712-YG	2SC2712-YG	2SC2712-YG	2SC2712-YG	2SC2712-YG	2SC2712-YG
Q101	2SC2712-YG	2SC2712-YG	2SC2712-YG	2SC2712-YG	2SC2712-YG	2SC2712-YG	2SC2712-YG	2SC2712-YG
Q205	UN2213	UN2213	DTC144EKA	UN2213	UN2213	UN2213	UN2213	UN2213
Q206	UN2213	UN2213	DTC144EKA	UN2213	UN2213	UN2213	UN2213	UN2213
Q207	UN2213	UN2213	DTC144EKA	UN2213	UN2213	UN2213	UN2213	UN2213
Q301	2SA1162-G	2SA1162-G	2SA1037AK-T146	2SA1162-G	2SA1162-G	2SA1162-G	2SA1162-G	2SA1162-G
Q302	2SC2712-YG	2SC2712-YG	2SC1623-L5L6	2SC2712-YG	2SC2712-YG	2SC2712-YG	2SC2712-YG	2SC2712-YG
Q303	2SA1162-G	2SA1162-G	2SA1037AK-T146	2SA1162-G	2SA1162-G	2SA1162-G	2SA1162-G	2SA1162-G
Q305	2SA1162-G	2SA1162-G	2SA1037AK-T146	2SA1162-G	2SA1162-G	2SA1162-G	2SA1162-G	2SA1162-G
Q306	2SC2712-YG	2SC2712-YG	2SC1623-L5L6	2SC2712-YG	2SC2712-YG	2SC2712-YG	2SC2712-YG	2SC2712-YG
Q307	2SC2712-YG	2SC2712-YG	2SC1623-L5L6	2SC2712-YG	2SC2712-YG	2SC2712-YG	2SC2712-YG	2SC2712-YG
Q308	2SA1162-G	2SA1162-G	2SA1037AK-T146	2SA1162-G	2SA1162-G	2SA1162-G	2SA1162-G	2SA1162-G
Q312	2SA1162-G	2SA1162-G	2SA1037AK-T146	2SA1162-G	2SA1162-G	2SA1162-G	2SA1162-G	2SA1162-G
Q313	2SC2712-YG	2SC2712-YG	2SC1623-L5L6	2SC2712-YG	2SC2712-YG	2SC2712-YG	2SC2712-YG	2SC2712-YG
Q314	2SA1162-G	2SA1162-G	2SA1037AK-T146	2SA1162-G	2SA1162-G	2SA1162-G	2SA1162-G	2SA1162-G
Q315	UN2213	UN2213	DTC144EKA	UN2213	UN2213	UN2213	UN2213	UN2213
Q316	2SA1162-G	2SA1162-G	2SA1037AK-T146	2SA1162-G	2SA1162-G	2SA1162-G	2SA1162-G	2SA1162-G
Q317	2SA1162-G	2SA1162-G	2SA1037AK-T146	2SA1162-G	2SA1162-G	2SA1162-G	2SA1162-G	2SA1162-G
Q403	2SA1162-G	2SA1162-G	2SA1037AK-T146	2SA1162-G	2SA1162-G	2SA1162-G	2SA1162-G	2SA1162-G
Q404	2SA1162-G	2SA1162-G	2SA1037AK-T146	2SA1162-G	2SA1162-G	2SA1162-G	2SA1162-G	2SA1162-G
Q503	2SC2712-YG	2SC2712-YG	2SC1623-L5L6	2SC2712-YG	2SC2712-YG	2SC2712-YG	2SC2712-YG	2SC2712-YG
Q507	2SA1162-G	2SA1162-G	2SA1037AK-T146	2SA1162-G	2SA1162-G	2SA1162-G	2SA1162-G	2SA1162-G
Q509	2SC2712-YG	2SC2712-YG	2SC1623-L5L6	2SC2712-YG	2SC2712-YG	2SC2712-YG	2SC2712-YG	2SC2712-YG
Q602	#	2SC2712-YG	#	#	2SC2712-YG	2SC2712-YG	2SC2712-YG	2SC2712-YG
Q603	#	DTA114EKA-T146	#	#	DTA114EKA-T146	DTA114EKA-T146	DTA114EKA-T146	DTA114EKA-T146
Q606	2SC2712-YG	2SC2712-YG	2SC1623-L5L6	2SC2712-YG	2SC2712-YG	2SC2712-YG	2SC2712-YG	2SC2712-YG
Q608	2SC2712-YG	2SC2712-YG	2SC1623-L5L6	2SC2712-YG	2SC2712-YG	2SC2712-YG	2SC2712-YG	2SC2712-YG
Q901	UN2213	UN2213	DTC144EKA	UN2213	UN2213	UN2213	UN2213	UN2213
Q902	UN2213	UN2213	DTC144EKA	UN2213	UN2213	UN2213	UN2213	UN2213
R003	10K :CHIP	10K :CHIP	0 :CHIP	10K :CHIP	10K :CHIP	0 :CHIP	10K :CHIP	0 :CHIP
R028	#	#	10K :CHIP	10K :CHIP	10K :CHIP	#	#	#
R101	#	#	100 :CHIP	100 :CHIP	100 :CHIP	#	#	#
R102	#	#	100 :CHIP	100 :CHIP	100 :CHIP	#	#	#
R230	6.8K :CHIP	6.8K :CHIP	10K :CHIP	10K :CHIP	10K :CHIP	6.8K :CHIP	6.8K :CHIP	6.8K :CHIP
R375	#	#	100 :CHIP	100 :CHIP	100 :CHIP	#	#	#
R622	33 3W :RS	33 3W :RS	8.2 3W :RS	8.2 3W :RS	8.2 3W :RS	33 3W :RS	33 3W :RS	33 3W :RS
R623	#	82K :CHIP	#	#	82K :CHIP	82K :CHIP	82K :CHIP	82K :CHIP
R624	#	47K :CHIP	#	#	47K :CHIP	47K :CHIP	47K :CHIP	47K :CHIP
R626	#	1.0K :CHIP	#	#	1.0K :CHIP	1.0K :CHIP	1.0K :CHIP	1.0K :CHIP
R631	#	47K :CHIP	#	#	47K :CHIP	47K :CHIP	47K :CHIP	47K :CHIP
TU101	BTF-LG433	BTF-LG433	BTF-WG441	BTF-WG441	BTF-WG441	BTF-LG433	BTF-LG433	BTF-LG433

5-4. VOLTAGE LIST MEASUREMENT

A (1/2) BOARD VOLTAGE LIST

Ref	Pin No	Voltage[v]
IC001	1	0
	2	4.5 <4.0>
	3	0.5 <0.3>
	4	5.0
	5	5.0
	6	0
	7	4.0
	8	4.8
	9	0.5
	10	4.8
	11	5.0
	12	0
	13	2.1
	14	2.0
	15	5.0
	16	5.0
	17	0
	18	0
	19	2.0 <2.7>
	20	0.4
	21	5.0
	22	0
	23	5.0
	24	0.4
	25	0
	26	5.0
	27	4.8
	28	5.0
	29	0
	30	0
	31	0
	32	0
	33	5.0
	34	0
	35	0
	36	2.3
	37	2.5
	38	4.9
	39	5.0
	40	0
	41	0.4
	42	0.4
	43	0
	44	5.0
	45	5.0
	46	4.6
	47	5.0
	48	4.4
	49	0
	50	2.0
	51	0
	52	5.0 <0>
IC002	1	0
	2	5.0
	3	4.9
	4	7.3
	5	5.0
	6	0
	7	0
IC003	1	0
	2	0
	3	0
	4	0
	5	5.0
	6	5.0
	7	0
	8	5.0
IC100	1	4.8
	2	4.8
	3	0
IC201	1	0
	2	19.6
	3	10.4
	4	20.0
	5	10.5
	6	19.6
	7	0
	8	20.0
	9	10.3
	10	0.6
	11	0
	12	0
	13	0
	14	0.6
	15	0
IC203	1	4.4
	2	4.4
	3	4.4
	4	4.4
	5	4.4
	6	4.4
	7	4.4
	8	4.4
	9	4.4
	10	4.4
	11	4.4
	12	4.4
	13	4.4
	14	4.4
	15	4.4
	16	4.4
	17	4.4
	18	4.4
	19	4.4
	20	0
	21	4.5
	22	4.5
	23	4.4
	24	8.8
	25	0
	26	3.7
	27	3.7
	28	4.4
IC301	1	3.4
	2	5.0
	3	2.4 <1.9>
	4	5.0
	5	4.8
	6	4.3
	7	1.5
	8	3.8
	9	4.9
	10	3.8
	11	5.0
	12	0
	13	3.8
	14	2.3
	15	3.5
	16	3.4
	17	5.4
	18	7.6
	19	0.8
	20	3.6
	21	3.0
	22	3.8
	23	3.0 <3.5>
	24	1.5
	25	1.5
	26	1.6
	27	0
	28	4.5
	29	4.5
	30	4.5
	31	8.8
	32	4.1
	33	4.1
	34	3.6
	35	8.8
	36	4.5
	37	4.5
	38	0
	39	4.1
	40	4.7
	41	4.7
	42	0
	43	5.1
	44	4.9
	45	7.1 <6.5>
	46	5.0
	47	8.7
	48	0.2
	49	5.1 (4.3) <0>
	50	0
	51	0
	52	#
IC302	1	0.9
	2	0
	3	1.3
	4	0
	5	4.9
	6	4.9
	7	1.0
	8	0
	9	0.5
	10	0
	11	0

A (2/2) BOARD VOLTAGE LIST

Ref	Pin No	Voltage[v]
	12	1.6
	13	0
	14	1.5
	15	0
	16	1.5
IC502	1	1.3
	2	3.6
	3	1.2
	4	0
	5	3.4
	6	3.0
	7	6.8
	8	8.9
IC503	1	1.0
	2	13.6
	3	-12.4 <12.1>
	4	-13.6
	5	0.2
	6	13.8
	7	1.0
IC601	1	3.3 (1.8)
	2	1.7 (0.2)
	3	113.3
	4	19.0 (17.5) <19.3>
	5	1.6 (0.1) <1.9>
IC602	1	121.1
	2	135.0
	3	0
IC603	I	12.8
	G	0
	O	8.9
IC604	I	10.5
	G	0
	O	5.0
IC901	1	4.9
	2	0
	3	4.7 <4.1>
Q002	B	0
	C	5.0
	E	0
Q101	B	2.8
	C	8.9
	E	2.2
Q201	B	0
	C	0
	E	0
Q202	B	0
	C	0
	E	0
Q205	B	0
	C	10.3
	E	0
Q206	B	0
	C	0
	E	0
Q207	B	0
	C	0
	E	0
Q301	B	12.8
	C	0
	E	12.6
Q302	B	1.5
	C	8.1
	E	0.9
Q303	B	8.1
	C	1.5
	E	8.7
Q305	B	8.1
	C	1.8
	E	8.7
Q306	B	1.5
	C	8.1
	E	0.9
Q307	B	4.3
	C	8.7
	E	3.7
Q308	B	3.6
	C	0.5
	E	0.8
Q310	B	0.2
	C	4.9
	E	0
Q312	B	5.3
	C	0
	E	7.0 <6.5>
Q313	B	0
	C	12.7
	E	0
Q314	B	0.5
	C	0
	E	1.0
Q315	B	0
	C	1.6 <1.9>
	E	0
Q316	B	4.1
	C	0
	E	4.7
Q317	B	4.1
	C	0
	E	4.7
Q401	B	0
	C	0
	E	0
Q402	B	0
	C	0
	E	0
Q403	B	4.5
	C	0
	E	5.2
Q404	B	4.5
	C	0
	E	5.2
Q503	B	0
	C	3.6
	E	0
Q505	D	8.6 <8.2>
	G	6.9
	S	0
Q506	B	-0.4
	C	48.6
	E	0
Q507	B	13.0
	C	0
	E	13.5
Q509	B	0.6
	C	0.1
	E	0
Q511	B	0
	C	122.6
	E	0
Q600	B	0
	C	0
	E	0
Q604	B	133.9
	C	0
	E	134.3
Q605	D	121.6
	G	-0.4 <-0.6>
	S	-2.1
Q606	B	-1.5
	C	-0.5
	E	-2.1
Q607	B	0.7
	C	0
	E	0
Q608	B	0
	C	0.7
	E	0
Q901	B	0.1
	C	5.0
	E	0.1
Q902	B	0
	C	5.0
	E	0
PH600	1	128.7
	2	127.7
	3	3.6
	4	17.5

C1 BOARD VOLTAGE LIST

Ref	Pin No	Voltage[v]	Ref	Pin No.	Voltage[v]	Ref	Pin No.	Voltage[v]
IC700	1	1.6	J701	G2	325.8 (328.2) <323.4>	Q5963	B	134.1
	2	1.6		H1	0		C	67.1
	3	1.5		KB	155.8 (153.2) <150.3>		E	134.7
	4	0		KG	158 (155.7) <153.7>	Q5965	B	0.9
	5	4.9<5.3>		KR	160.8 <154.57>		C	67.1
	6	194.5	Q700	B	4.5		E	0.3
	7	160.5 <154>		C	3.6 (3.4) <4.3>	Q5967	B	5.9
	8	157.4 (155) <153>		E	4.9 <5.3>		C	8.9
	9	155.3 (152.2) <150>	Q1802	B	0.3		E	5.6
IC1800	1	6.7		C	3.6	Q5968	B	5.3
	2	6.7		E	0		C	0
	3	6.7	Q5961	B	2.4		E	5.6
	4	6.6		C	8.9			
	5	0		E	1.8			
	6	6.6	Q5962	B	2.4			
	7	6.6		C	5.3			
	8	6.6		E	1.8			
	9	6.6						
	10	13.1						

5-5. WAVEFORMS

A BOARD WAVEFORMS

①  4.8Vp-p (V)	②  5.0Vp-p (V)	③ 4.4Vp-p (V)	④ PAL/SECAM 1.2Vp-p (H)	④ NTSC 1.2Vp-p (H)
⑤ 0.9Vp-p (V)	⑥ PAL/SECAM  0.9Vp-p (H)	⑥ NTSC 1.2Vp-p (H)	⑦ 1.0Vp-p (H)	⑧ 1.0Vp-p (H)
⑨ 1.4Vp-p (H)	⑩ 3.5Vp-p	⑪  3.2Vp-p (H)	⑫ PAL/SECAM 3.2Vp-p (H)	⑫ NTSC 3.2Vp-p (H)
⑬ 1.4Vp-p (H)	⑭ 110Vp-p	⑮ 194Vp-p	⑯  1.5Vp-p (V)	

C BOARD WAVEFORMS

① 25Vp-p (H)	② PAL 89Vp-p (H)	② SECAM 90Vp-p (H)
② NTSC 3.58 80Vp-p (H)	② NTSC 4.43 93Vp-p (H)	③  PAL/SECAM : 95Vp-p (H) NTSC : 86Vp-p (H)
④ 75Vp-p (H)		

KV-XA21M80/XA2183/XA21M50/
KV-XA21M61/XA21M60
RM-952

5-6. PRINTED WIRING BOARDS AND PARTS LOCATION

PRINTING WIRING BOARD

A [SYSTEM CONTROLLER, Y/C JUNGLE, DEFLECTION, TUVIF, FRONT AMP, POWER SUPPLY]

– A Board –

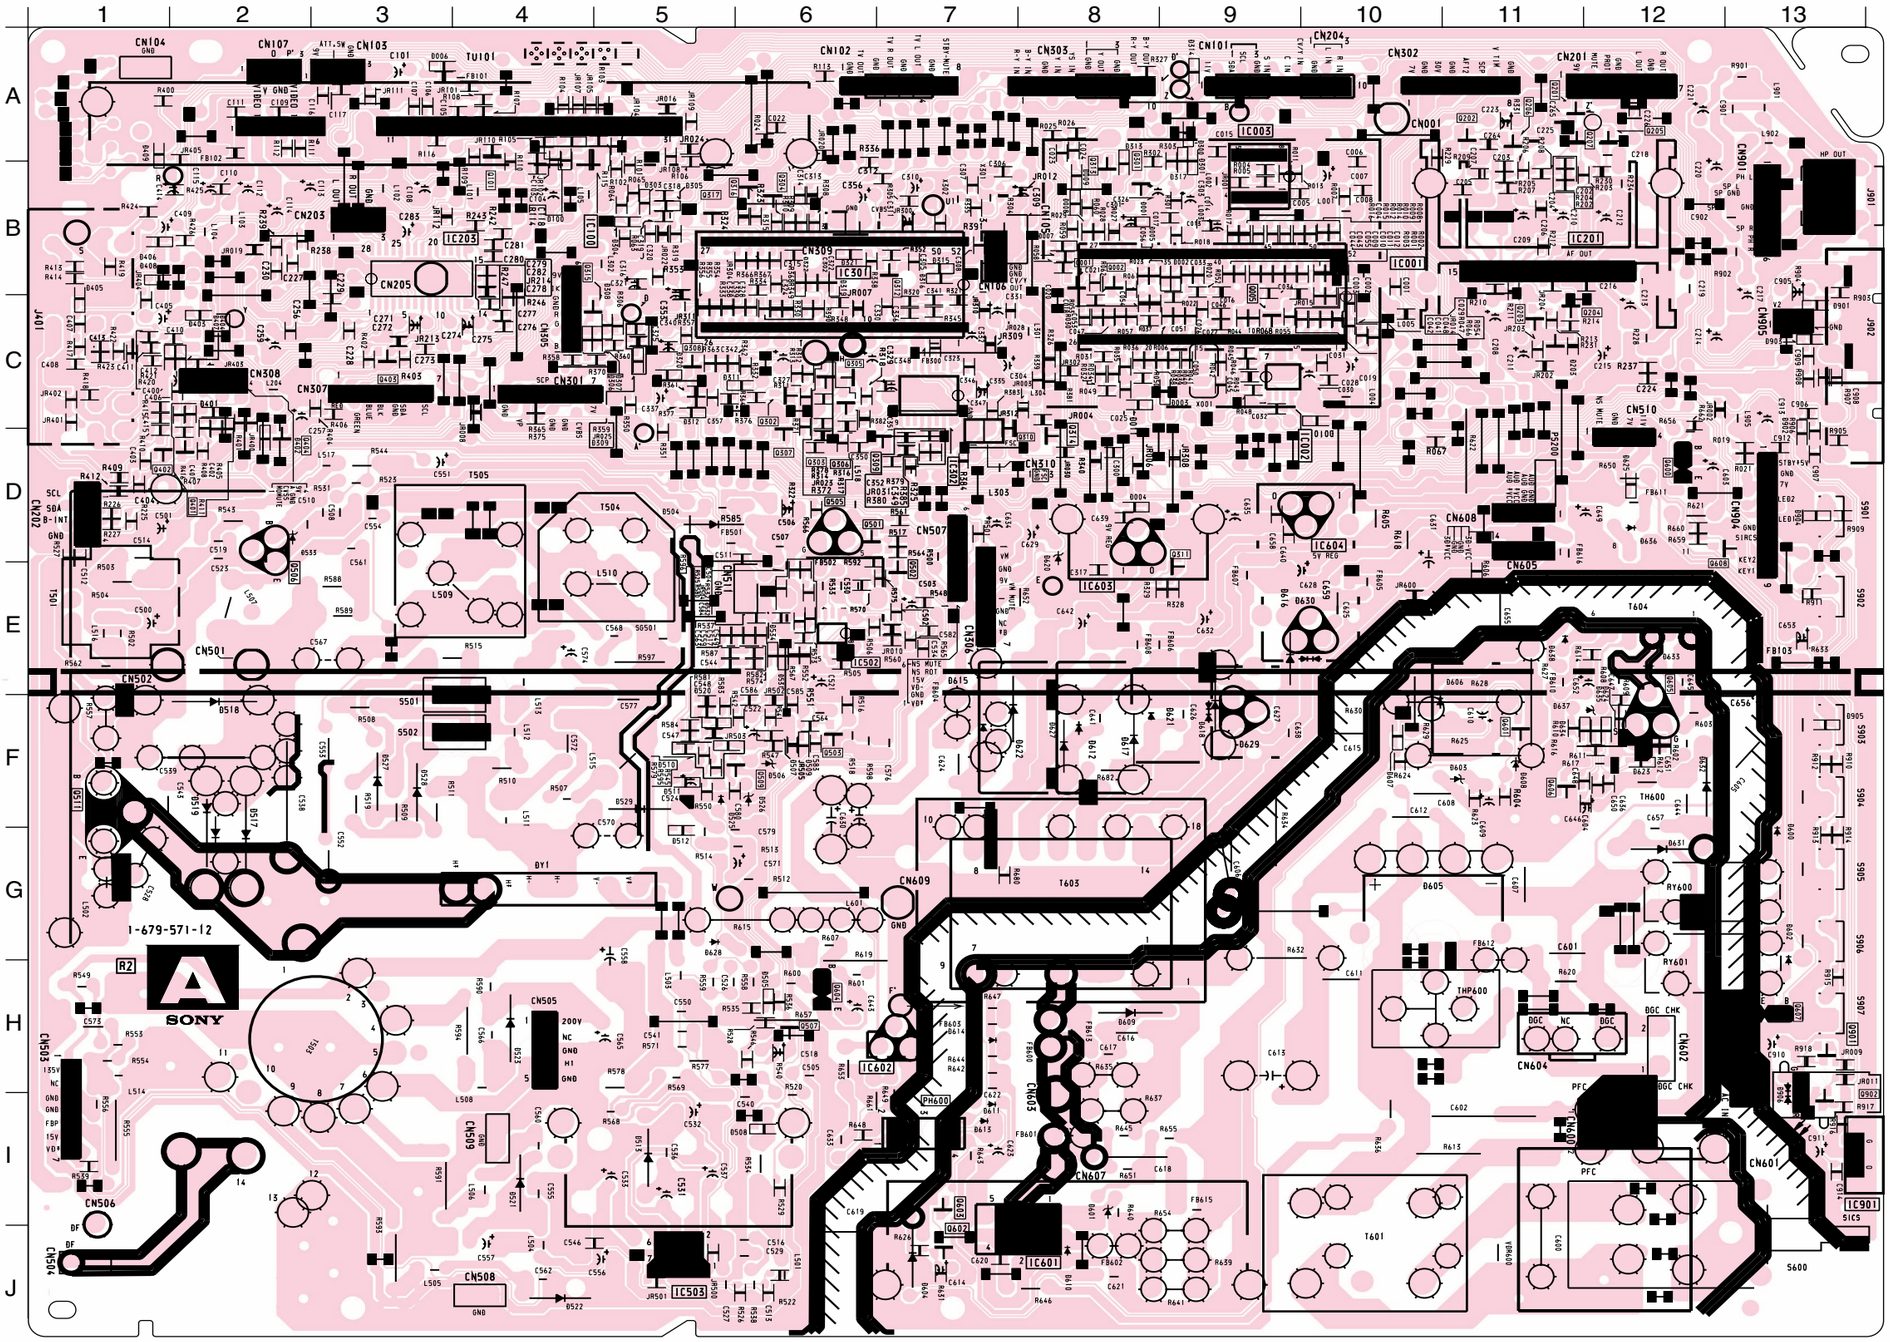

NOTE:
The circuit indicated at left contains high voltage of over 1220 Vp-p. Please pay attention when inspecting or repairing it to prevent an electric shock.

A BOARD

IC

IC001	B-10
IC002	D-10
IC003	A-9
IC100	B-4
IC201	B-12
IC203	B-4
IC301	B-6
IC302	D-7
IC502	E-6
IC503	J-5
IC601	J-8
IC602	H-7
IC603	E-8
IC604	D-10
IC901	I-13

TRANSISTOR

Q001	C-8
Q002	B-8
Q005	B-9
Q101	B-4
Q201	A-11
Q202	A-11
Q203	C-11
Q204	C-11
Q205	A-12
Q206	A-11
Q207	A-12
Q301	A-8
Q302	C-6
Q303	D-6
Q304	B-6
Q305	C-6
Q306	D-6
Q307	D-6
Q308	C-5
Q309	D-7
Q310	D-7
Q311	D-9
Q312	B-7
Q313	B-8
Q314	D-8
Q315	B-4
Q316	B-5
Q317	B-5
Q401	D-2
Q402	D-1
Q403	C-3
Q404	D-2
Q501	D-6
Q502	E-7
Q503	F-6
Q505	D-6
Q506	E-2
Q507	H-6
Q509	F-6
Q511	F-1
Q600	D-12
Q601	F-11
Q602	I-7
Q603	I-7
Q604	H-6
Q605	E-12
Q606	F-11
Q607	H-13
Q608	D-12
Q901	H-13
Q902	H-13

DIODE

D001	B-8
D003	C-9
D004	D-8
D005	B-8
D006	A-3
D007	B-8
D008	B-8
D009	B-8
D100	B-4
D203	C-11
D300	A-9
D301	B-9
D303	B-5
D304	B-5
D305	B-5
D306	C-5
D307	C-5
D308	B-5
D309	D-5
D312	C-5
D313	A-8
D314	A-9
D315	B-7
D317	B-9
D319	B-6
D320	C-5
D321	B-6
D322	B-6
D401	C-2
D402	D-2
D403	C-2
D404	C-2
D405	B-1
D406	B-1
D407	C-2
D408	B-1
D409	A-1
D504	D-5
D505	H-6
D506	F-6
D507	F-6
D508	I7
D509	F-6
D510	F-5
D511	F-5
D512	G-5
D513	I-5
D517	F-2
D518	F-2
D519	F-2
D520	E-5
D521	I-4
D522	J-4
D523	H-4
D525	F-5
D526	F-6
D527	F-3
D528	F-3
D529	F-5
D531	E-6
D533	D-2
D534	E-6
D600	G-13
D601	I-8
D602	G-13
D603	F-11
D604	J-7
D605	G-10
D606	E-11
D607	F-10
D608	F-11
D609	H-8
D610	J-8
D611	I-7
D612	F-8
D613	I-7
D616	E-9
D617	F-8
D618	F-9
D620	D-8
D621	F-9
D622	F-8
D623	F-12
D624	F-12
D625	D-12
D627	F-8
D628	G-5
D629	F-9
D630	E-10
D631	G-10
D632	F-12
D633	E-12
D634	F-11
D635	F-12
D636	D-12
D637	F-11
D638	E-11
D651	E-7
D901	C-13
D902	C-13
D903	C-13
D904	C-13
D905	F-13
D906	H-13

PRINTING WIRING BOARD

C1 [AUDIO PROCESSOR, AUDIO AMP, SUB TUNER, AV IN/OUT, VM DRIVER]

J2 [DVD, 3D TERMINAL]

F [FRONT AV IN, SENSOR, POWER SW]

– C1 Board –

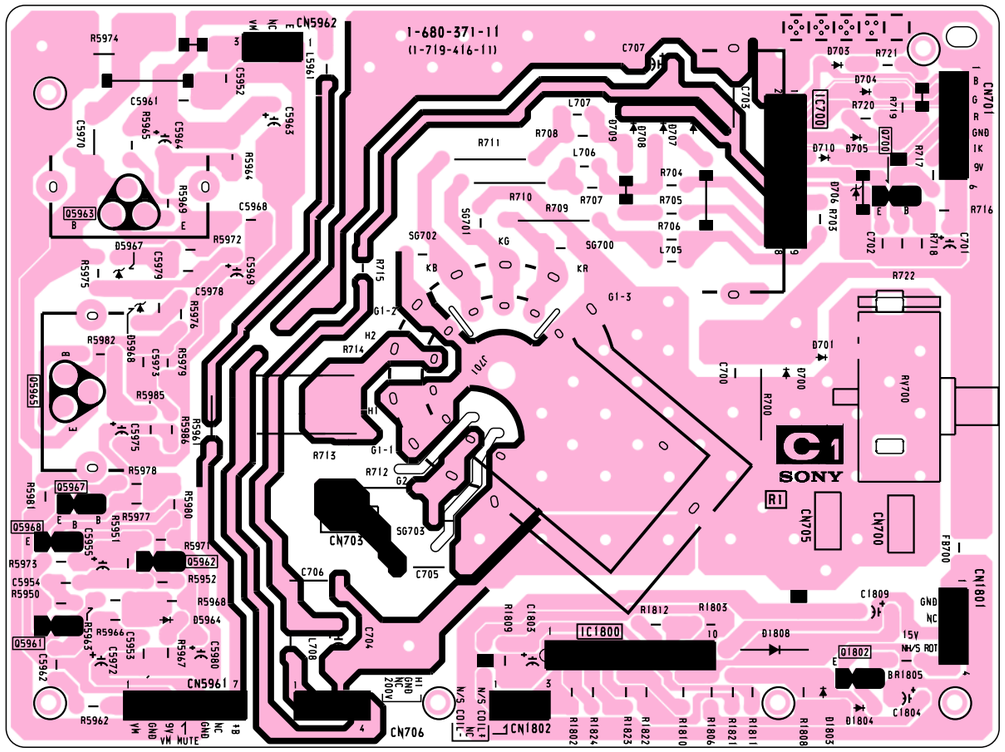

– J2 Board – (KV-XA21M83)

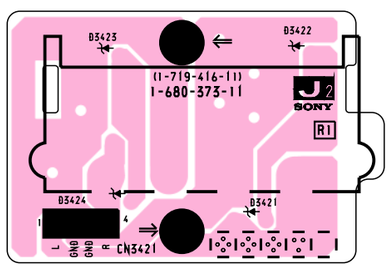

– F Board –

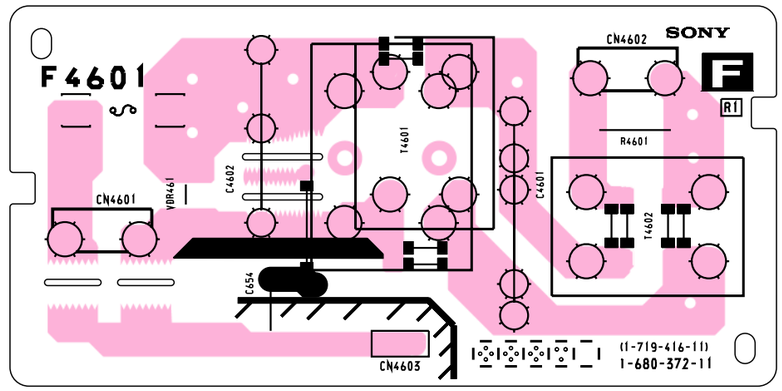

– V1 Board – (KV-XAM61(EM)/M61(GE))

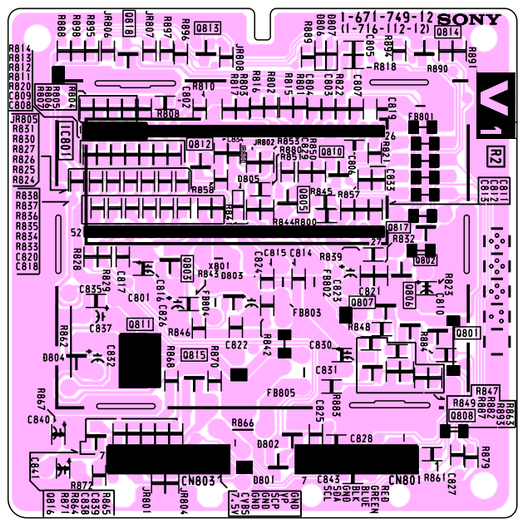

5-7 SEMICONDUCTORS

DIODE

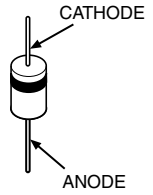	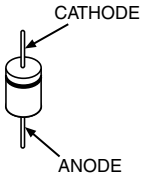		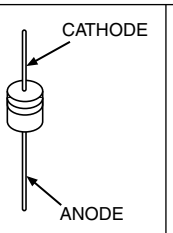	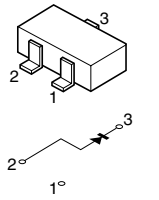	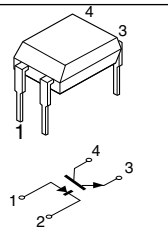
AU-01Z-V1 EL1Z ERA22-08 ERC04-06SE GP08D HSS83TD 31DQ06-FC5 RU4AM-T3 RS3FS	ERD29-08J	DTZ-TT11-15B DTZ10B MA111-(K8).S0 RD5.1SB-T2 RD5.6S-B RD9.1S-B 1SS355TE17	D1NS4 NEQS04 RD6.8ES-B1 RD6.8SB-T1 RD20ES-B2 RD30ES-B2 RD39-ES-B2 1SS119-25 11EQS04 11ES2	1SS302	ON3171-R

TRANSISTOR

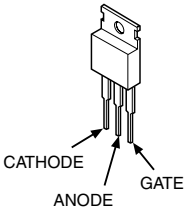	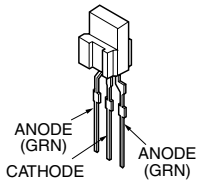	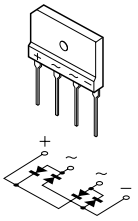			
5P-6M	SPB-26MVWF	D3SB60	RN4Z	2SK2845-LB102	UN2213 UN2216 2SC2712-YG 2SA1162-G 2SD2114K

					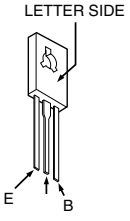
2SC4793 2SA1837	2SA1091-0 2SD2144S-UVW	2SD774-34	IRF614	2SD2578-CA	2SC2688-LK

IC

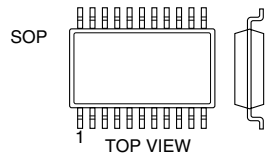 Single In -line Package Pin 8～98	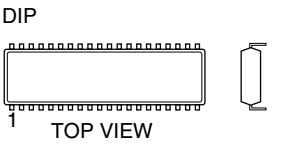 Dual In-line Package Pin 6～98	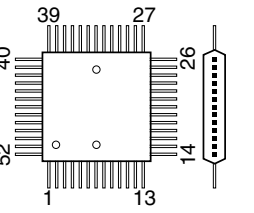
MM1319AFBE NJM2903M	CXP86449-630S CXA2159S M24C08-BN6 TDA7442DO13TR TDA9183T	RU-1P

	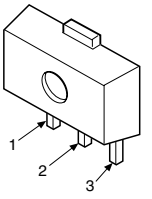		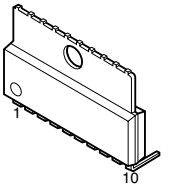	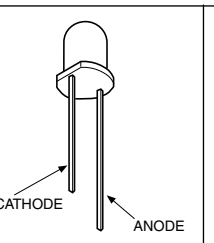	
TDA8172	S-80743AL-A7-S	SBX3081-(01)30	LA6510	NJM78M09FA	SE-135N

	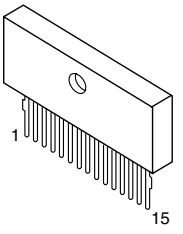	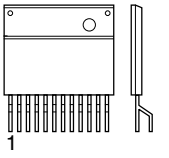 Zig-zag In -line Package Pin 6～99	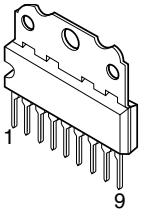
TDA805S	TA8223K	STR-F6654	TDA6107Q/N2

SECTION 6
EXPLODED VIEWS

NOTE:

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

6-1. PICTURE TUBE

● : 7-685-648-79 SCREW +BVTP 3 × 12
■ : 7-685-663-71 SCREW +BVTP 4 × 16

NOTE:

- The picture tube for OCE model is upside down, and the position for the anode cap and tension springs are changed accordingly.

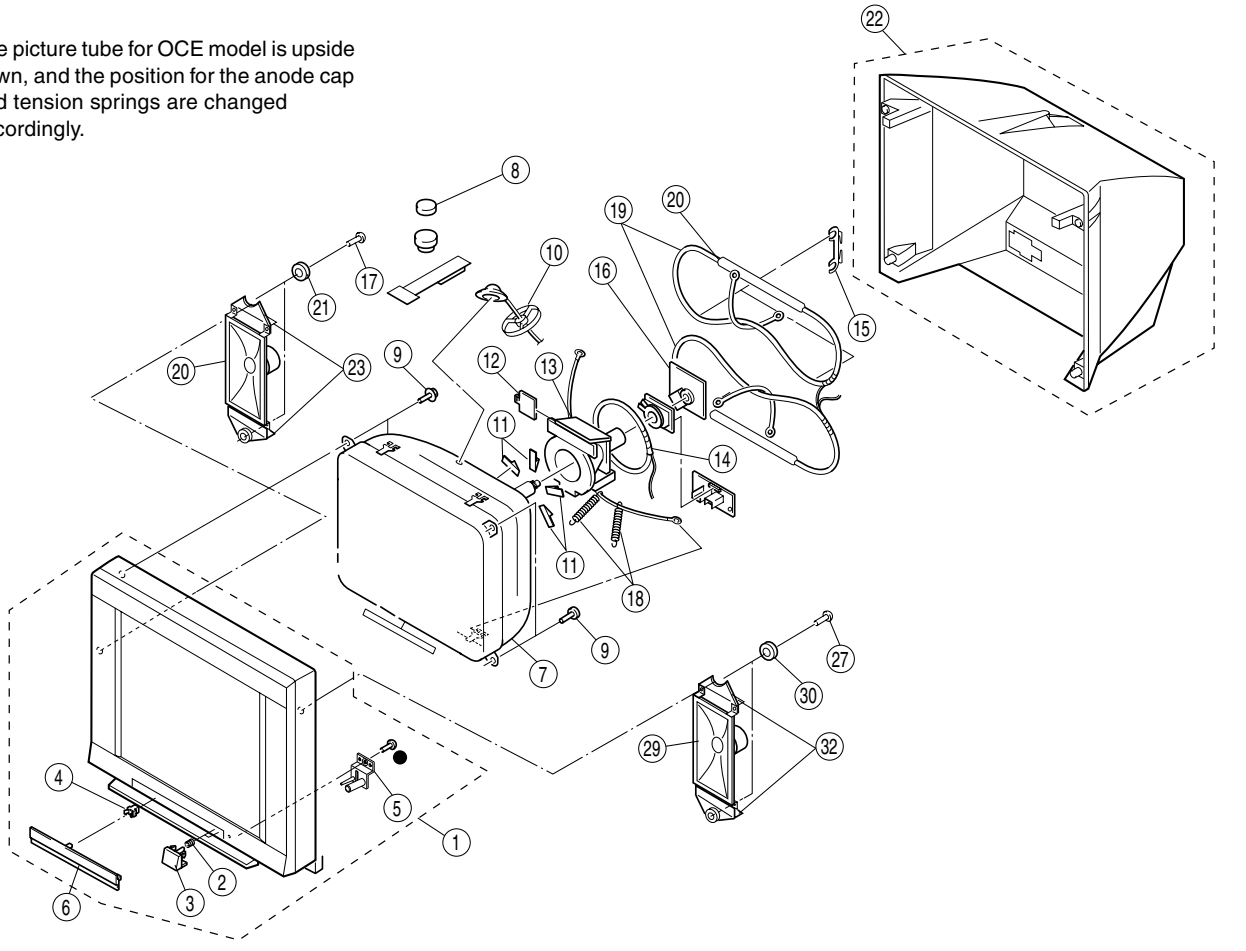

REF. NO.		PART NO.	DESCRIPTION	REMARK
1		X-4038-507-1	BEZNET ASSY	2 - 6
2		4-036-405-11	SPRING, COMPRESSION	
3		4-080-400-01	BUTTON, POWER	
4		4-047-464-01	CATCHER, PUSH	
5	*	4-080-401-01	GUIDE, LIGHT	
6		4-080-399-01	DOOR, CONTROL	
7	⚠	8-738-809-05	PICTURE TUBE (A51LPT70X) (ME/E)	
	⚠	8-738-812-01	PICTURE TUBE (A51LPT70X) (S/GE/EM)	
8		1-452-032-00	MAGNET, DISC	
9		4-365-808-12	SCREW, TAPPING 5+ CROWN WASHER	
10	*	3-704-372-11	HOLDER, HV CABLE	
11		4-046-600-11	SPACER, DY	
12		4-057-714-01	PIECE, TLH CONVERGENCE	

REF. NO.		PART NO.	DESCRIPTION	REMARK
13	⚠	8-451-505-11	DEFLECTION YOKE (Y21RSA-S)	
14		1-452-728-81	COIL, NA ROTATION (RT-154)	
15		4-064-883-03	HOLDER, DGC	
16	*	A-1332-141-A	C1 BOARD, MOUNTED	
17		4-302-404-03	SCREW (WASHED HEAD) (+P4 X 16)	
18		4-078-765-01	SPRING, EXTENSION	
19	⚠	1-419-479-41	COIL, DEGAUSSING (GE/E/ME)	
	⚠	1-416-946-21	COIL, DEGAUSSING (Others)	
20		1-529-125-11	SPEAKER (13 X 7 cm)	
21		4-374-745-21	CUSHION A	
22		4-080-398-01	REAR, COVER ASSY	
23	*	4-046-981-01	BRACKET, SPEAKER	

6-2. CHASSIS

●: 7-685-648-79 SCREW +BVTP 3 × 12
■: 7-685-663-71 SCREW +BVTP 4 × 16

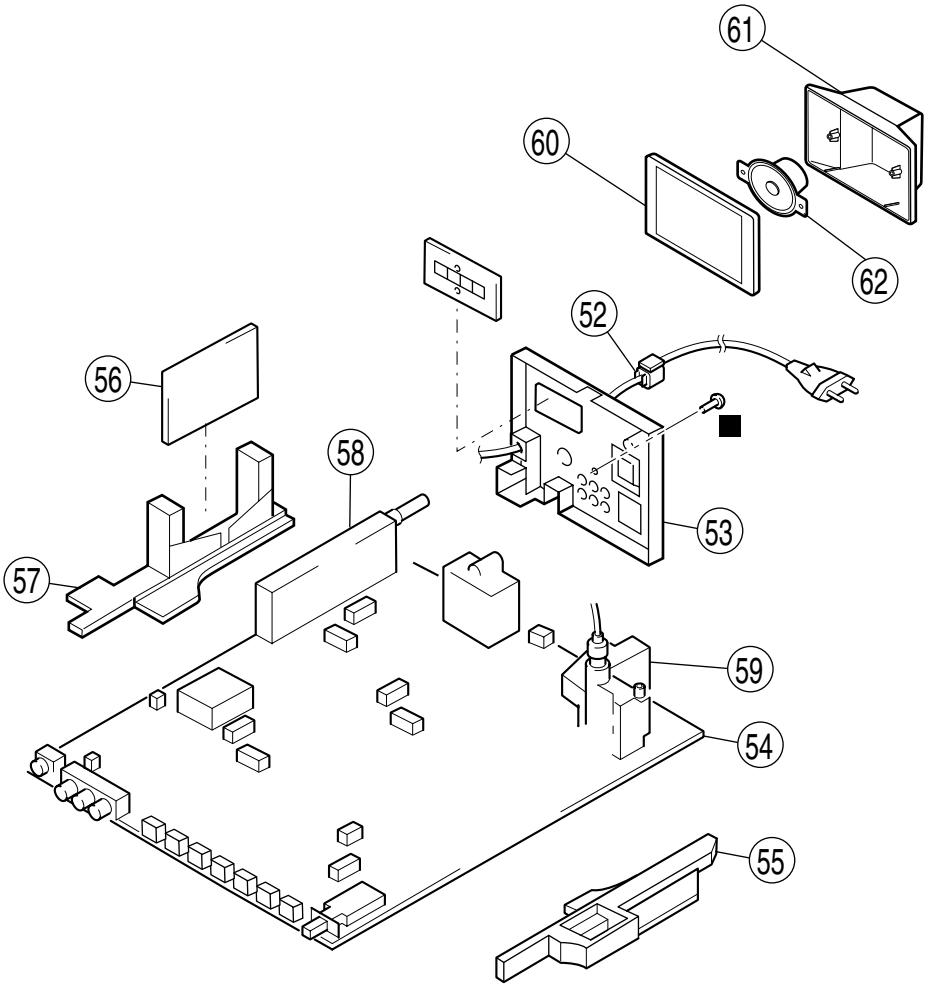

REF. NO.		PART NO.	DESCRIPTION	REMARK
51	⚠	1-757-030-11	CORD, POWER (WITH CONNECTOR)	
52	⚠	4-022-115-00	HOLDER, AC CORD	
53	*	4-067-167-51	BRACKET TERMINAL	
54	*	A-1299-395-A	A BOARD, COMPLETE	
55	*	4-067-876-11	RAIL GUIDE (R)	

REF. NO.		PART NO.	DESCRIPTION	REMARK
56	*	A-1241-450-A	F BOARD, MOUNTED	
57	*	4-067-875-11	RAIL GUIDE (L)	
58		8-598-451-30	TUNER, FSS BTF-WG441	
59		1-453-293-11	TRANSFORMER ASSY FLYBACK (NX-1748//M3A4)	
60		4-080-403-01	BOX, FRONT (TWEETER)	
61		4-080-402-01	BOX, REAR (TWEETER)	
62		1-529-968-11	SPEAKER (5CM)	

SECTION 7
ELECTRICAL PARTS LIST

A

NOTE:

The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board name.

- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- All resistors are in ohms
- F : nonflammable

CAPACITORS
- MF : μF, PF : μμF

COILS
- MMH : mH, UH : μH

REF. NO.	PART NO.	DESCRIPTION			REMARK
*	A-1299-425-A	A BOARD COMPLETE (KV-XA21M50(MALAYSIA))			
*	A-1299-427-A	A BOARD COMPLETE (KV-XA21M50(GE))			
*	A-1299-434-A	A BOARD COMPLETE (KV-XA21M60(THAILAND))			
*	A-1299-424-A	A BOARD COMPLETE (KV-XA21M61(MALAYSIA))			
*	A-1299-441-A	A BOARD COMPLETE (KV-XA21M61(GE))			
*	A-1299-417-A	A BOARD COMPLETE (KV-XA21M80(E))			
*	A-1299-415-A	A BOARD COMPLETE (KV-XA21M80(ME))			
*	A-1299-418-A	A BOARD COMPLETE (KV-XA21M83(ME))			
		**********			
*	4-055-304-01	HOLDER, LED			
*	4-067-182-03	HOLDER, FBT			
	4-352-844-01	PIN, LEAD, COATING			
	4-382-854-11	SCREW (M3X10), P, SW (+)			
	4-382-854-21	SCREW (M3X14), P, SW (+)			
	7-685-648-79	SCREW +BVTP	3X12 TYPE2 IT-3		
		<CAPACITOR>			
C003	1-163-251-11	CERAMIC CHIP (KV-XA21M60/M80(ME)/M83)	100PF	5.00% 50V	
C004	1-163-001-11	CERAMIC CHIP	220PF	10.00% 50V	
C005	1-163-001-11	CERAMIC CHIP	220PF	10.00% 50V	
C006	1-164-004-11	CERAMIC CHIP	0.1UF	10.00% 25V	
C007	1-104-664-11	ELECT	47UF	20.00% 16V	
C008	1-163-251-11	CERAMIC CHIP	100PF	5.00% 50V	
C010	1-163-251-11	CERAMIC CHIP	100PF	5.00% 50V	
C012	1-163-251-11	CERAMIC CHIP	100PF	5.00% 50V	
C013	1-163-021-91	CERAMIC CHIP	0.01UF	10.00% 50V	
C014	1-104-664-11	ELECT	47UF	20.00% 25V	
C015	1-163-009-11	CERAMIC CHIP	0.001UF	10.00% 50V	
C016	1-163-113-00	CERAMIC CHIP	68PF	5.00% 50V	
C017	1-163-113-00	CERAMIC CHIP	68PF	5.00% 50V	
C019	1-104-664-11	ELECT	47UF	20.00% 25V	
C022	1-163-227-11	CERAMIC CHIP	10PF	0.50PF 50V	
C023	1-163-227-11	CERAMIC CHIP	10PF	0.50PF 50V	
C024	1-163-227-11	CERAMIC CHIP	10PF	0.50PF 50V	
C026	1-164-004-11	CERAMIC CHIP	0.1UF	10.00% 25V	
C027	1-164-004-11	CERAMIC CHIP	0.1UF	10.00% 25V	
C028	1-163-037-11	CERAMIC CHIP	0.022UF	10.00% 50V	
C030	1-126-965-11	ELECT	22UF	20.00% 50V	
C031	1-164-004-11	CERAMIC CHIP	0.1UF	10.00% 25V	
C032	1-107-823-11	CERAMIC CHIP	0.47UF	10.00% 16V	
C041	1-163-251-11	CERAMIC CHIP	100PF	5.00% 50V	
C042	1-163-251-11	CERAMIC CHIP	100PF	5.00% 50V	
C043	1-163-251-11	CERAMIC CHIP	100PF	5.00% 50V	
C044	1-163-251-11	CERAMIC CHIP	100PF	5.00% 50V	
C047	1-163-251-11	CERAMIC CHIP	100PF	5.00% 50V	
C048	1-163-251-11	CERAMIC CHIP	100PF	5.00% 50V	
C050	1-163-251-11	CERAMIC CHIP	100PF	5.00% 50V	
C051	1-163-251-11	CERAMIC CHIP	100PF	5.00% 50V	
C053	1-163-251-11	CERAMIC CHIP	100PF	5.00% 50V	
C054	1-163-251-11	CERAMIC CHIP	100PF	5.00% 50V	
C055	1-163-251-11	CERAMIC CHIP	100PF	5.00% 50V	
C103	1-164-004-11	CERAMIC CHIP	0.1UF	10.00% 25V	
C104	1-104-665-11	ELECT	100UF	20.00% 10V	
C107	1-163-005-11	CERAMIC CHIP	470PF	10.00% 50V	
C108	1-104-664-11	ELECT	47UF	20.00% 16V	
C109	1-163-005-11	CERAMIC CHIP	470PF	10.00% 50V	
C110	1-163-005-11	CERAMIC CHIP	470PF	10.00% 50V	
C111	1-163-005-11	CERAMIC CHIP	470PF	10.00% 50V	
C112	1-104-664-11	ELECT	47UF	20.00% 16V	
C113	1-104-664-11	ELECT	47UF	20.00% 25V	
C114	1-126-967-11	ELECT	47UF	20.00% 50V	
C118	1-110-501-11	CERAMIC CHIP	0.33UF	10.00% 16V	
C202	1-163-023-00	CERAMIC CHIP	0.015UF	10.00% 50V	
C203	1-163-023-00	CERAMIC CHIP	0.015UF	10.00% 50V	
C204	1-130-489-00	MYLAR	0.033UF	5.00% 50V	
C205	1-163-019-00	CERAMIC CHIP	0.0068UF	10.00% 50V	
C206	1-163-019-00	CERAMIC CHIP	0.0068UF	10.00% 50V	
C207	1-130-489-00	MYLAR	0.033UF	5.00% 50V	
C208	1-126-964-11	ELECT	10UF	20.00% 50V	
C209	1-126-964-11	ELECT	10UF	20.00% 50V	
C210	1-126-933-11	ELECT	100UF	20.00% 16V	
C211	1-126-941-11	ELECT	470UF	20.00% 25V	
C212	1-126-933-11	ELECT	100UF	20.00% 16V	
C213	1-126-933-11	ELECT	100UF	20.00% 16V	
C214	1-126-942-61	ELECT	1000UF	20.00% 25V	
C215	1-126-942-61	ELECT	1000UF	20.00% 25V	
C216	1-163-021-91	CERAMIC CHIP	0.01UF	10.00% 50V	
C217	1-126-964-11	ELECT	10UF	20.00% 50V	
C218	1-136-167-00	FILM	0.15UF	5.00% 50V	
C219	1-136-167-00	FILM	0.15UF	5.00% 50V	
C220	1-126-942-61	ELECT	1000UF	20.00% 25V	
C221	1-126-964-11	ELECT	10UF	20.00% 50V	
C223	1-126-965-11	ELECT	22UF	20.00% 50V	
C224	1-163-133-00	CERAMIC CHIP	470PF	5.00% 50V	
C225	1-109-982-11	CERAMIC CHIP	1UF	10.00% 10V	
C226	1-109-982-11	CERAMIC CHIP	1UF	10.00% 10V	
C227	1-164-346-11	CERAMIC CHIP	1UF	16V	
C228	1-216-077-91	RES-CHIP	15K	5% 1/10W	
C229	1-216-077-91	RES-CHIP	15K	5% 1/10W	

A

REF. NO.	PART NO.	DESCRIPTION			REMARK
C230	1-164-346-11	CERAMIC CHIP	1UF		16V
C256	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C259	1-126-933-11	ELECT	100UF	20.00%	16V
C264	1-164-505-11	CERAMIC CHIP	2.2UF		16V
C265	1-164-505-11	CERAMIC CHIP	2.2UF		16V
C271	1-117-720-11	CERAMIC CHIP	4.7UF		10V
C272	1-126-961-11	ELECT	2.2UF	20.00%	50V
C273	1-117-720-11	CERAMIC CHIP	4.7UF		10V
C274	1-126-961-11	ELECT	2.2UF	20.00%	50V
C275	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C276	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C277	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C278	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C279	1-163-010-11	CERAMIC CHIP	0.0012UF	10.00%	50V
C280	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C281	1-163-018-00	CERAMIC CHIP	0.0056UF	10.00%	50V
C282	1-163-018-00	CERAMIC CHIP	0.0056UF	10.00%	50V
C283	1-126-965-11	ELECT	22UF	20.00%	50V
C301	1-126-935-11	ELECT	470UF	20.00%	16V
C302	1-163-005-11	CERAMIC CHIP	470PF	10.00%	50V
C303	1-126-964-11	ELECT	10UF	20.00%	50V
C304	1-126-967-11	ELECT	47UF	20.00%	50V
C305	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C306	1-163-233-11	CERAMIC CHIP	18PF	5.00%	50V
C307	1-163-233-11	CERAMIC CHIP	18PF	5.00%	50V
C308	1-163-259-91	CERAMIC CHIP	220PF	5.00%	50V
C309	1-137-378-11	MYLAR	0.22UF	5.00%	50V
C310	1-126-963-11	ELECT	4.7UF	20.00%	50V
C311	1-126-964-11	ELECT	10UF	20.00%	50V
C312	1-164-346-11	CERAMIC CHIP	1UF		16V
C313	1-164-346-11	CERAMIC CHIP	1UF		16V
C315	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C316	1-104-664-11	ELECT	47UF	20.00%	25V
C317	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C318	1-163-031-11	CERAMIC CHIP	0.01UF		50V
C319	1-163-031-11	CERAMIC CHIP	0.01UF		50V
C320	1-163-031-11	CERAMIC CHIP	0.01UF		50V
C322	1-163-005-11	CERAMIC CHIP	470PF	10.00%	50V
C324	1-163-017-00	CERAMIC CHIP	0.0047UF	10.00%	50V
C325	1-126-960-11	ELECT	1UF	20.00%	50V
C327	1-126-965-11	ELECT	22UF	20.00%	50V
C328	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C329	1-126-963-11	ELECT	4.7UF	20.00%	50V
C330	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C332	1-126-963-11	ELECT	4.7UF	20.00%	50V
C335	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C336	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C337	1-126-961-11	ELECT	2.2UF	20.00%	50V
C338	1-163-017-00	CERAMIC CHIP	0.0047UF	10.00%	50V
C341	1-115-340-11	CERAMIC CHIP	0.22UF	10.00%	25V
C342	1-163-259-91	CERAMIC CHIP	220PF	5.00%	50V
C347	1-126-933-11	ELECT	100UF	20.00%	16V
C348	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C349	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C350	1-216-295-11	SHORT	0		
C351	1-126-964-11	ELECT	10UF	20.00%	50V
C352	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C353	1-126-960-11	ELECT	1UF	20.00%	50V
C356	1-126-962-11	ELECT	3.3UF	20.00%	50V
C357	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C401	1-164-346-11	CERAMIC CHIP	1UF		16V
C402	1-164-346-11	CERAMIC CHIP	1UF		16V
C403	1-163-005-11	CERAMIC CHIP	470PF	10.00%	50V
C404	1-163-005-11	CERAMIC CHIP	470PF	10.00%	50V
C405	1-126-935-11	ELECT	470UF	20.00%	16V
C406	1-164-346-11	CERAMIC CHIP	1UF		16V
C407	1-164-346-11	CERAMIC CHIP	1UF		16V
C408	1-163-133-00	CERAMIC CHIP	470PF	5.00%	50V
C409	1-126-963-11	ELECT	4.7UF	20.00%	50V
C415	1-163-133-00	CERAMIC CHIP	470PF	5.00%	50V
C502	1-163-145-00	CERAMIC CHIP	0.0015UF	5.00%	50V
C506	1-107-638-11	ELECT	33UF	20.00%	160V
C507	1-161-830-00	CERAMIC	0.0047UF		500V
C510	1-102-112-00	CERAMIC	330PF	10.00%	50V
C512	1-163-989-11	CERAMIC CHIP	0.033UF	10.00%	25V
C513	1-163-263-11	CERAMIC CHIP	330PF	5.00%	50V
C514	1-106-383-00	MYLAR	0.047UF	10.00%	200V
C517	1-164-182-11	CERAMIC CHIP	0.0033UF	10.00%	50V
C518	1-104-665-11	ELECT	100UF	20.00%	10V
C519	1-102-212-00	CERAMIC	820PF	10.00%	500V
C521	1-126-934-11	ELECT	220UF	20.00%	16V
C522	1-126-933-11	ELECT	100UF	20.00%	16V
C523	1-102-002-00	CERAMIC	680PF	10.00%	500V
C524	1-126-967-11	ELECT	47UF	20.00%	50V
C526	1-130-495-00	MYLAR	0.1UF	5.00%	50V
C527	1-102-820-00	CERAMIC	330PF	5.00%	50V
C528	1-162-134-11	CERAMIC	470PF	10.00%	2KV
C530	1-137-372-11	MYLAR	0.022UF	5.00%	50V
C531	1-126-961-11	ELECT	2.2UF	20.00%	50V
C532	1-126-941-11	ELECT	470UF	20.00%	25V
C533	1-126-941-11	ELECT	470UF	20.00%	25V
C534	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C536	1-130-495-00	MYLAR	0.1UF	5.00%	50V
C537	1-126-969-11	ELECT	220UF	20.00%	50V
C538	1-117-657-21	FILM	8500PF	3.00%	1.2KV
C539	1-129-746-91	FILM	0.039UF	5.00%	400V
C540	1-136-171-00	FILM	0.33UF	5.00%	50V
C546	1-165-319-11	CERAMIC CHIP	0.1UF		50V
C549	1-163-017-00	CERAMIC CHIP	0.0047UF	10.00%	50V
C550	1-106-220-00	MYLAR	0.1UF	10.00%	100V
C551	1-126-960-11	ELECT	1UF	20.00%	50V
C552	1-162-116-00	CERAMIC	680PF	10.00%	2KV
C553	1-162-116-00	CERAMIC	680PF	10.00%	2KV
C554	1-137-417-11	MYLAR	0.0047UF	10.00%	200V
C556	1-126-941-11	ELECT	470UF	20.00%	25V
C557	1-126-941-11	ELECT	470UF	20.00%	25V
C558	1-123-024-21	ELECT	33UF		160V
C560	1-102-228-00	CERAMIC	470PF	10.00%	500V
C561	1-129-708-91	FILM	0.0033UF	5.00%	630V
C562	1-102-228-00	CERAMIC	470PF	10.00%	500V
C564	1-163-038-11	CERAMIC CHIP	0.1UF		25V
C565	1-107-655-11	ELECT	47UF	20.00%	250V
C566	1-102-244-00	CERAMIC	220PF	10.00%	500V
C567	1-115-521-11	FILM	0.82UF	5.00%	250V
C568	1-102-228-00	CERAMIC	470PF	10.00%	500V
C570	1-115-520-11	FILM	0.68UF	5.00%	250V

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

A

REF. NO.		PART NO.	DESCRIPTION			REMARK
C573		1-106-375-12	MYLAR	0.022UF	99%	200V
C574		1-107-636-11	ELECT	10UF	20.00%	160V
C576		1-130-495-00	MYLAR	0.1UF	5.00%	50V
C577		1-106-395-00	MYLAR	0.15UF	10.00%	200V
C582		1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C586		1-216-295-11	SHORT	0		
C600	⚠	1-104-705-11	MYLAR	0.1UF	20.00%	250V
C602	⚠	1-104-705-11	MYLAR	0.1UF	20.00%	250V
C604		1-163-009-11	CERAMIC CHIP	0.001UF	10.00%	50V
C605	⚠	1-127-942-51	CERAMIC	330PF	10%	250V
C606	⚠	1-127-942-51	CERAMIC	330PF	10%	250V
C607		1-161-830-00	CERAMIC	0.0047UF	99%	500V
C608		1-161-830-00	CERAMIC	0.0047UF	99%	500V
C609		1-126-968-11	ELECT (Except KV-XA21M50(Malaysia)/M60/ M61(Malaysia)	100UF	20.00%	50V
C610		1-126-964-11	ELECT	10UF	20.00%	50V
C611		1-161-830-00	CERAMIC	0.0047UF	99%	500V
C612		1-161-830-00	CERAMIC	0.0047UF	99%	500V
C613		1-117-802-11	ELECT (KV-XA21M50(Malaysia)/M60/M61(Malaysia))	180UF	20.00%	450V
C613		1-117-752-11	ELECT(BLOCK) (Except KV-XA21M50(Malaysia)/ M60/M61(Malaysia))	330UF	20.00%	450V
C614		1-126-964-11	ELECT (Except KV-XA21M50(Malaysia)/ M60/M61(Malaysia))	10UF	20.00%	50V
C616		1-130-202-00	FILM	0.022UF	5.00%	400V
C617		1-107-792-11	CERAMIC	100PF	5.00%	1KV
C618		1-125-893-11	FILM	680PF	3.00%	1.5KV
C619	⚠	1-119-886-51	CERAMIC	470PF	10.00%	250V
C620		1-163-133-00	CERAMIC CHIP	470PF	5.00%	50V
C621		1-102-114-00	CERAMIC	470PF	10.00%	50V
C622		1-102-074-00	CERAMIC	0.001UF	10.00%	50V
C623		1-104-665-11	ELECT	100UF	20.00%	25V
C624		1-104-331-11	CERAMIC	0.0022UF	10.00%	1KV
C627		1-102-002-00	CERAMIC	680PF	10.00%	500V
C628		1-126-942-61	ELECT	1000UF	20.00%	25V
C629		1-126-964-11	ELECT	10UF	20.00%	50V
C630		1-123-024-21	ELECT	33UF		160V
C633		1-104-999-11	MYLAR	0.1UF	10.00%	200V
C634		1-126-933-11	ELECT	100UF	20.00%	16V
C635		1-104-665-11	ELECT	100UF	20.00%	10V
C636		1-104-760-11	CERAMIC CHIP	0.047UF	10.00%	50V
C639		1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C640		1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C641		1-102-002-00	CERAMIC	680PF	10.00%	500V
C642		1-107-890-11	ELECT	2200UF	20.00%	25V
C643		1-104-665-11	ELECT	100UF	20.00%	10V
C644		1-104-331-11	CERAMIC	0.0022UF	10.00%	1KV
C645		1-137-605-11	MYLAR	0.01UF	10.00%	250V
C646		1-107-679-91	ELECT	10UF	20.00%	450V
C647		1-163-275-11	CERAMIC CHIP	0.001UF	5.00%	50V
C649		1-126-940-11	ELECT	330UF	20.00%	25V
C650		1-163-275-11	CERAMIC CHIP	0.001UF	5.00%	50V
C651		1-163-133-00	CERAMIC CHIP	470PF	5.00%	50V
C652		1-126-965-11	ELECT	22UF	20.00%	50V
C653		1-104-664-11	ELECT	47UF	20.00%	25V
C657		1-101-821-00	CERAMIC	0.0022UF		500V
C658		1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C901		1-136-153-00	FILM	0.01UF	5.00%	50V
C902		1-136-153-00	FILM	0.01UF	5.00%	50V
C905		1-126-963-11	ELECT	4.7UF	20.00%	50V
C906		1-164-346-11	CERAMIC CHIP	1UF		16V
C907		1-163-133-00	CERAMIC CHIP	470PF	5.00%	50V
C908		1-163-133-00	CERAMIC CHIP	470PF	5.00%	50V
C909		1-164-346-11	CERAMIC CHIP	1UF		16V
C910		1-126-967-11	ELECT	47UF	20.00%	50V
C911		1-126-967-11	ELECT	47UF	20.00%	50V
C912		1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C913		1-104-665-11	ELECT	100UF	20.00%	10V
C914		1-163-133-00	CERAMIC CHIP	470PF	5.00%	50V
			<CONNECTOR>			
CN104		1-695-915-11	TAB (CONTACT)			
CN202	*	1-785-608-11	PIN, CONNECTOR 4P			
CN203	*	1-564-506-11	PLUG, CONNECTOR 3P			
CN204	*	1-564-506-11	PLUG, CONNECTOR 3P			
CN301	*	1-774-813-11	CONNECTOR, BOARD TO BOARD 7P (KV-XA21M61)			
CN305	*	1-564-509-11	PLUG, CONNECTOR 6P			
CN306	*	1-564-510-11	PLUG, CONNECTOR 7P			
CN307	*	1-774-813-11	CONNECTOR, BOARD TO BOARD 7P (KV-XA21M61)			
CN505		1-564-507-11	PLUG, CONNECTOR 4P			
CN507	*	1-564-507-11	PLUG, CONNECTOR 4P (Except KV-XA21M60)			
CN601		1-580-843-11	PIN, CONNECTOR (POWER)			
CN602	*	1-508-786-00	PIN, CONNECTOR (5MM PITCH) 2P (Except KV-XA21M60)			
CN604	*	1-691-134-11	PIN, CONNECTOR (PC BOARD) 2P (KV-XA21M50(Malaysia)/M61(Malaysia))			
CN604	*	1-573-963-11	PIN, CONNECTOR (PC BOARD) 3P (Except KV-XA21M50(ME)/M61(Malaysia))			
CN609	*	1-508-784-21	PIN, CONNECTOR (5MM PITCH) 1P			
CN901	*	1-564-507-11	PLUG, CONNECTOR 4P			
			<DIODE>			
D001		8-719-988-61	1SS355TE-17			
D005		8-719-988-61	1SS355TE-17			
D006		8-719-988-61	1SS355TE-17			
D010		8-719-070-16	NNCD9.1A-T1 (Except KV-XA21M60)			
D011		8-719-070-16	NNCD9.1A-T1 (Except KV-XA21M60)			
D100		8-719-988-61	1SS355TE-17 (KV-XA21M61)			
D100		8-719-073-01	MA111-(K8).S0 (KV-XA21M60 Only)			
D203		8-719-820-41	1SS302 (Except KV-XA21M60)			
D203		8-719-914-42	DA204K (KV-XA21M60 Only)			
D300		1-216-295-11	SHORT	0		
D301		8-719-988-61	1SS355TE-17			
D306		8-719-988-61	1SS355TE-17			
D307		8-719-988-61	1SS355TE-17			
D308		8-719-988-61	1SS355TE-17			
D309		8-719-159-10	RD5.1SB-T2 (Except KV-XA21M60)			

A

REF. NO.	PART NO.	DESCRIPTION	REMARK
D309	8-719-069-54	UDZS-TE17-5.1B (KV-XA21M60 Only)	
D311	8-719-988-61	1SS355TE-17	
D312	8-719-988-61	1SS355TE-17	
D313	8-719-988-61	1SS355TE-17	
D314	8-719-988-61	1SS355TE-17	
D315	8-719-988-61	1SS355TE-17	
D316	8-719-037-02	RD6.8SB-T1 (Except KV-XA21M60)	
D316	8-719-978-33	DTZ-TT11-6.8B (KV-XA21M60 Only)	
D320	8-719-158-35	RD9.1S-B (Except KV-XA21M60)	
D320	8-719-069-60	UDZS-TE17-9.1B (KV-XA21M60 Only)	
D321	8-719-158-35	RD9.1S-B (Except KV-XA21M60)	
D321	8-719-069-60	UDZS-TE17-9.1B (KV-XA21M60 Only)	
D401	8-719-158-35	RD9.1S-B (Except KV-XA21M60)	
D401	8-719-069-60	UDZS-TE17-9.1B (KV-XA21M60 Only)	
D402	8-719-158-35	RD9.1S-B (Except KV-XA21M60)	
D402	8-719-069-60	UDZS-TE17-9.1B (KV-XA21M60 Only)	
D403	8-719-158-35	RD9.1S-B (Except KV-XA21M60)	
D403	8-719-069-60	UDZS-TE17-9.1B (KV-XA21M60 Only)	
D404	8-719-158-35	RD9.1S-B (Except KV-XA21M60)	
D404	8-719-069-60	UDZS-TE17-9.1B (KV-XA21M60 Only)	
D405	8-719-158-35	RD9.1S-B (Except KV-XA21M60)	
D405	8-719-069-60	UDZS-TE17-9.1B (KV-XA21M60 Only)	
D406	8-719-158-35	RD9.1S-B (Except KV-XA21M60)	
D406	8-719-069-60	UDZS-TE17-9.1B (KV-XA21M60 Only)	
D504	8-719-302-43	EL1Z (Except KV-XA21M60)	
D504	8-719-302-06	EU2A (KV-XA21M60 Only)	
D505	8-719-988-61	1SS355TE-17	
D506	8-719-911-19	1SS119-25	
D507	8-719-988-61	1SS355TE-17	
D508	8-719-988-61	1SS355TE-17	
D509	1-216-073-00	RES-CHIP 10K 5% 1/10W	
D510	8-719-988-61	1SS355TE-17	
D511	8-719-988-61	1SS355TE-17	
D512	8-719-988-61	1SS355TE-17	
D513	8-719-908-03	GP08D	
D517	8-719-312-71	RS3FS (Except KV-XA21M60)	
D517	8-719-945-80	ERC06-15S (KV-XA21M60 Only)	
D518	8-719-900-26	ERD29-08J	
D521	8-719-302-43	EL1Z (Except KV-XA21M60)	
D521	8-719-302-06	EU2A (KV-XA21M60 Only)	
D522	8-719-302-43	EL1Z (Except KV-XA21M60)	
D522	8-719-302-06	EU2A (KV-XA21M60 Only)	
D523	8-719-302-43	EL1Z (Except KV-XA21M60)	
D523	8-719-302-06	EU2A (KV-XA21M60 Only)	
D527	8-719-908-03	GP08D	
D528	8-719-908-03	GP08D	
D531	8-719-988-61	1SS355TE-17	
D532	8-719-988-61	1SS355TE-17	
D534	1-216-295-11	SHORT 0	
D602	8-719-911-19	1SS119-25	
D603	8-719-150-92	RD33EB3T (Except KV-XA21M50(Malaysia)/M60/M61(Malaysia))	
D604	8-719-028-72	RGP02-17EL-6433 (Except KV-XA21M50(Malaysia)/M60/M61(Malaysia))	
D605	8-719-510-22	D3SB60	
D606	8-719-108-18	5P-6M	
D607	8-719-073-01	MA111-(K8).S0 (Except KV-XA21M50(Malaysia)/M60/M61(Malaysia))	
D608	8-719-110-53	RD20ES-B2	
D609	8-719-311-31	RU-1P	
D610	8-719-210-21	11EQS04 (Except KV-XA21M60)	
D610	8-719-043-76	AK04V0 (KV-XA21M60 Only)	
D611	8-719-046-74	AU-01Z-V1 (Except KV-XA21M60)	
D611	8-719-075-73	10ELS2N-TB5 (KV-XA21M60 Only)	
D613	8-719-046-74	AU-01Z-V1 (Except KV-XA21M60)	
D613	8-719-075-73	10ELS2N-TB5 (KV-XA21M60 Only)	
D614	8-719-046-74	AU-01Z-V1 (Except KV-XA21M60)	
D614	8-719-075-73	10ELS2N-TB5 (KV-XA21M60 Only)	
D615	8-719-312-10	RU4AM-T3	
D618	8-719-067-18	RN4Z	
D620	8-719-110-72	RD30ESB2	
D623	8-719-978-65	DTZ-TT11-15B	
D624	8-719-073-01	MA111-(K8).S0	
D625	8-719-977-28	DTZ10B	
D627	8-719-073-84	31DQ06-FC5	
D628	8-719-911-19	1SS119-25	
D631	8-719-068-00	ERC04-06SE	
D632	8-719-068-00	ERC04-06SE	
D633	8-719-948-45	ERA22-08	
D634	8-719-073-01	MA111-(K8).S0	
D635	8-719-073-01	MA111-(K8).S0	
D636	8-719-510-02	D1NS4	
D637	8-719-109-96	RD6.8ES-B1	
D638	8-719-200-82	11ES2 (Except KV-XA21M60)	
D638	8-719-024-99	11ES2-NTA2B (KV-XA21M60 Only)	
D901	8-719-158-35	RD9.1S-B (Except KV-XA21M60)	
D901	8-719-069-60	UDZS-TE17-9.1B (KV-XA21M60 Only)	
D902	8-719-158-35	RD9.1S-B (Except KV-XA21M60)	
D902	8-719-069-60	UDZS-TE17-9.1B (KV-XA21M60 Only)	
D903	8-719-158-35	RD9.1S-B (Except KV-XA21M60)	
D903	8-719-069-60	UDZS-TE17-9.1B (KV-XA21M60 Only)	
D904	8-719-158-35	RD9.1S-B (Except KV-XA21M60)	
D904	8-719-069-60	UDZS-TE17-9.1B (KV-XA21M60 Only)	
D905	8-719-158-35	RD9.1S-B (Except KV-XA21M60)	
D905	8-719-069-60	UDZS-TE17-9.1B (KV-XA21M60 Only)	
D906	8-719-083-18	SPB-26MVWF	
		<CONNECTOR>	
DY1	* 1-580-798-11	CONNECTOR PIN (DY) 6P	
		<FERRITE BEAD>	
FB300	1-412-911-31	FERRITE 0UH	
FB501	1-410-397-21	FERRITE 1.1UH	
FB502	1-410-397-21	FERRITE 1.1UH	
FB600	1-410-397-21	FERRITE 1.1UH	
FB601	1-410-397-21	FERRITE 1.1UH	
FB602	1-410-397-21	FERRITE 1.1UH	
FB603	1-410-397-21	FERRITE 1.1UH	
FB604	1-412-911-31	FERRITE 0UH	
FB607	1-410-397-21	FERRITE 1.1UH	
FB608	1-412-911-31	FERRITE 0UH	
FB611	1-410-397-21	FERRITE 1.1UH	
FB613	1-410-397-21	FERRITE 1.1UH	
FB615	1-410-397-21	FERRITE 1.1UH	

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

A

REF. NO.	PART NO.	DESCRIPTION	REMARK
		<IC>	
IC001	8-752-917-82	CXP86449-630S (Except KV-XA21M60/M83)	
IC001	8-752-917-84	CXP86449-632S (KV-XA21M60 Only)	
IC001	8-752-917-83	CXP86449-631S (KV-XA21M83 Only)	
IC002	8-759-371-21	MM1319AFBE	
IC003	8-759-672-78	M24C08-BN6(A)	
IC100	8-759-042-02	S-80743AL-A7-S (KV-XA21M60/M61)	
IC201	8-759-336-30	TA8223K	
IC203	8-759-827-61	TDA7442D013TR	
IC301	8-752-095-72	CXA2159S	
IC302	8-759-672-27	TDA9183T	
IC502	8-759-700-07	NJM2903M	
IC503	8-759-980-58	TDA8172	
IC601	8-749-013-75	STR-F6654	
IC602	8-749-920-61	SE-135N	
IC603	8-759-701-59	NJM78M09FA	
IC604	8-759-231-53	TA7805S	
IC901	8-742-014-21	SBX1981-51(21) (Except KV-XA21M60)	
IC901	8-759-180-30	UPD6124G-212 (KV-XA21M60 Only)	
		<JACK>	
J401	1-779-850-11	JACK BLOCK, PIN 6P	
J901	1-770-786-11	JACK	
J902	1-770-329-11	JACK, PIN 3P	
		<CHIP CONDUCTOR>	
JR001	1-216-295-11	SHORT 0	
JR002	1-216-295-11	SHORT 0	
JR003	1-216-295-11	SHORT 0	
JR004	1-216-295-11	SHORT 0	
JR006	1-216-295-11	SHORT 0	
JR007	1-216-295-11	SHORT 0	
JR008	1-216-295-11	SHORT 0 (KV-XA21M60/M61)	
JR009	1-216-295-11	SHORT 0	
JR010	1-216-295-11	SHORT 0	
JR011	1-216-295-11	SHORT 0	
JR012	1-216-295-11	SHORT 0	
JR014	1-216-295-11	SHORT 0	
JR015	1-216-295-11	SHORT 0	
JR016	1-216-295-11	SHORT 0	
JR019	1-216-295-11	SHORT 0	
JR020	1-216-295-11	SHORT 0	
JR022	1-216-295-11	SHORT 0	
JR023	1-216-295-11	SHORT 0	
JR024	1-216-295-11	SHORT 0	
JR025	1-216-295-11	SHORT 0	
JR028	1-216-295-11	SHORT 0	
JR102	1-216-295-11	SHORT 0	
JR107	1-216-295-11	SHORT 0 (KV-XA21M60/M61)	
JR009	1-216-295-11	SHORT 0	
JR109	1-216-295-11	SHORT 0 (Except KV-XA21M60/M61)	
JR112	1-216-295-11	SHORT 0	
JR202	1-216-295-11	SHORT 0	
JR204	1-216-295-11	SHORT 0	
JR213	1-216-295-11	SHORT 0	
JR214	1-216-295-11	SHORT 0	
JR300	1-216-295-11	SHORT 0	
JR304	1-216-295-11	SHORT 0	
JR308	1-216-295-11	SHORT 0	
JR309	1-216-295-11	SHORT 0	
JR310	1-216-295-11	SHORT 0	
JR311	1-216-295-11	SHORT 0	
JR312	1-216-295-11	SHORT 0	
JR400	1-216-295-11	SHORT 0	
JR401	1-216-295-11	SHORT 0	
JR403	1-216-295-11	SHORT 0	
JR404	1-216-295-11	SHORT 0	
JR405	1-216-295-11	SHORT 0	
JR500	1-216-295-11	SHORT 0	
JR501	1-216-295-11	SHORT 0	
JR503	1-216-295-11	SHORT 0	
JR505	1-216-295-11	SHORT 0	
JR600	1-216-295-11	SHORT 0	
		<COIL>	
L002	1-414-856-11	INDUCTOR 10UH	
L003	1-414-180-11	INDUCTOR 3.3UH	
L005	1-414-233-22	FERRITE 0UH	
L101	1-414-856-11	INDUCTOR 10UH	
L102	1-414-856-11	INDUCTOR 10UH	
L103	1-414-856-11	INDUCTOR 10UH	
L104	1-414-856-11	INDUCTOR 10UH	
L105	1-414-856-11	INDUCTOR 10UH	
L204	1-414-856-11	INDUCTOR 10UH	
L301	1-414-189-31	INDUCTOR 100UH	
L302	1-414-185-41	INDUCTOR 22UH	
L303	1-414-189-31	INDUCTOR 100UH	
L304	1-414-189-31	INDUCTOR 100UH	
L501	1-412-525-31	INDUCTOR 10UH	
L502	1-422-613-11	COIL, AIR CORE	
L503	1-412-525-31	INDUCTOR 10UH	
L504	1-412-525-31	INDUCTOR 10UH	
L505	1-412-525-31	INDUCTOR 10UH	
L506	1-412-525-31	INDUCTOR 10UH	
L507	1-459-111-00	INDUCTOR 10MH	
L509	1-459-390-00	INDUCTOR 390UH	
L510	1-416-972-11	COIL, HORIZONTAL LINEARITY	
L513	1-412-551-31	INDUCTOR 1.5MH	
L515	1-459-104-00	COIL, WITH CORE	
L518	1-414-187-11	INDUCTOR 47UH	
L601	1-412-527-11	INDUCTOR 15UH	
L901	1-408-603-31	INDUCTOR 10UH	
L902	1-408-603-31	INDUCTOR 10UH	
L905	1-414-856-11	INDUCTOR 10UH	
		<PHOTO COUPLER>	
PH600⚠	8-749-924-35	ON3171-R	
		<IC LINK>	
PS200	1-532-675-21	LINK, IC 1.5A/150V	

A

REF. NO.	PART NO.	DESCRIPTION	REMARK
		<TRANSISTOR>	
Q002	8-729-230-49	2SC2712-YG (Except KV-XA21M61(Malaysia))	
Q002	8-729-120-28	2SC1623-L5L6 (KV-XA21M61(Malaysia) Only)	
Q101	8-729-230-49	2SC2712-YG (Except KV-XA21M61(Malaysia))	
Q101	8-729-120-28	2SC1623-L5L6 (KV-XA21M61(Malaysia) Only)	
Q201	8-729-424-67	UN2216	
Q202	8-729-424-67	UN2216	
Q205	8-729-421-19	UN2213 (Except KV-XA21M60)	
Q205	1-801-806-11	TR DTC144EKA (KV-XA21M60 Only)	
Q206	8-729-421-19	UN2213 (Except KV-XA21M60)	
Q206	1-801-806-11	TR DTC144EKA (KV-XA21M60 Only)	
Q207	8-729-421-19	UN2213 (Except KV-XA21M60)	
Q207	1-801-806-11	TR DTC144EKA (KV-XA21M60 Only)	
Q301	8-729-216-22	2SA1162-G (Except KV-XA21M60)	
Q301	8-729-026-49	2SA1037AK-T146-R (KV-XA21M60 Only)	
Q302	8-729-230-49	2SC2712-YG (Except KV-XA21M60)	
Q302	8-729-120-28	2SC1623-L5L6 (KV-XA21M60 Only)	
Q303	8-729-216-22	2SA1162-G (Except KV-XA21M60)	
Q303	8-729-026-49	2SA1037AK-T146-R (KV-XA21M60 Only)	
Q305	8-729-216-22	2SA1162-G (Except KV-XA21M60)	
Q305	8-729-026-49	2SA1037AK-T146-R (KV-XA21M60 Only)	
Q306	8-729-230-49	2SC2712-YG (Except KV-XA21M60)	
Q306	8-729-120-28	2SC1623-L5L6 (KV-XA21M60 Only)	
Q307	8-729-230-49	2SC2712-YG (Except KV-XA21M60)	
Q307	8-729-120-28	2SC1623-L5L6 (KV-XA21M60 Only)	
Q308	8-729-216-22	2SA1162-G (Except KV-XA21M60)	
Q308	8-729-026-49	2SA1037AK-T146-R (KV-XA21M60 Only)	
Q312	8-729-216-22	2SA1162-G (Except KV-XA21M60)	
Q312	8-729-026-49	2SA1037AK-T146-R (KV-XA21M60 Only)	
Q313	8-729-230-49	2SC2712-YG (Except KV-XA21M60)	
Q313	8-729-120-28	2SC1623-L5L6 (KV-XA21M60 Only)	
Q314	8-729-216-22	2SA1162-G (Except KV-XA21M60)	
Q314	8-729-026-49	2SA1037AK-T146-R (KV-XA21M60 Only)	
Q315	8-729-421-19	UN2213 (Except KV-XA21M60)	
Q315	1-801-806-11	TR DTC144EKA (KV-XA21M60 Only)	
Q316	8-729-216-22	2SA1162-G (Except KV-XA21M60)	
Q316	8-729-026-49	2SA1037AK-T146-R (KV-XA21M60 Only)	
Q317	8-729-216-22	2SA1162-G (Except KV-XA21M60)	
Q317	8-729-026-49	2SA1037AK-T146-R (KV-XA21M60 Only)	
Q401	8-729-424-67	UN2216	
Q402	8-729-424-67	UN2216	
Q403	8-729-216-22	2SA1162-G (Except KV-XA21M60)	
Q403	8-729-026-49	2SA1037AK-T146-R (KV-XA21M60 Only)	
Q404	8-729-216-22	2SA1162-G (Except KV-XA21M60)	
Q404	8-729-026-49	2SA1037AK-T146-R (KV-XA21M60 Only)	
Q503	8-729-230-49	2SC2712-YG (Except KV-XA21M60)	
Q503	8-729-120-28	2SC1623-L5L6 (KV-XA21M60 Only)	
Q505	8-729-931-45	IRF614	
Q506	8-729-140-96	2SD774-34	
Q507	8-729-216-22	2SA1162-G (Except KV-XA21M60)	
Q507	8-729-026-49	2SA1037AK-T146-R (KV-XA21M60 Only)	
Q509	8-729-230-49	2SC2712-YG (Except KV-XA21M60)	
Q509	8-729-120-28	2SC1623-L5L6 (KV-XA21M60 Only)	
Q511	8-729-048-07	2SD2578-CA	
Q601	8-729-023-22	2SD2114K	
Q602	8-729-230-49	2SC2712-YG (Except KV-XA21M50(Malaysia)/M60/M61(Malaysia))	
Q603	8-729-027-23	DTA114EKA-T146 (Except KV-XA21M50(Malaysia)/M60/M61(Malaysia))	
Q604	8-729-200-17	2SA1091-O	
Q605	8-729-044-30	2SK2845-LB102	
Q606	8-729-230-49	2SC2712-YG (Except KV-XA21M60)	
Q606	8-729-120-28	2SC1623-L5L6 (KV-XA21M60 Only)	
Q607	8-729-922-37	2SD2144S-UVW	
Q608	8-729-230-49	2SC2712-YG (Except KV-XA21M60)	
Q608	8-729-120-28	2SC1623-L5L6 (KV-XA21M60 Only)	
Q901	8-729-421-19	UN2213 (Except KV-XA21M60)	
Q901	1-801-806-11	TR DTC144EKA (KV-XA21M60 Only)	
Q902	1-801-806-11	TR DTC144EKA (KV-XA21M60 Only)	
Q902	8-729-421-19	UN2213 (Except KV-XA21M60)	
		<RESISTOR>	
R001	1-414-233-22	FERRITE 0UH	
R002	1-216-025-11	RES-CHIP 100 5% 1/10W	
R003	1-216-073-00	RES-CHIP 10K 5% 1/10W (Except KV-XA21M60/M80(ME)/M83)	
R003	1-216-295-11	SHORT 0 (KV-XA21M60/M80/ME/M83)	
R004	1-216-025-11	RES-CHIP 100 5% 1/10W	
R005	1-216-025-11	RES-CHIP 100 5% 1/10W	
R007	1-216-295-11	SHORT 0	
R008	1-216-065-91	RES-CHIP 4.7K 5% 1/10W	
R010	1-216-065-91	RES-CHIP 4.7K 5% 1/10W	
R011	1-216-065-91	RES-CHIP 4.7K 5% 1/10W	
R012	1-216-065-91	RES-CHIP 4.7K 5% 1/10W	
R013	1-216-065-91	RES-CHIP 4.7K 5% 1/10W	
R014	1-216-025-11	RES-CHIP 100 5% 1/10W	
R015	1-216-025-11	RES-CHIP 100 5% 1/10W	
R017	1-216-049-11	RES-CHIP 1K 5% 1/10W	
R018	1-216-033-00	RES-CHIP 220 5% 1/10W	
R019	1-216-073-00	RES-CHIP 10K 5% 1/10W	
R020	1-216-045-00	RES-CHIP 680 5% 1/10W	
R021	1-216-073-00	RES-CHIP 10K 5% 1/10W	
R022	1-216-295-11	SHORT 0	
R024	1-216-057-00	RES-CHIP 2.2K 5% 1/10W	
R025	1-216-057-00	RES-CHIP 2.2K 5% 1/10W	
R026	1-216-057-00	RES-CHIP 2.2K 5% 1/10W	
R027	1-216-073-00	RES-CHIP 10K 5% 1/10W	
R028	1-216-073-00	RES-CHIP 10K 5% 1/10W (KV-XA21M60/M61 Only)	
R029	1-216-049-11	RES-CHIP 1K 5% 1/10W	
R031	1-216-049-11	RES-CHIP 1K 5% 1/10W	
R035	1-216-025-11	RES-CHIP 100 5% 1/10W	
R036	1-216-025-11	RES-CHIP 100 5% 1/10W	
R037	1-216-025-11	RES-CHIP 100 5% 1/10W	
R040	1-216-025-11	RES-CHIP 100 5% 1/10W	
R041	1-216-025-11	RES-CHIP 100 5% 1/10W	
R042	1-216-295-11	SHORT 0	
R043	1-216-049-11	RES-CHIP 1K 5% 1/10W	
R044	1-216-025-11	RES-CHIP 100 5% 1/10W	
R045	1-414-233-22	FERRITE 0UH	
R046	1-216-049-11	RES-CHIP 1K 5% 1/10W	
R047	1-414-233-22	FERRITE 0UH	
R048	1-216-073-00	RES-CHIP 10K 5% 1/10W	
R050	1-216-073-00	RES-CHIP 10K 5% 1/10W	

A

REF. NO.	PART NO.	DESCRIPTION			REMARK
R053	1-216-049-11	RES-CHIP	1K	5%	1/10W
R058	1-216-295-11	SHORT	0		
R059	1-216-295-11	SHORT	0		
R060	1-216-295-11	SHORT	0		
R061	1-216-033-00	RES-CHIP	220	5%	1/10W
R062	1-216-041-00	RES-CHIP	470	5%	1/10W
R063	1-216-037-00	RES-CHIP	330	5%	1/10W
R064	1-216-037-00	RES-CHIP	330	5%	1/10W
R065	1-216-037-00	RES-CHIP	330	5%	1/10W
R066	1-216-049-11	RES-CHIP	1K	5%	1/10W
R067	1-216-049-11	RES-CHIP	1K	5%	1/10W
R068	1-216-041-00	RES-CHIP	470	5%	1/10W
R101	1-216-025-11	RES-CHIP	100	5%	1/10W
		(KV-XA21M60/XA21M61 Only)			
R102	1-216-025-11	RES-CHIP	100	5%	1/10W
		(KV-XA21M60/XA21M61 Only)			
R105	1-216-295-11	SHORT	0		
R109	1-216-041-00	RES-CHIP	470	5%	1/10W
R111	1-216-025-11	RES-CHIP	100	5%	1/10W
R112	1-216-025-11	RES-CHIP	100	5%	1/10W
R113	1-216-047-91	RES-CHIP	820	5%	1/10W
R202	1-216-053-00	RES-CHIP	1.5K	5%	1/10W
R203	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R204	1-216-069-00	RES-CHIP	6.8K	5%	1/10W
R205	1-216-069-00	RES-CHIP	6.8K	5%	1/10W
R206	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R207	1-216-053-00	RES-CHIP	1.5K	5%	1/10W
R208	1-216-069-00	RES-CHIP	6.8K	5%	1/10W
R209	1-216-069-00	RES-CHIP	6.8K	5%	1/10W
R210	1-216-029-00	RES-CHIP	150	5%	1/10W
R212	1-216-029-00	RES-CHIP	150	5%	1/10W
R225	1-216-033-00	RES-CHIP	220	5%	1/10W
R226	1-216-033-00	RES-CHIP	220	5%	1/10W
R227	1-216-033-00	RES-CHIP	220	5%	1/10W
R228	1-249-389-11	CARBON	4.7	5%	1/4W
R229	1-216-073-00	RES-CHIP	10K	5%	1/10W
R230	1-216-073-00	RES-CHIP	10K	5%	1/10W
		(KV-XA21M60/M61 Only)			
R230	1-216-069-00	RES-CHIP	6.8K	5%	1/10W
		(Except KV-XA21M60/M61)			
R231	1-216-295-11	SHORT	0		
R234	1-249-389-11	CARBON	4.7	5%	1/4W
R237	1-216-308-00	RES-CHIP	4.7	5%	1/10W
R238	1-216-069-00	RES-CHIP	6.8K	5%	1/10W
R239	1-216-069-00	RES-CHIP	6.8K	5%	1/10W
R242	1-216-025-11	RES-CHIP	100	5%	1/10W
R243	1-216-025-11	RES-CHIP	100	5%	1/10W
R246	1-216-067-00	RES-CHIP	5.6K	5%	1/10W
R247	1-216-067-00	RES-CHIP	5.6K	5%	1/10W
R301	1-216-073-00	RES-CHIP	10K	5%	1/10W
R302	1-216-295-11	SHORT	0		
R303	1-216-049-11	RES-CHIP	1K	5%	1/10W
R304	1-216-073-00	RES-CHIP	10K	5%	1/10W
R305	1-216-049-11	RES-CHIP	1K	5%	1/10W
R306	1-216-077-91	RES-CHIP	15K	5%	1/10W
R308	1-216-025-11	RES-CHIP	100	5%	1/10W
R309	1-216-025-11	RES-CHIP	100	5%	1/10W
R310	1-216-025-11	RES-CHIP	100	5%	1/10W
R311	1-216-041-00	RES-CHIP	470	5%	1/10W
R312	1-216-039-00	RES-CHIP	390	5%	1/10W
R313	1-216-037-00	RES-CHIP	330	5%	1/10W
R314	1-216-083-00	RES-CHIP	27K	5%	1/10W
R316	1-216-037-00	RES-CHIP	330	5%	1/10W
R317	1-216-091-00	RES-CHIP	56K	5%	1/10W
R318	1-216-039-00	RES-CHIP	390	5%	1/10W
R319	1-216-025-11	RES-CHIP	100	5%	1/10W
R320	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R321	1-216-073-00	RES-CHIP	10K	5%	1/10W
R322	1-216-033-00	RES-CHIP	220	5%	1/10W
R323	1-216-053-00	RES-CHIP	1.5K	5%	1/10W
R324	1-216-053-00	RES-CHIP	1.5K	5%	1/10W
R325	1-216-041-00	RES-CHIP	470	5%	1/10W
R331	1-216-295-11	SHORT	0		
R332	1-216-033-00	RES-CHIP	220	5%	1/10W
R333	1-216-073-00	RES-CHIP	10K	5%	1/10W
R334	1-216-127-11	RES-CHIP	1.8M	5%	1/10W
R335	1-216-045-00	RES-CHIP	680	5%	1/10W
R338	1-216-033-00	RES-CHIP	220	5%	1/10W
R340	1-216-025-11	RES-CHIP	100	5%	1/10W
R345	1-216-081-00	RES-CHIP	22K	5%	1/10W
R348	1-208-806-11	METAL CHIP	10K	0.5%	1/10W
R349	1-216-073-00	RES-CHIP	10K	5%	1/10W
R350	1-216-061-00	RES-CHIP	3.3K	5%	1/10W
R351	1-216-053-00	RES-CHIP	1.5K	5%	1/10W
R354	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R355	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R356	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R357	1-216-079-00	RES-CHIP	18K	5%	1/10W
R358	1-216-049-11	RES-CHIP	1K	5%	1/10W
R359	1-216-033-00	RES-CHIP	220	5%	1/10W
R360	1-216-033-00	RES-CHIP	220	5%	1/10W
R361	1-216-073-00	RES-CHIP	10K	5%	1/10W
R362	1-216-075-00	RES-CHIP	12K	5%	1/10W
R363	1-216-079-00	RES-CHIP	18K	5%	1/10W
R364	1-216-295-11	SHORT	0		
R365	1-216-033-00	RES-CHIP	220	5%	1/10W
R366	1-216-073-00	RES-CHIP	10K	5%	1/10W
R367	1-216-073-00	RES-CHIP	10K	5%	1/10W
R370	1-216-033-00	RES-CHIP	220	5%	1/10W
R371	1-216-083-00	RES-CHIP	27K	5%	1/10W
R372	1-216-091-00	RES-CHIP	56K	5%	1/10W
R375	1-216-025-11	RES-CHIP	100	5%	1/10W
		(KV-XA21M60/M61 Only)			
R376	1-216-081-00	RES-CHIP	22K	5%	1/10W
R377	1-216-121-11	RES-CHIP	1M	5%	1/10W
R378	1-216-053-00	RES-CHIP	1.5K	5%	1/10W
R379	1-218-179-11	RES-CHIP	10M	5%	1/10W
R380	1-216-041-00	RES-CHIP	470	5%	1/10W
R383	1-216-049-11	RES-CHIP	1K	5%	1/10W
R384	1-216-295-11	SHORT	0		
R385	1-216-033-00	RES-CHIP	220	5%	1/10W
R391	1-216-049-11	RES-CHIP	1K	5%	1/10W
R401	1-216-049-11	RES-CHIP	1K	5%	1/10W
R402	1-216-073-00	RES-CHIP	10K	5%	1/10W
R403	1-216-073-00	RES-CHIP	10K	5%	1/10W
R404	1-216-073-00	RES-CHIP	10K	5%	1/10W
R405	1-216-049-11	RES-CHIP	1K	5%	1/10W

A

REF. NO.	PART NO.	DESCRIPTION			REMARK
R406	1-216-073-00	RES-CHIP	10K	5%	1/10W
R407	1-216-049-11	RES-CHIP	1K	5%	1/10W
R408	1-216-049-11	RES-CHIP	1K	5%	1/10W
R409	1-216-041-00	RES-CHIP	470	5%	1/10W
R410	1-216-113-00	RES-CHIP	470K	5%	1/10W
R411	1-216-113-00	RES-CHIP	470K	5%	1/10W
R412	1-216-041-00	RES-CHIP	470	5%	1/10W
R413	1-216-021-00	RES-CHIP	68	5%	1/10W
R414	1-216-113-00	RES-CHIP	470K	5%	1/10W
R415	1-216-113-00	RES-CHIP	470K	5%	1/10W
R416	1-216-077-91	RES-CHIP	15K	5%	1/10W
R417	1-216-077-91	RES-CHIP	15K	5%	1/10W
R418	1-216-113-00	RES-CHIP	470K	5%	1/10W
R419	1-216-022-00	RES-CHIP	75	5%	1/10W
R426	1-216-033-00	RES-CHIP	220	5%	1/10W
R505	1-216-099-00	RES-CHIP	120K	5%	1/10W
R506	1-216-085-00	RES-CHIP	33K	5%	1/10W
R507	1-249-389-11	CARBON	4.7	5%	1/4W
R508	1-215-910-00	METAL OXIDE	68	5%	3W
R509	1-215-911-11	METAL OXIDE	100	5%	3W
R510	1-215-885-00	METAL OXIDE	68	5%	2W
R511	1-215-911-11	METAL OXIDE	100	5%	3W
R516	1-216-081-00	RES-CHIP	22K	5%	1/10W
R518	1-247-807-31	CARBON	100	5%	1/4W
R520	1-215-445-00	METAL	10K	1%	1/4W
R522	1-208-806-11	METAL CHIP	10K	0.5%	1/10W
R523	1-249-411-11	CARBON	330	5%	1/4W
R525	1-208-830-11	METAL CHIP	100K	0.5%	1/10W
R526	1-208-798-11	METAL CHIP	4.7K	0.5%	1/10W
R527	1-216-001-00	RES-CHIP	10	5%	1/10W
R528	1-208-814-91	METAL CHIP	22K	0.5%	1/10W
R529	1-216-635-11	METAL CHIP	220	0.5%	1/10W
R531	1-247-843-11	CARBON	3.3K	5%	1/4W
R533	1-249-417-11	CARBON	1K	5%	1/4W
R534	1-216-361-00	METAL OXIDE	0.22	5%	2W
R535	1-216-067-00	RES-CHIP	5.6K	5%	1/10W
R536	1-216-067-00	RES-CHIP	5.6K	5%	1/10W
R537	1-208-814-91	METAL CHIP	22K	0.5%	1/10W
R540	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R541	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R542	1-216-295-11	SHORT	0		
R543	1-216-437-00	METAL OXIDE	5.6K	5%	1W
R544	1-215-894-11	METAL OXIDE	2.2K	5%	2W
R545	1-216-077-91	RES-CHIP	15K	5%	1/10W
R546	1-216-077-91	RES-CHIP	15K	5%	1/10W
R547	1-216-085-00	RES-CHIP	33K	5%	1/10W
R549	1-215-451-00	METAL	18K	1%	1/4W
R550	1-216-097-11	RES-CHIP	100K	5%	1/10W
R551	1-249-421-11	CARBON	2.2K	5%	1/4W
R552	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R553	1-215-457-00	METAL	33K	1%	1/4W
R554	1-215-457-00	METAL	33K	1%	1/4W
R556	1-215-437-00	METAL	4.7K	1%	1/4W
R558	1-249-421-11	CARBON	2.2K	5%	1/4W
R559	1-249-429-11	CARBON	10K	5%	1/4W
R560	1-216-073-00	RES-CHIP	10K	5%	1/10W
R562	1-249-401-11	CARBON	47	5%	1/4W
R565	1-216-073-00	RES-CHIP	10K	5%	1/10W

REF. NO.	PART NO.	DESCRIPTION			REMARK
R567	1-216-105-91	RES-CHIP	220K	5%	1/10W
R568	1-249-383-11	CARBON	1.5	5%	1/4W
R570	1-216-069-00	RES-CHIP	6.8K	5%	1/10W
R571	1-215-437-00	METAL	4.7K	1%	1/4W
R573	1-216-089-11	RES-CHIP	47K	5%	1/10W
R577	1-215-913-11	METAL OXIDE	220	5%	3W
R578	1-216-369-00	METAL OXIDE	1	5%	2W
R579	1-216-097-11	RES-CHIP	100K	5%	1/10W
R580	1-208-830-11	METAL CHIP	100K	0.5%	1/10W
R581	1-208-794-11	METAL CHIP	3.3K	0.5%	1/10W
R582	1-208-846-11	METAL CHIP	470K	0.5%	1/10W
R584	1-216-295-11	SHORT	0		
R585	1-249-391-11	CARBON	6.8	5%	1/4W
R587	1-208-834-11	METAL CHIP	150K	0.5%	1/10W
R588	1-215-888-00	METAL OXIDE	220	5%	2W
R589	1-215-888-00	METAL OXIDE	220	5%	2W
R590	1-215-465-00	METAL	68K	1%	1/4W
R591	1-260-288-11	CARBON	0.47	5%	1/2W
R593	1-260-288-11	CARBON	0.47	5%	1/2W
R594	1-260-288-11	CARBON	0.47	5%	1/2W
R596	1-215-921-11	METAL OXIDE	4.7K	5%	3W
R597	1-247-750-11	CARBON	680	5%	1/2W
R598	1-249-438-11	CARBON	56K	5%	1/4W
R599	1-249-389-11	CARBON	4.7	5%	1/4W
R600	1-249-438-11	CARBON	56K	5%	1/4W
R601	1-249-418-11	CARBON	1.2K	5%	1/4W
R602	1-249-389-11	CARBON	4.7	5%	1/4W
R603	1-215-485-00	METAL	470K	1%	1/4W
R604	1-216-097-11	RES-CHIP	100K	5%	1/10W
R607	1-249-425-11	CARBON	4.7K	5%	1/4W
R608	1-240-205-91	CARBON	22M	5%	1/2W
R609	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R610	1-216-073-00	RES-CHIP	10K	5%	1/10W
R611	1-216-089-11	RES-CHIP	47K	5%	1/10W
R612	1-216-045-00	RES-CHIP	680	5%	1/10W
R614	1-216-041-00	RES-CHIP	470	5%	1/10W
R615	1-216-350-11	METAL OXIDE	1.2	5%	1W
R616	1-260-302-51	CARBON	6.8	5%	1/2W
R617	1-247-791-91	CARBON	22	5%	1/4W
R619	1-260-128-91	CARBON	270K	5%	1/2W
R620	1-215-915-11	METAL OXIDE	470	5%	3W
R622	1-216-400-11	METAL OXIDE (KV-XA21M60/M61)	8.2	5%	3W
R622	1-215-908-00	METAL OXIDE (Except KV-XA21M60/M61)	33	5%	3W
R623	1-216-095-00	RES-CHIP (Except KV-XA21M50(Malaysia)/M60/ M61(Malaysia))	82K	5%	1/10W
R624	1-216-089-11	RES-CHIP (Except KV-XA21M50(Malaysia)/M60/ M61(Malaysia))	47K	5%	1/10W
R626	1-216-049-11	RES-CHIP (Except KV-XA21M50(Malaysia)/M60/ M61(Malaysia))	1K	5%	1/10W
R627	1-240-251-11	CMT-MELF	6.8	5%	10W
R629	1-247-747-11	CARBON	470	5%	1/2W
R630	1-249-429-11	CARBON	10K	5%	1/4W
R631	1-216-089-11	RES-CHIP (Except KV-XA21M50(Malaysia)/M60/ M61(Malaysia))	47K	5%	1/10W

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

A C1

REF. NO.		PART NO.	DESCRIPTION			REMARK
R632		1-202-933-61	FUSIBLE	0.1	10%	1/2W
R634	⚠	1-218-265-11	METAL	8.2M	5%	1W
R635		1-216-492-11	METAL OXIDE	82K	5%	3W
R636		1-215-924-00	METAL OXIDE	15K	5%	3W
R637		1-216-492-11	METAL OXIDE	82K	5%	3W
R639		1-216-363-00	METAL OXIDE	0.33	5%	2W
R640		1-249-415-11	CARBON	680	5%	1/4W
R641		1-216-362-11	METAL OXIDE	0.27	5%	2W
R642		1-249-419-11	CARBON	1.5K	5%	1/4W
R643		1-247-843-11	CARBON	3.3K	5%	1/4W
R644		1-249-419-11	CARBON	1.5K	5%	1/4W
R646		1-215-924-00	METAL OXIDE	15K	5%	3W
R647		1-249-401-11	CARBON	47	5%	1/4W
R648		1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R649		1-249-417-11	CARBON	1K	5%	1/4W
R650		1-215-882-00	METAL OXIDE	22	5%	2W
R652		1-215-925-11	METAL OXIDE	22K	5%	3W
R653		1-215-873-00	METAL OXIDE	4.7K	5%	1W
R657		1-260-127-11	CARBON	220K	5%	1/2W
R659		1-216-049-11	RES-CHIP	1K	5%	1/10W
R660		1-216-073-00	RES-CHIP	10K	5%	1/10W
R661		1-215-873-00	METAL OXIDE	4.7K	5%	1W
R680		1-216-308-00	RES-CHIP	4.7	5%	1/10W
R901		1-249-411-11	CARBON	330	5%	1/4W
R902		1-249-411-11	CARBON	330	5%	1/4W
R903		1-216-022-00	RES-CHIP	75	5%	1/10W
R904		1-216-033-00	RES-CHIP	220	5%	1/10W
R905		1-216-113-00	RES-CHIP	470K	5%	1/10W
R906		1-216-025-11	RES-CHIP	100	5%	1/10W
R907		1-216-113-00	RES-CHIP	470K	5%	1/10W
R908		1-216-025-11	RES-CHIP	100	5%	1/10W
R909		1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R910		1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R911		1-216-067-00	RES-CHIP	5.6K	5%	1/10W
R912		1-216-041-00	RES-CHIP	470	5%	1/10W
R913		1-216-049-11	RES-CHIP	1K	5%	1/10W
R914		1-216-055-00	RES-CHIP	1.8K	5%	1/10W
R915		1-216-061-00	RES-CHIP	3.3K	5%	1/10W
R916		1-216-017-91	RES-CHIP	47	5%	1/10W
R917		1-216-041-00	RES-CHIP	470	5%	1/10W
R918		1-216-041-00	RES-CHIP	470	5%	1/10W
			<RELAY>			
RY601	⚠	1-755-214-11	RELAY, AC POWER			
			<SWITCH>			
S502		1-572-707-11	SWITCH, LEVER			
S600	⚠	1-571-433-21	SWITCH, PUSH (AC POWER)			
S901		1-692-431-21	SWITCH, TACTILE			
S902		1-692-431-21	SWITCH, TACTILE			
S903		1-692-431-21	SWITCH, TACTILE			
S904		1-692-431-21	SWITCH, TACTILE			
S905		1-692-431-21	SWITCH, TACTILE			
S906		1-692-431-21	SWITCH, TACTILE			
S907		1-692-431-21	SWITCH, TACTILE			

REF. NO.		PART NO.	DESCRIPTION			REMARK
			<TRANSFORMER>			
T501		1-437-195-11	TRANSFORMER, HORIZONTAL DRIVE			
T503	⚠	1-453-293-11	TRANSFORMER ASSY FLYBACK			
			(NX-1748//M3A4)			
T601		1-424-682-11	TRANSFORMER, LINE FILTER			
T603	⚠	1-433-513-31	TRANSFORMER, CONVERTER (SRT)			
T604	⚠	1-431-852-11	TRANSFORMER, CONVERTER (SRT)			
			<THERMISTOR>			
TH600		1-803-586-11	THERMISTOR, NTC			
			<THERMISTOR>			
THP600		1-803-951-11	THERMISTOR, PTC			
			<TUNER>			
TU101		8-598-451-00	TUNER, FSS BTF-WG441 (KV-XA21M60/M61)			
TU101		8-598-449-10	TUNER, FSS BTF-LG433 (Except KV-XA21M60/M61)			
			<CRYSTAL>			
X001		1-579-125-11	VIBRATOR, CERAMIC			
X301		1-781-134-21	VIBRATOR, CRYSTAL			
X302		1-781-132-21	VIBRATOR, CRYSTAL			
**********						
	*	A-1332-141-A	C1 BOARD MOUNTED (KV-XA21M50/XA21M61/XA21M80(E))			
	*	A-1332-163-A	C1 BOARD MOUNTED (KV-XA21M60)			
	*	A-1332-155-A	C1 BOARD MOUNTED (KV-XA21M80(ME)/XA21M83)			
			**********			
		7-682-948-01	SCREW +PSW 3X8			
			<CAPACITOR>			
C700		1-102-074-00	CERAMIC	0.001UF	10.00%	50V
C701		1-126-933-11	ELECT	100UF	20.00%	16V
C702		1-102-114-00	CERAMIC	470PF	10.00%	50V
C703		1-110-389-11	FILM MELF	0.1UF	5%	250V
C705		1-162-114-00	CERAMIC	0.0047UF		2KV
C706		1-130-202-00	FILM	0.022UF	5.00%	400V
C707		1-107-651-11	ELECT	4.7UF	20.00%	250V
C1803		1-126-964-11	ELECT (Except KV-XA21M60/M80(ME)/XA21M83)	10UF	20.00%	50V
C1804		1-126-964-11	ELECT (Except KV-XA21M60/M80(ME)/XA21M83)	10UF	20.00%	50V
C1809		1-126-942-61	ELECT (Except KV-XA21M60/M80(ME)/XA21M83)	1000UF	20.00%	25V
C5952		1-107-616-11	CERAMIC	150PF	10.00%	500V
C5954		1-102-112-00	CERAMIC	330PF	10.00%	50V

The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

C1

REF. NO.	PART NO.	DESCRIPTION			REMARK
C5955	1-104-664-11	ELECT	47UF	20.00%	16V
		(Except KV-XA21M60)			
C5961	1-161-830-00	CERAMIC	0.0047UF		500V
C5962	1-130-491-00	MYLAR	0.047UF	5.00%	50V
C5963	1-107-638-11	ELECT	33UF	20.00%	160V
C5964	1-126-935-11	ELECT	470UF	20.00%	10V
C5968	1-106-383-00	MYLAR	0.047UF	10.00%	200V
C5969	1-107-949-11	ELECT	2.2UF	20.00%	160V
C5970	1-104-999-11	MYLAR	0.1UF	10.00%	200V
C5972	1-126-935-11	ELECT	470UF	20.00%	16V
C5973	1-130-491-00	MYLAR	0.047UF	5.00%	50V
C5975	1-126-935-11	ELECT	470UF	20.00%	10V
C5978	1-130-471-00	MYLAR	0.001UF	5.00%	50V
C5979	1-130-471-00	MYLAR	0.001UF	5.00%	50V
C5980	1-104-664-11	ELECT	47UF	20.00%	10V
		<#########			
CLP701	4-352-844-01	PIN, LEAD, COATING			
CLP702	4-352-844-01	PIN, LEAD, COATING			
		<CONNECTOR>			
CN700	1-695-915-11	TAB (CONTACT)			
CN701 *	1-564-509-11	PLUG, CONNECTOR 6P			
CN703	1-695-915-11	TAB (CONTACT)			
CN706	1-564-507-11	PLUG, CONNECTOR 4P			
CN1801 *	1-564-507-11	PLUG, CONNECTOR 4P			
		(Except KV-XA21M60/M80(ME)/M83)			
CN1802 *	1-564-506-11	PLUG, CONNECTOR 3P (Except KV-XA21M60/ M80(ME)/M83)			
CN5961 *	1-564-510-11	PLUG, CONNECTOR 7P			
CN5962 *	1-564-506-11	PLUG, CONNECTOR 3P			
		<DIODE>			
D704	8-719-911-19	1SS119-25			
D705	8-719-911-19	1SS119-25			
D707	8-719-051-85	HSS83TD			
D708	8-719-051-85	HSS83TD			
D709	8-719-051-85	HSS83TD			
D1803	8-719-911-19	1SS119-25 (Except KV-XA21M60/M80(ME)/M83)			
D1804	8-719-911-19	1SS119-25 (Except KV-XA21M60/M80(ME)/M83)			
D1808	8-719-908-03	GP08D (Except KV-XA21M60/M80(ME)/M83)			
D5964	8-719-911-19	1SS119-25			
D5967	8-719-110-88	RD39ES-B2			
D5968	8-719-110-88	RD39ES-B2			
		<IC>			
IC700	8-759-712-99	TDA6107Q/NZ			
IC1800	8-759-822-38	LA6510 (Except KV-XA21M60/M80(ME)/M83)			
		<JACK>			
J701	⚠ 1-540-071-22	SOCKET, CRT			

REF. NO.	PART NO.	DESCRIPTION			REMARK
		<COIL>			
L705	1-414-186-31	INDUCTOR	33UH		
L707	1-414-186-31	INDUCTOR	33UH		
L708	1-410-667-31	INDUCTOR	22UH		
L5961	1-414-187-11	INDUCTOR	47UH		
		<TRANSISTOR>			
Q700	8-729-119-76	2SA1175-HFE			
Q1802	8-729-119-78	2SC2785-HFE (Except KV-XA21M60/M80(ME)/M83)			
Q5961	8-729-119-78	2SC2785-HFE (KV-XA21M60 Only)			
Q5961	8-729-423-33	2SC3311A-QRSTA (Except KV-XA21M60)			
Q5962	8-729-423-33	2SC3311A-QRSTA (Except KV-XA21M60)			
Q5962	8-729-119-78	2SC2785-HFE (KV-XA21M60 Only)			
Q5963	8-729-017-05	2SA1837 (Except KV-XA21M60)			
Q5963	8-729-809-26	2SA1606-E (KV-XA21M60 Only)			
Q5965	8-729-017-06	2SC4793 (Except KV-XA21M60)			
Q5965	8-729-809-29	2SC4159-E (KV-XA21M60 Only)			
Q5967	8-729-423-33	2SC3311A-QRSTA (Except KV-XA21M60)			
Q5967	8-729-119-78	2SC2785-HFE (KV-XA21M60 Only)			
Q5968	8-729-119-76	2SA1175-HFE			
		<RESISTOR>			
R700	1-219-743-11	CARBON	100	5%	1/2W
R703	1-247-807-31	CARBON	100	5%	1/4W
R704	1-247-807-31	CARBON	100	5%	1/4W
R705	1-247-807-31	CARBON	100	5%	1/4W
R709	1-219-746-11	CARBON	1K	5%	1/2W
R710	1-240-933-91	CARBON	1.5K	5%	0.5W
R711	1-219-746-11	CARBON	1K	5%	1/2W
R712	1-219-752-11	CARBON	100K	5%	1/2W
R713	1-216-399-00	METAL OXIDE	6.8	5%	3W
R714	1-216-380-11	METAL OXIDE	8.2	5%	2W
R715	1-249-401-11	CARBON	47	5%	1/4W
R716	1-249-429-11	CARBON	10K	5%	1/4W
R717	1-247-807-31	CARBON	100	5%	1/4W
R718	1-249-428-11	CARBON	8.2K	5%	1/4W
R719	1-215-473-00	METAL	150K	1%	1/4W
R720	1-215-473-00	METAL	150K	1%	1/4W
R722	1-247-891-00	CARBON	330K	5%	1/4W
R1802	1-249-382-11	CARBON	1.2	5%	1/4W
		(Except KV-XA21M60/M80(ME)/M83)			
R1803	1-249-382-11	CARBON	1.2	5%	1/4W
		(Except KV-XA21M60/M80(ME)/M83)			
R1805	1-249-429-11	CARBON	10K	5%	1/4W
		(Except KV-XA21M60/M80(ME)/M83)			
R1806	1-249-425-11	CARBON	4.7K	5%	1/4W
		(Except KV-XA21M60/M80(ME)/M83)			
R1808	1-249-425-11	CARBON	4.7K	5%	1/4W
		(Except KV-XA21M60/M80(ME)/M83)			
R1809	1-249-435-11	CARBON	33K	5%	1/4W
		(Except KV-XA21M60/M80(ME)/M83)			
R1810	1-249-435-11	CARBON	33K	5%	1/4W
		(Except KV-XA21M60/M80(ME)/M83)			
R1811	1-249-440-11	CARBON	82K	5%	1/4W
		(Except KV-XA21M60/M80(ME)/M83)			

The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

C1 F J2

REF. NO.	PART NO.	DESCRIPTION			REMARK
R1812	1-249-435-11	CARBON	33K	5%	1/4W
		(Except KV-XA21M60/M80(ME)/M83)			
R1821	1-249-440-11	CARBON	82K	5%	1/4W
		(Except KV-XA21M60/M80(ME)/M83)			
R1822	1-249-435-11	CARBON	33K	5%	1/4W
		(Except KV-XA21M60/M80(ME)/M83)			
R1823	1-249-426-11	CARBON	5.6K	5%	1/4W
		(Except KV-XA21M60/M80(ME)/M83)			
R1824	1-249-435-11	CARBON	33K	5%	1/4W
		(Except KV-XA21M60/M80(ME)/M83)			
R5950	1-249-401-11	CARBON	47	5%	1/4W
R5951	1-249-400-11	CARBON	39	5%	1/4W
R5952	1-249-398-11	CARBON	27	5%	1/4W
R5955	1-104-664-11	ELECT	47UF	20.00%	16V
		(KV-XA21M60 Only)			
R5961	1-249-389-11	CARBON	4.7	5%	1/4W
R5962	1-247-807-31	CARBON	100	5%	1/4W
R5963	1-249-417-11	CARBON	1K	5%	1/4W
R5964	1-260-312-11	CARBON	47	5%	1/2W
R5965	1-249-414-11	CARBON	560	5%	1/4W
R5966	1-249-417-11	CARBON	1K	5%	1/4W
R5967	1-249-410-11	CARBON	270	5%	1/4W
R5968	1-249-417-11	CARBON	1K	5%	1/4W
R5969	1-249-383-11	CARBON	1.5	5%	1/4W
R5971	1-249-409-11	CARBON	220	5%	1/4W
R5972	1-249-432-11	CARBON	18K	5%	1/4W
R5973	1-249-403-11	CARBON	68	5%	1/4W
R5974	1-216-476-11	METAL OXIDE	180	5%	3W
R5975	1-249-417-11	CARBON	1K	5%	1/4W
R5976	1-249-432-11	CARBON	18K	5%	1/4W
R5977	1-249-429-11	CARBON	10K	5%	1/4W
R5978	1-247-807-31	CARBON	100	5%	1/4W
R5979	1-249-414-11	CARBON	560	5%	1/4W
R5980	1-247-807-31	CARBON	100	5%	1/4W
R5981	1-249-416-11	CARBON	820	5%	1/4W
R5982	1-249-383-11	CARBON	1.5	5%	1/4W
R5985	1-249-401-11	CARBON	47	5%	1/4W
R5986	1-249-397-11	CARBON	22	5%	1/4W
		<VARIABLE RESISTOR>			
RV700	1-241-656-11	RES, ADJ, METAL FILM 110M			
		<SPARK GAP>			
SG700	1-519-422-11	GAP, SPARK			
SG701	1-519-422-11	GAP, SPARK			
SG702	1-519-422-11	GAP, SPARK			

****

REF. NO.	PART NO.	DESCRIPTION	REMARK
*	A-1241-450-A	F BOARD MOUNTED	
*	A-1241-464-A	F BOARD MOUNTED (KV-XA21M60 Only)	
		**********	
	1-533-223-11	CLIP, FUSE	
	1-803-830-11	VARISTOR (ERZV14D621)	
		(Except KV-XA21M60)	
*	4-374-846-01	COVER, CAPACITOR, CAP TYPE	
		(Except KV-XA21M60)	
		<CAPACITOR>	
C654 ⚠	1-117-703-11	CERAMIC 0.0047UF 99% 250V	
C4602 ⚠	1-104-708-11	MYLAR 0.47UF 20.00% 250V	
		<CONNECTOR>	
CN4601	1-580-843-11	PIN, CONNECTOR (POWER)	
CN4602	1-580-843-11	PIN, CONNECTOR (POWER)	
CN4603	1-695-915-11	TAB (CONTACT)	
		<FUSE>	
F4601 ⚠	1-532-237-00	FUSE, TIME-LAG (BET) 3.15A/250V	
		<RESISTOR>	
R4601 ⚠	1-202-719-00	SOLID 1M 10% 1/2W	
		<TRANSFORMER>	
T4601 ⚠	1-424-682-11	TRANSFORMER, LINE FILTER	
T4602 ⚠	1-424-682-11	TRANSFORMER, LINE FILTER	

****

*	A-1388-297-A	J2 BOARD MOUNTED (KV-XA21M83 Only)	
		**********	
		<CONNECTOR>	
CN3421 *	1-564-519-11	PLUG, CONNECTOR 4P	
		<DIODE>	
D3421	8-719-110-72	RD30ESB2	
D3422	8-719-110-72	RD30ESB2	
D3423	8-719-110-72	RD30ESB2	
D3424	8-719-110-72	RD30ESB2	

J2 **V1**

REF. NO.	PART NO.	DESCRIPTION			REMARK
		<JACK>			
J3421	1-694-719-11	TERMINAL, PUSH (4P)			
**********					
*	A-1347-164-A	V1 BOARD COMPLETE (KV-XA21M61 Only)			
		**********			
		<CAPACITOR>			
C801	1-104-664-11	ELECT	47UF	20.00% 16V	
C805	1-163-038-11	CERAMIC CHIP	0.1UF	25V	
C806	1-163-038-11	CERAMIC CHIP	0.1UF	25V	
C814	1-163-021-91	CERAMIC CHIP	0.01UF	10.00% 50V	
C815	1-163-251-11	CERAMIC CHIP	100PF	5.00% 50V	
C816	1-164-505-11	CERAMIC CHIP	2.2UF	16V	
C817	1-164-004-11	CERAMIC CHIP	0.1UF	10.00% 25V	
C818	1-163-239-11	CERAMIC CHIP	33PF	5.00% 50V	
C820	1-163-239-11	CERAMIC CHIP	33PF	5.00% 50V	
C821	1-163-038-11	CERAMIC CHIP	0.1UF	25V	
C822	1-163-009-11	CERAMIC CHIP	0.001UF	10.00% 50V	
C823	1-126-933-11	ELECT	100UF	20.00% 16V	
C826	1-126-963-11	ELECT	4.7UF	20.00% 50V	
C829	1-163-113-00	CERAMIC CHIP	68PF	5.00% 50V	
C830	1-163-038-11	CERAMIC CHIP	0.1UF	25V	
C831	1-126-933-11	ELECT	100UF	20.00% 16V	
C832	1-126-964-11	ELECT	10UF	20.00% 50V	
C835	1-163-038-11	CERAMIC CHIP	0.1UF	25V	
C837	1-126-933-11	ELECT	100UF	20.00% 16V	
		<CONNECTOR>			
CN801	* 1-774-812-11	CONNECTOR, BOARD TO BOARD 7P			
CN803	* 1-774-812-11	CONNECTOR, BOARD TO BOARD 7P			
		<DIODE>			
D802	8-719-914-44	DAP202K			
D803	8-719-105-46	RD3.3M-B2			
D804	8-719-105-91	RD5.6M-B2			
		<FERRITE BEAD>			
FB801	1-410-397-21	FERRITE	1.1UH		
FB802	1-410-397-21	FERRITE	1.1UH		
FB803	1-410-397-21	FERRITE	1.1UH		
FB804	1-410-682-31	INDUCTOR	470UH		
FB805	1-410-397-21	FERRITE	1.1UH		
		<IC>			
IC801	8-759-476-87	SAA5261			

REF. NO.	PART NO.	DESCRIPTION			REMARK
		<CHIP CONDUCTOR>			
JR800	1-216-295-11	SHORT	0		
JR801	1-216-295-11	SHORT	0		
JR802	1-216-295-11	SHORT	0		
JR804	1-216-295-11	SHORT	0		
JR805	1-216-295-11	SHORT	0		
		<TRANSISTOR>			
Q801	8-729-120-28	2SC1623-L5L6			
Q803	8-729-120-28	2SC1623-L5L6			
Q805	8-729-120-28	2SC1623-L5L6			
Q806	8-729-120-28	2SC1623-L5L6			
Q807	8-729-120-28	2SC1623-L5L6			
Q808	8-729-120-28	2SC1623-L5L6			
Q810	8-729-120-28	2SC1623-L5L6			
Q811	8-729-019-01	2SD2394-EF			
Q817	8-729-900-53	DTC114EK			
		<RESISTOR>			
R800	1-208-806-11	METAL CHIP	10K	0.5% 1/10W	
R801	1-216-295-11	SHORT	0		
R802	1-216-025-11	RES-CHIP	100	5% 1/10W	
R803	1-216-295-11	SHORT	0		
R804	1-216-295-11	SHORT	0		
R805	1-216-295-11	SHORT	0		
R807	1-216-295-11	SHORT	0		
R813	1-216-295-11	SHORT	0		
R820	1-216-073-00	RES-CHIP	10K	5% 1/10W	
R821	1-216-083-00	RES-CHIP	27K	5% 1/10W	
R822	1-216-025-11	RES-CHIP	100	5% 1/10W	
R824	1-216-295-11	SHORT	0		
R825	1-216-295-11	SHORT	0		
R827	1-216-295-11	SHORT	0		
R828	1-216-025-11	RES-CHIP	100	5% 1/10W	
R829	1-216-025-11	RES-CHIP	100	5% 1/10W	
R830	1-216-295-11	SHORT	0		
R831	1-216-295-11	SHORT	0		
R832	1-208-790-11	METAL CHIP	2.2K	0.5% 1/10W	
R835	1-216-295-11	SHORT	0		
R839	1-216-655-11	METAL CHIP	1.5K	0.5% 1/10W	
R841	1-216-025-11	RES-CHIP	100	5% 1/10W	
R842	1-216-065-91	RES-CHIP	4.7K	5% 1/10W	
R843	1-216-065-91	RES-CHIP	4.7K	5% 1/10W	
R844	1-216-057-00	RES-CHIP	2.2K	5% 1/10W	
R845	1-216-049-11	RES-CHIP	1K	5% 1/10W	
R846	1-216-049-11	RES-CHIP	1K	5% 1/10W	
R847	1-216-049-11	RES-CHIP	1K	5% 1/10W	
R848	1-216-049-11	RES-CHIP	1K	5% 1/10W	
R849	1-216-049-11	RES-CHIP	1K	5% 1/10W	
R850	1-216-105-91	RES-CHIP	220K	5% 1/10W	
R851	1-216-057-00	RES-CHIP	2.2K	5% 1/10W	
R853	1-216-067-00	RES-CHIP	5.6K	5% 1/10W	
R857	1-216-077-91	RES-CHIP	15K	5% 1/10W	
R861	1-216-049-11	RES-CHIP	1K	5% 1/10W	

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

V1

REF. NO.	PART NO.	DESCRIPTION			REMARK
R862	1-260-095-11	CARBON	470	5%	1/2W
R863	1-216-049-11	RES-CHIP	1K	5%	1/10W
R864	1-216-041-00	RES-CHIP	470	5%	1/10W
R866	1-215-880-00	METAL OXIDE	10	5%	2W
R871	1-216-037-00	RES-CHIP	330	5%	1/10W
R879	1-216-073-00	RES-CHIP	10K	5%	1/10W
R880	1-216-041-00	RES-CHIP	470	5%	1/10W
R882	1-216-049-11	RES-CHIP	1K	5%	1/10W
R884	1-216-025-11	RES-CHIP	100	5%	1/10W
		<CRYSTAL>			
X801	1-578-774-11	VIBRATOR, CRYSTAL			

****

MISCELLANEOUS
****

	1-501-372-81	ANTENNA, TELESCOPIC (KV-XA21M50(GE)/M80/M83)
	1-417-151-21	MATCHING TRANSFORMER, ANTENNA (KV-XA21M50(GE)/M80/M83)
	1-569-008-21	ADAPTOR, CONVERSION 2P (KV-XA21M80(E)/XA21M83 Only)
	1-529-968-11	SPEAKER (5CM) (KV-XA21M83 Only)
	1-529-125-11	SPEAKER (13X7CM)
	1-416-864-12	COIL, VM
⚠	1-416-946-11	COIL, DEMAGNETIC (Except KV-XA21M50(Malaysia)/M60/M61(Malaysia))
⚠	1-419-479-51	COIL, DEGAUSSING (Except KV-XA21M50(Malaysia)/M60/M61(Malaysia))
	1-452-728-41	COIL, NA ROTATION (RT-154) (Except KV-XA21M60)
	1-452-032-00	MAGNET,DISC
	1-540-005-31	CAP ASSY, HIGH VOLTAGE
	1-500-249-11	BEAD, FERRITE (CASE) (KV-XA21M83 Only)
⚠	1-574-062-11	CORD, POWER (WITH CONNECTOR) 2.5A/250V
⚠	1-575-023-11	CORD, POWER (WITH CONNECTOR) 6A/250V (KV-XA21M60 Only)
	1-900-212-58	LEAD ASSY, FOCUS
	1-900-701-49	LEAD ASSY, G2
⚠	8-451-505-11	DEFLECTION YOKE (Y21RSA-S)
⚠	8-738-812-05	PICTURE TUBE (A51LPT70X) (S/GE/EM)
⚠	8-738-809-05	PICTURE TUBE (A51LPT70X) (ME/E)

****

ACCESSORIES AND PACKING MATERIALS
****

	3-701-910-00	SCREW, SPECIAL (DIA. 3.8X20)
*	4-039-372-01	BAG, PROTECTION
*	4-037-760-01	BAG, PROTECTION (KV-XA21M60 Only)
*	4-077-934-01	INDIVIDUAL CARTON
*	4-081-607-01	INDIVIDUAL CARTON (KV-XA21M60 Only)
*	4-077-935-01	CUSHION (UPPER) ASSY
*	4-081-437-01	CUSHION (UPPER) ASSY (KV-XA21M60 Only)
*	4-077-936-01	CUSHION (LOWER) ASSY
*	4-081-440-01	CUSHION (LOWER) ASSY (KV-XA21M60 Only)
	4-080-934-11	MANUAL INSTRUCTION (KV-XA21M60 Only)
	4-080-391-12	MANUAL INSTRUCTION (KV-XA21M80(ME))
	4-080-391-21	MANUAL INSTRUCTION (KV-XA21M50/M80)
	4-392-003-11	BAND, HOLD (Except KV-XA21M60)
	4-392-003-21	BAND, HOLD (KV-XA21M60 Only)
	4-392-004-11	CLIP (Except KV-XA21M60)
	4-059-705-01	CLIP (KV-XA21M60 Only)

****

REMOTE COMMANDER
****

	1-418-163-12	REMOTE COMMANDER (RM-952)
	9-939-697-01	BATTERY COVER REMOTE COMMANDER

Sony Corporation
Sony Technology Malaysia Sdn. Bhd.
Visual Entertainment General Area

9-872-232-01

English
2000LS70168-1
Printed in Malaysia
© 2000.12